

NuMicro[®] Family**1T 8051-based Microcontroller**

NuMaker-CM1003CF2

User Manual

Evaluation Board for NuMicro[®] 1T 8051 Series

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller and microprocessor based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com

Table of Contents

1 OVERVIEW	6
2 FEATURES	7
3 HARDWARE CONFIGURATION	8
3.1 Front View.....	8
3.2 Rear View	9
3.3 Extension Connectors.....	10
3.3.1 Pin Assignment for Extension Connectors	10
3.3.2 Arduino UNO Compatible Extension Connectors	12
3.4 Power Supply Configuration	14
3.4.1 VIN Power Source	14
3.4.2 5 V Power Sources	14
3.4.3 3.3 V Power Sources	15
3.4.4 1.8 V Power Sources	15
3.4.5 Power Connectors	15
3.4.6 USB Connectors	16
3.4.7 Power Switches	16
3.4.8 Power Supply Models	16
3.5 External Reference Voltage Connector.....	20
3.6 Ammeter Connector	21
3.7 Push Buttons	22
3.8 LEDs.....	23
3.9 Nu-Link2-Me.....	24
3.9.1 VCOM Switches.....	24
3.9.2 Status LEDs	24
4 QUICK START	25
4.1 Toolchains Supporting	25
4.2 Nuvoton Nu-Link Driver Installation	26
4.3 BSP Firmware Download	28
4.4 Hardware Setup.....	28
4.5 Find the Example Project	30
4.6 Execute the Project under Toolchains	30
4.6.1 Keil MDK.....	30
4.6.2 IAR EWARM.....	34
5 NUMAKER-CM1003CF2 SCHEMATICS	36
5.1 Nu-Link2-Me.....	36

5.2 NuMaker-CM1003CF2 Schematics..... 37

5.3 Extension Connectors..... 38

5.4 PCB Placement 39

6 REVISION HISTORY 40

List of Figures

Figure 1-1 NuMaker-CM1003CF2 Evaluation Board	6
Figure 3-1 Front View of NuMaker-CM1003CF2	8
Figure 3-2 Rear View of NuMaker-CM1003CF2.....	9
Figure 3-3 CM1003CF2 Extension Connectors	10
Figure 3-4 Arduino UNO Compatible Extension Connectors.....	12
Figure 3-5 External Power Supply Sources on Nu-Link2-Me	16
Figure 3-6 External Power Supply Sources on CM1003CF2 Target Board	17
Figure 3-7 Detach the Nu-Link2-Me from NuMaker-CM1003CF2	18
Figure 3-8 Wiring between Ammeter Connector and Ammeter	21
Figure 3-9 Project Path of PowerDown_MinCurrent.....	21
Figure 4-1 Nu-Link USB Driver Installation Setup.....	26
Figure 4-2 Nu-Link USB Driver Installation	27
Figure 4-3 Open VCOM Function	28
Figure 4-4 ICE USB Connector.....	28
Figure 4-5 Device Manger.....	29
Figure 4-6 PuTTY Session Setting.....	29
Figure 4-7 Template Project Folder Path.....	30
Figure 4-8 Warning Message of “Device not found”	30
Figure 4-9 Project File Migrate to Version 5 Format.....	31
Figure 4-10 Debugger Setting in Options Window.....	31
Figure 4-11 Programming Setting in Options Window.....	32
Figure 4-12 Compile and Download the Project	32
Figure 4-13 Keil MDK Debug Mode	33
Figure 4-14 Debug Message on Serial Port Terminal Windows.....	33
Figure 4-15 IAR EWARM Window	34
Figure 4-16 Compile and Download the Project	34
Figure 4-17 IAR EWARM Debug Mode	35
Figure 4-18 Debug Message on Serial Port Terminal Windows.....	35
Figure 5-1 Nu-Link2-Me Circuit.....	36
Figure 5-2 CM1003CF2 Target Board Circuit	37
Figure 5-3 Extension Connectors Circuit	38
Figure 5-4 Front Placement	39
Figure 5-5 Rear Placement	39

List of Tables

Table 3-1 Extension Connectors.....	10
Table 3-2 CM1003CF2 Full-pin Extension Connectors and GPIO Function List.....	11
Table 3-3 Arduino UNO Extension Connectors and CM1003CF2AE Mapping GPIO List	13
Table 3-4 Vin Power Source	14
Table 3-5 5 V Power Sources	14
Table 3-6 3.3 V Power Sources	15
Table 3-7 1.8 V Power Sources	15
Table 3-8 Power Connectors	15
Table 3-9 USB Connectors	16
Table 3-10 Power Switches	16
Table 3-11 Supply External Power through Nu-Link2-Me	17
Table 3-12 Supply External Power for CM1003CF2 Target Board.....	19
Table 3-13 External Reference Voltage Connector	20
Table 3-14 Ammeter Connector.....	21
Table 3-15 Push Buttons.....	22
Table 3-16 LEDs	23
Table 3-17 VCOM Function of Nu-Link2-Me.....	24
Table 3-18 Operation Status LED Patterns	24

1 OVERVIEW

The NuMaker-CM1003CF2 is an evaluation board for Nuvoton NuMicro CM1003CF2AE microcontrollers. The NuMaker-CM1003CF2 consists of two parts: an CM1003CF2 target board and an on-board Nu-Link2-Me debugger and programmer. The NuMaker-CM1003CF2 is designed for project evaluation, prototype development and validation with power consumption monitoring function. The NuMaker-CM1003CF2 board is suitable for a wide range of applications such as home appliances, LED lighting controls, motor controls or Industrial automation.

The CM1003CF2AE target board is based on NuMicro CM1003CF2AE. For the development flexibility, the CM1003CF2 target board provides the extension connectors, the Arduino UNO compatible headers and the capability of adopting multiple power supplies. Furthermore, the Nuvoton-designed ammeter connector can measure the power consumption instantly, which is essential for the prototype evaluation.

In addition, there is an attached on-board debugger and programmer “Nu-Link2-Me”. The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming via SWD interface. The Nu-Link2-Me supports virtual COM (VCOM) port for printing debug messages on PC. Besides, the programming status could be shown on the built-in LEDs. Lastly, the Nu-Link2-Me could be detached from the evaluation board and become a stand-alone mass production programmer.

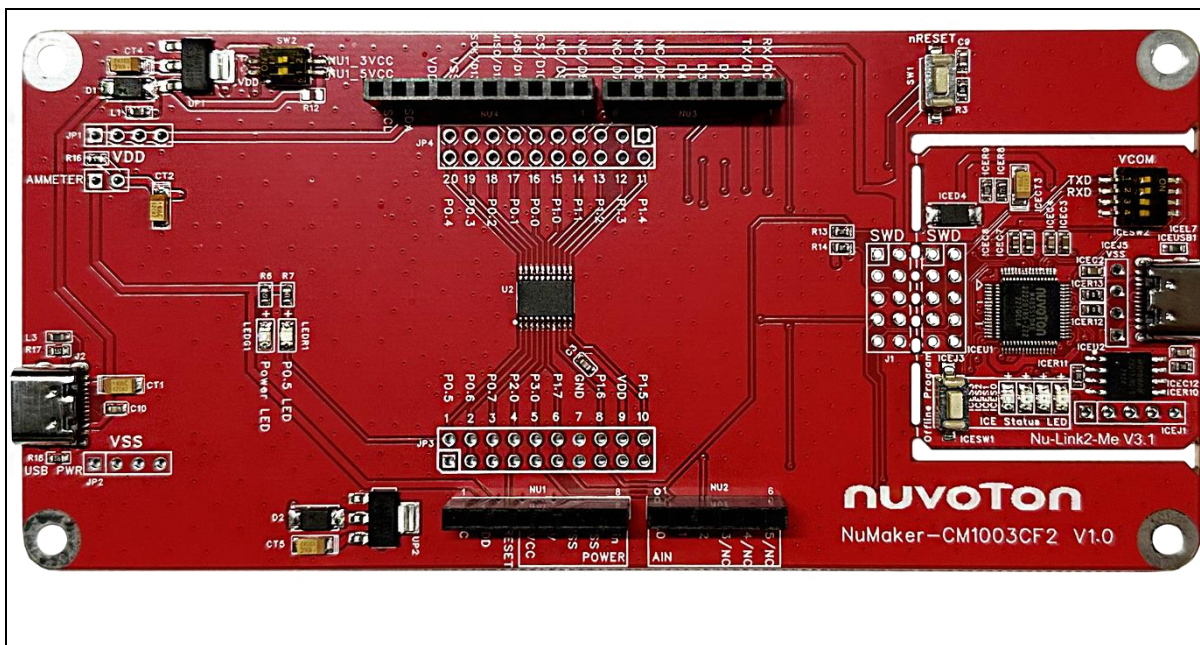


Figure 1-1 NuMaker-CM1003CF2 Evaluation Board

2 FEATURES

- NuMicro CM1003CF2AE used as main microcontroller
- CM1003CF2AE full pins extension connectors
- Arduino UNO compatible extension connectors
- Ammeter connector for measuring the microcontroller's power consumption
- Flexible board power supply:
 - External V_{DD} power connector
 - Arduino UNO compatible extension connector V_{in}
 - USB Power connector on CM1003CF2 target board
 - ICE USB connector on Nu-Link2-Me
- On-board Nu-Link2-Me debugger and programmer:
 - Debug through OCD interface
 - Online/offline programming
 - Virtual COM port function

3 HARDWARE CONFIGURATION

3.1 Front View

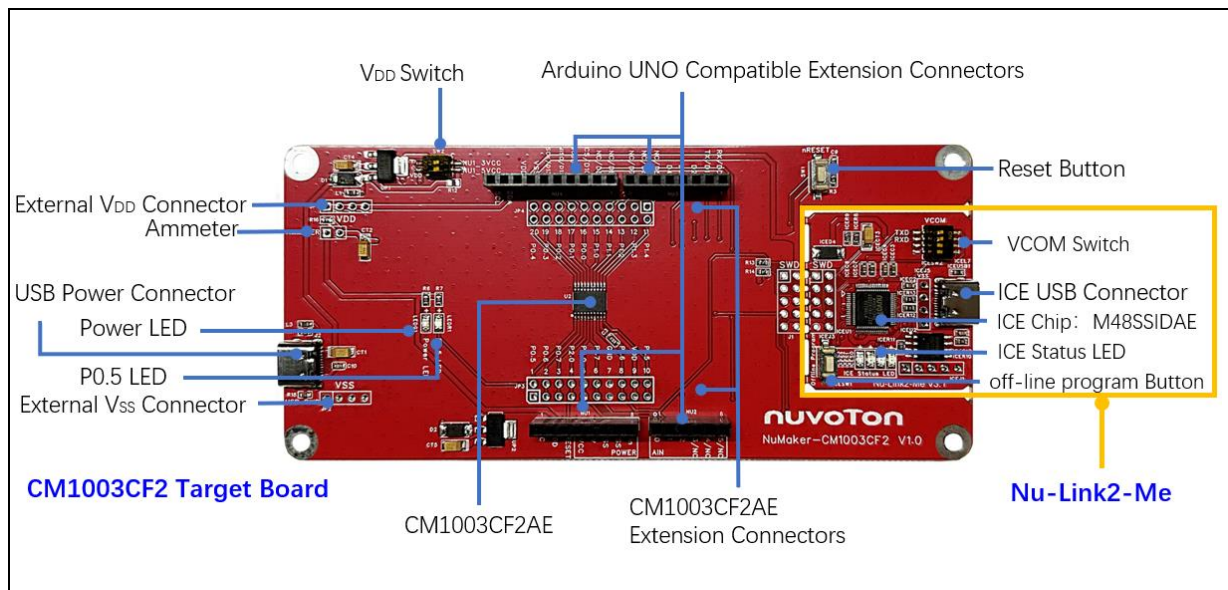


Figure 3-1 Front View of NuMaker-CM1003CF2

Figure 3-1 shows the main components and connectors from the front side of NuMaker-CM1003CF2. The following lists components and connectors from the front view:

- NuMicro CM1003CF2AE used as main microcontroller
- CM1003CF2AE extension connectors
- Arduino UNO compatible extension connectors
- Ammeter connector for measuring the microcontroller's power consumption
- Flexible board power supply:
 - External V_{DD} power connector
 - Arduino UNO compatible extension connector V_{in}
 - USB Power only connector on CM1003CF2AE target board
 - ICE USB connector on Nu-Link2-Me
- On-board Nu-Link2-Me debugger and programmer:
 - Debug through SWD interface
 - Online/offline programming
 - Virtual COM port function

3.2 Rear View

Figure 3-2 shows the main components and connectors from the rear side of NuMaker-CM1003CF2.

The following lists components and connectors from the rear view:

- Nu-Link2-Me
 - MCUVCC Power Switch (ICEJPR1)
 - ICEVCC Power Switch (ICEJPR2)

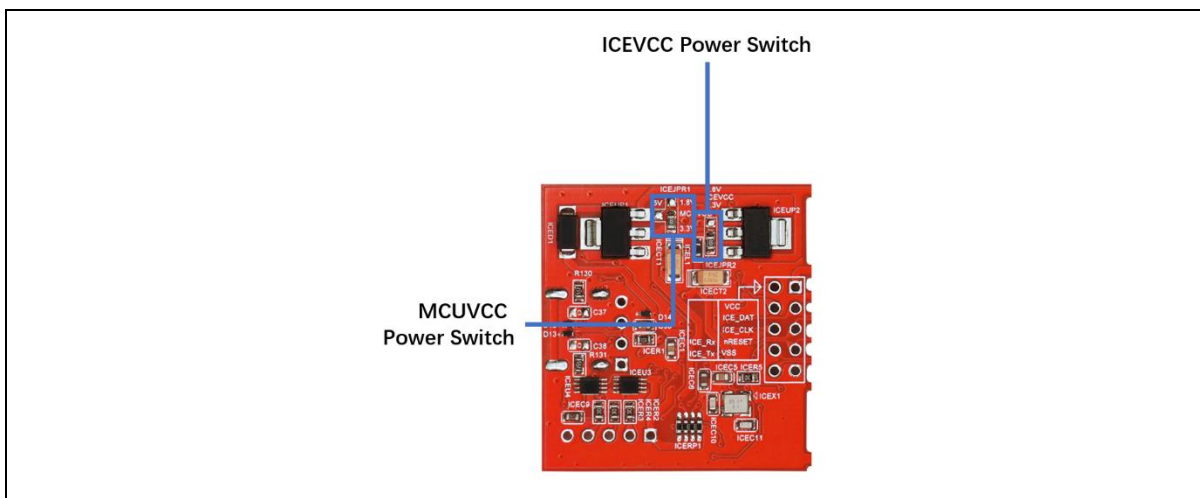


Figure 3-2 Rear View of NuMaker-CM1003CF2

3.3 Extension Connectors

Table 3-1 presents the extension connectors.

Connector	Description
JP3 and JP4	Full pins extension connectors on the NuMaker-CM1003CF2.
NU1, NU2, NU3 and NU4	Arduino UNO compatible pins on the NuMaker-CM1003CF2.

Table 3-1 Extension Connectors

3.3.1 Pin Assignment for Extension Connectors

The NuMaker-CM1003CF2 provides the CM1003CF2AE onboard and extension connectors (JP3 and JP4). Figure 3-3 shows the CM1003CF2 extension connectors.

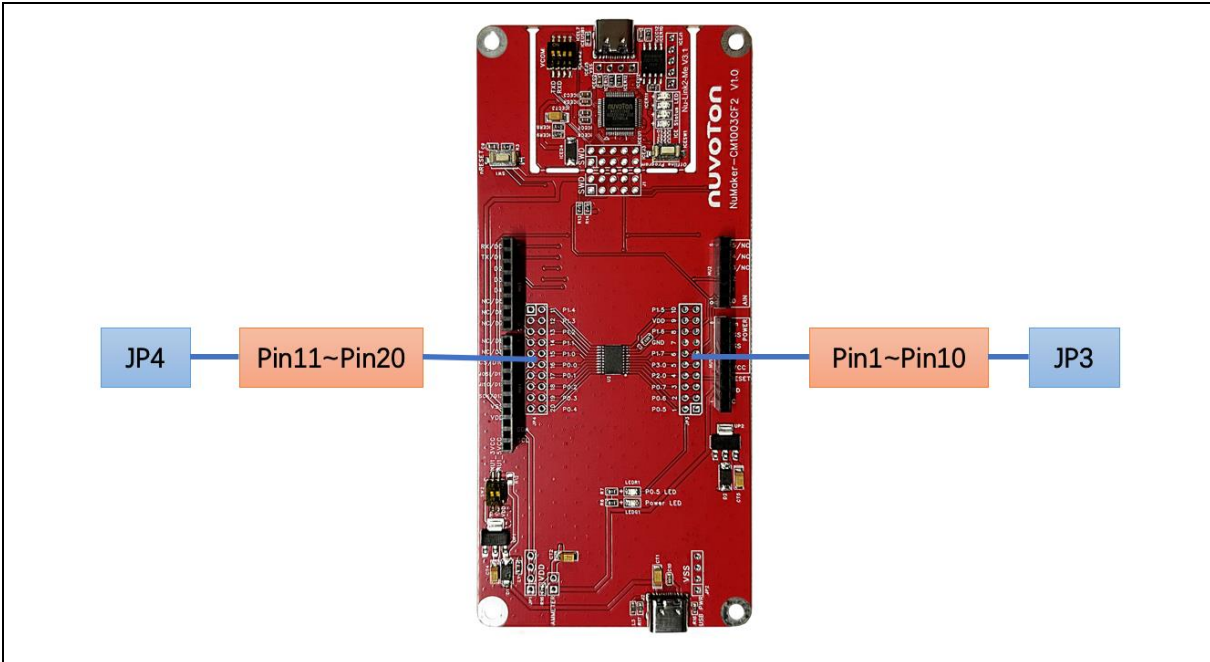


Figure 3-3 CM1003CF2 Extension Connectors

Header		CM1003CF2AE	
		Pin No.	Function
JP3	JP3.1	1	P0.5/PWM0_CH2/IC6/T0/ADC_CH4
	JP3.2	2	P0.6/UART0_TXD/ADC_CH3/
	JP3.3	3	P0.7/UART0_RXD/ADC_CH2/

Header		CM1003CF2AE	
		Pin No.	Function
JP3	JP3.4	4	P2.0/nRESET
	JP3.5	5	P3.0ADC_CH1/OSCIN/PWM0_CH3/SPI0_MOSI/IC3/T1
	JP3.6	6	P1.7/ADC_CH0/
	JP3.7	7	VSS
	JP3.8	8	P1.6/ICE_DAT/UART1_TXD/[I2C0_SDA]
	JP3.9	9	VDD
	JP3.10	10	P1.5/PWM0_CH5/IC7/SPI0_SS
JP4	JP5.1	11	P1.4/PWM0_CH1/I2C0_SDA/PWM0_BRAKE
	JP5.2	12	P1.3/I2C0_SCL/[STADC]
	JP5.3	13	P1.2/PWM0_CH0/IC0/
	JP5.4	14	P1.1/PWM0_CH1/IC1/ADC_CH7/CLKO
	JP5.5	15	P1.0/PWM0_CH2/IC2/SPI0_CLK
	JP5.6	16	P0.0/PWM0_CH3/SPI0_MOSI/IC3/T1
	JP5.7	17	P0.1/PWM0_CH4/IC4/SPI0_MISO
	JP5.8	18	P0.2/ICE_CLK/UART1_RXD/[I2C0_SCL]
	JP5.9	19	P0.3/ADC_CH6/PWM0_CH5/IC5
	JP5.10	20	P0.4/PWM0_CH3/IC3/ADC_CH5/STADC

Table 3-2 CM1003CF2 Full-pin Extension Connectors and GPIO Function List

Figure 3-4 shows the Arduino UNO compatible extension connectors.



Figure 3-4 Arduino UNO Compatible Extension Connectors

Header		NuMaker-CM1003CF2		Header		NuMaker-CM1003CF2	
		Compatible to Arduino UNO	GPIO Pin of CM1003CF2			Compatible to Arduino UNO	GPIO Pin of CM1003CF2
NU3	NU3.1	RX	P0.7	NU2	NU2.6	SCL	NC
	NU3.2	TX	P0.6		NU2.5	SDA	NC
	NU3.3	D2	P0.3		NU2.4	A3	NC
	NU3.4	D3	P0.4		NU2.3	A2	P1.1
	NU3.5	D4	P1.2		NU2.2	A1	P1.7
	NU3.6	D5	NC		NU2.1	A0	P3.0
	NU3.7	D6	NC	NU1	NU1.8	VIN	-
	NU3.8	D7	NC		NU1.7	VSS	
NU4	NU4.1	D8	NC		NU1.6	VSS	
	NU4.2	D9	NC		NU1.5	5V	
	NU4.3	SS/D10	P1.5		NU1.4	3V	nRESET
	NU4.4	MOSI	P0.0		NU1.3	RST	
	NU4.5	MISO	P0.1		NU1.2	IOREF	VDD
	NU4.6	SCK	P1.0		NU1.1	NC	-
	NU4.7	VSS	VSS				
	NU4.8	VREF	AVDD				
	NU4.9	SDA	P1.4				
	NU4.10	SCL	P1.3				

Table 3-3 Arduino UNO Extension Connectors and CM1003CF2AE Mapping GPIO List

3.4 Power Supply Configuration

The NuMaker-CM1003CF2 is able to adopt multiple power supplies. External power sources include NU1 Vin (7 V to 12 V), V_{DD} (depending on the target chip operating voltage), and PC through USB connector. By using switches and voltage regulator, multiple power domains can be created on the NuMaker-CM1003CF2.

3.4.1 VIN Power Source

Table 3-4 presents the Vin power source.

Connector	Net Name in Schematic	Description
NU1 pin8	NU1_VIN	Board external power source, with voltage range from 7 V to 12 V. The voltage regulator UP2 converts the NU1 pin8 input voltage to 5 V and supplies it to NU1_5VCC.

Table 3-4 Vin Power Source

3.4.2 5 V Power Sources

Table 3-5 presents the 5 V power sources.

Connector	Net Name in Schematic	Description
ICEJ3	USB_HS_VBUS	ICE USB connector supplies 5 V power from PC to CM1003CF2 target board and Nu-Link2-Me.
J2	USB_VBUS	USB connector on NuMaker-CM1003CF2 supplies 5 V power from PC to CM1003CF2 target board and Nu-Link2-Me.
NU1 pin5	NU1_5VCC	ICEJ3, J2 or NU1 pin8 supplies 5 V power to NU1 pin5. NU1 pin5 supplies 5 V power to target chip or Arduino adapter board.

Table 3-5 5 V Power Sources

3.4.3 3.3 V Power Sources

Table 3-6 presents the 3.3 V power sources.

Voltage Regulator	5 V Source	Description
ICEUP1	USB_HS_VBUS	ICEUP1 converts USB_HS_VBUS to 3.3 V and supplies 3.3 V to CM1003CF2 target board or ICE chip.
UP1	USB_VBUS	UP1 converts USB_VBUS to 3.3 V and supplies 3.3 V to CM1003CF2 target board. Note: SW2.2 (NU1 3VCC) should be switched to ON.
UP1	NU1_5VCC	UP1 converts NU1_5VCC to 3.3 V and supplies 3.3 V to CM1003CF2 target board. Note: SW2.2 (NU1 3VCC) should be switched to ON.

Table 3-6 3.3 V Power Sources

3.4.4 1.8 V Power Sources

Table 3-7 presents the 1.8 V power source.

Voltage Regular	5V Source	Description
ICEUP2	USB_HS_VBUS	ICEUP2 converts USB_HS_VBUS to 1.8 V and supplies 1.8 V to CM1003CF2 target board or ICE chip.

Table 3-7 1.8 V Power Sources

3.4.5 Power Connectors

Table 3-8 presents the power connectors.

Connector	Description
JP1	V _{DD} connector on the NuMaker-CM1003CF2.
JP2	V _{SS} connector on the NuMaker-CM1003CF2.

Table 3-8 Power Connectors

3.4.6 USB Connectors

Table 3-9 presents the USB connectors.

Connector	Description
ICEJ3	ICE USB connector on Nu-Link2-Me for power supply, debugging and programming from PC.
J2	USB FS connector on NuMaker-CM1003CF2 for power supply.

Table 3-9 USB Connectors

3.4.7 Power Switches

Table 3-10 presents the power switches.

Switch	Description
ICEJPR1	Configures the target chip operating voltage at 1.8 V / 3.3 V / 5 V.
ICEJPR2	Configures the ICE chip operating voltage at 1.8 V / 3.3 V.
SW2	Configures the target chip operating voltage at 3.3 V / 5 V.

Table 3-10 Power Switches

3.4.8 Power Supply Models

3.4.8.1 External Power Supply through Nu-Link2-Me to Target Chip

The external power supply source on Nu-Link2-Me is shown in Figure 3-5.



Figure 3-5 External Power Supply Sources on Nu-Link2-Me

To use ICEJ3 as external power supply source with Nu-Link2-Me, please follow the steps below:

1. Solder the resistor on ICEJPR1 (MCUVCC) depending on the target chip operating voltage.
2. Solder the resistor on ICEJPR2 (ICEVCC) depending on the ICE chip operating voltage.
3. Switch the SW2 to OFF.
4. Connect the external power supply to ICEJ3.

Table 3-11 presents all power models when supplying external power through Nu-Link2-Me. The Nu-Link2-Me external power sources are highlighted in yellow.

Model	Target Chip Voltage	ICEJ3	ICEJPR1 (MCUVCC) Selection ^[1]	ICEJPR2 (ICEVCC) Selection ^[2]	ICE Chip Voltage	SW2 Selection	J2	Vin	JP1
1	1.8 V	Connect to PC	1.8 V	1.8 V	1.8 V	Off	-	-	1.8 V output
2	3.3 V	Connect to PC	3.3 V (default)	3.3 V (default)	3.3 V	Off	-	-	3.3 V output
3	5 V	Connect to PC	5 V	3.3 V (default)	3.3 V	Off	-	-	5 V output

Note:

1. 0 Ω should be soldered between ICEJPR1's MCVCC and 1.8 V / 3.3 V / 5 V.
2. 0 Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V.
3. -: Unused.

Table 3-11 Supply External Power through Nu-Link2-Me

3.4.8.2 External Power Supply through CM1003CF2 Target Board to Target Chip

The external power supply sources on CM1003CF2 target board are shown in Figure 3-6.

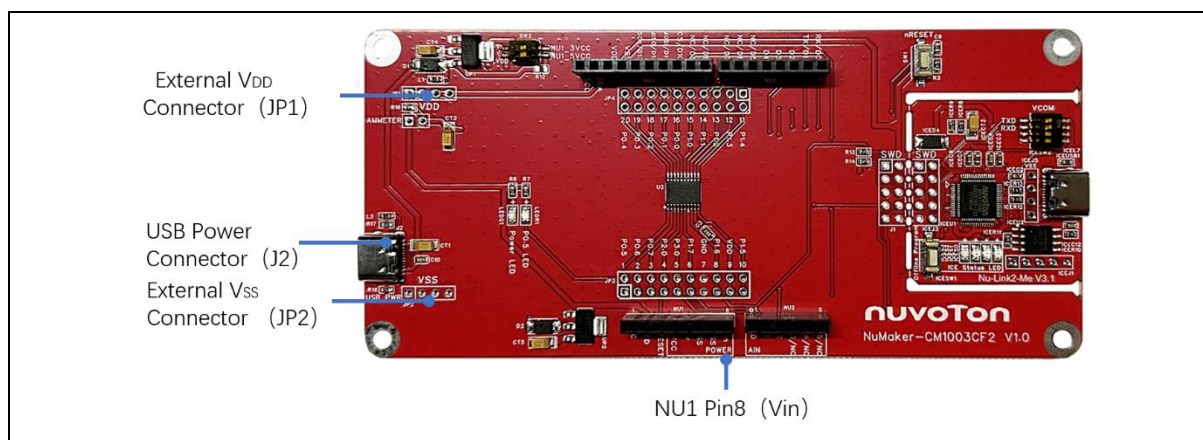


Figure 3-6 External Power Supply Sources on CM1003CF2 Target Board

To use Vin or J2 as external power supply source, please follow the steps below:

1. Switch the SW2 depending on the target chip operating voltage.
2. Remove the resistor on ICEJPR1 (MCUVCC).
3. Solder the resistor on ICEJPR2 (ICEVCC) depending on the ICE chip operating voltage.
4. Connect the external power supply to Vin or J2.

To use JP1 as external power supply source, please follow the steps below:

1. Switch the SW2 to OFF.
2. Remove the resistor on ICEJPR1 (MCUVCC).
3. Solder the resistor on ICEJPR2 (ICEVCC) depending on the ICE chip operating voltage.
4. Connect ICEJ3 to PC.
5. Connect the external power supply to JP1.

To use Vin or J2 as external power supply source with Nu-Link2-Me detached from NuMaker-CM1003CF2, please follow the steps below:

1. Switch the SW2 depending on the target chip operating voltage.
2. Detach the Nu-Link2-Me from NuMaker-CM1003CF2.
3. Connect the external power supply to Vin or J2.

To use JP1 as external power supply source with Nu-Link2-Me detached from NuMaker-CM1003CF2, please follow the steps below:

1. Switch the SW2 to OFF.
2. Detach the Nu-Link2-Me from NuMaker-CM1003CF2.
3. Connect the external power supply to JP1.

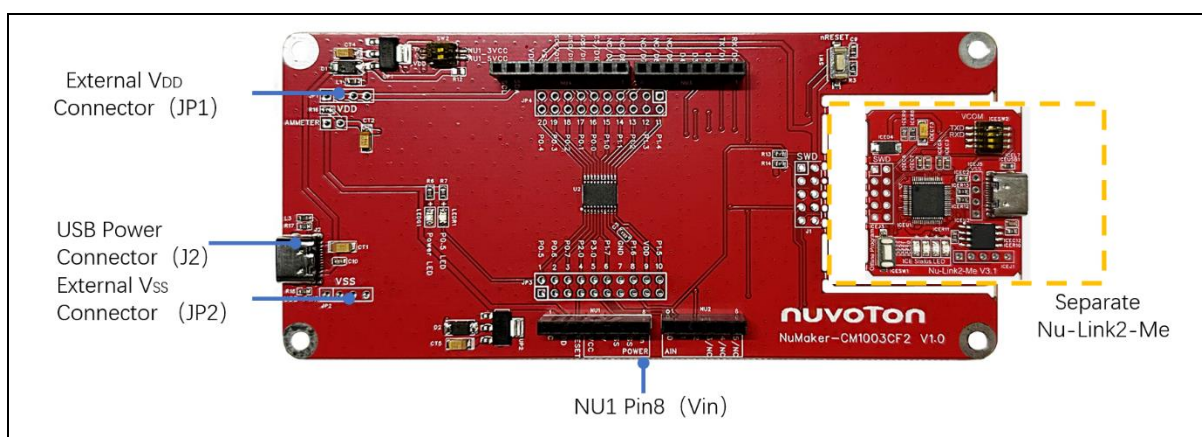


Figure 3-7 Detach the Nu-Link2-Me from NuMaker-CM1003CF2

Table 3-12 presents all power models when supplies external power through CM1003CF2 target board. The CM1003CF2 target board external power sources are highlighted in yellow.

Model	Target Chip Voltage	Vin ^[1]	J2 ^[1]	ICEJ3	SW2 Selection	JP1 ^[2]	ICEJPR1 (MCUVCC) Selection ^[3]	ICEJPR2 (ICEVCC) Selection ^[4]	ICE Chip Voltage ^[5]
4	3.3 V	7 V ~ 12 V Input	-	-	NU1 3VCC	3.3 V output	Remove resistor	3.3 V	3.3 V
5	3.3 V	-	Connect to PC	-	NU1 3VCC	3.3 V output	Remove resistor	3.3 V	3.3 V
6	5 V	7 V ~ 12 V Input	-	-	NU1 5VCC	5 V output	Remove resistor	3.3 V	3.3 V
7	5 V	-	Connect to PC	-	NU1 5VCC	5 V output	Remove resistor	3.3 V	3.3 V
8	2.5 V ~ 5.5 V	-	-	Connect to PC	OFF	DC Input 2.5 V ~ 5.5 V	Remove resistor	1.8 V / 3.3 V	1.8 V / 3.3 V
9	2.5 V ~ 5.5 V	-	-	Nu-Link2-Me removed	OFF	DC Input 2.5 V ~ 5.5 V	-	-	-

Note:

1. The Vin input voltage will be converted by voltage regulator UP2 to 5 V. Supplying external power to Vin or J2 can provide 5 V to NU1 pin5 (5V) and 3.3 V to NU1 pin4 (3VCC).
2. JP1 external power input only provides voltage to target chip.
3. 0 Ω should be removed from ICEJPR1's MCVCC and 1.8 V / 3.3 V / 5 V.
4. 0 Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V.
5. The ICE chip voltage should be close to the target chip voltage.
6. -: Unused

Table 3-12 Supply External Power for CM1003CF2 Target Board

3.5 External Reference Voltage Connector

Table 3-13 External Reference Voltage Connector presents the external reference voltage connector.

Connector	Description
VREF1	Connector for user to connect to the external reference voltage pin of the target chip. User needs to remove the L5 ferrite bead.

Table 3-13 External Reference Voltage Connector

3.6 Ammeter Connector

User can refer to the sample code in CM1003 series BSP - SYS_PowerDown_MinCurrent and Figure 3-8 to measure the minimum current in Power-down mode. Figure 3-9 shows the path of the sample code, which has relative settings of entering Power-down mode.

Table 3-14 presents the ammeter connector.

Connector	Description
AMMETER	Connector for user to measure the target chip power consumption easily. User needs to remove the R16 resistor.

Table 3-14 Ammeter Connector

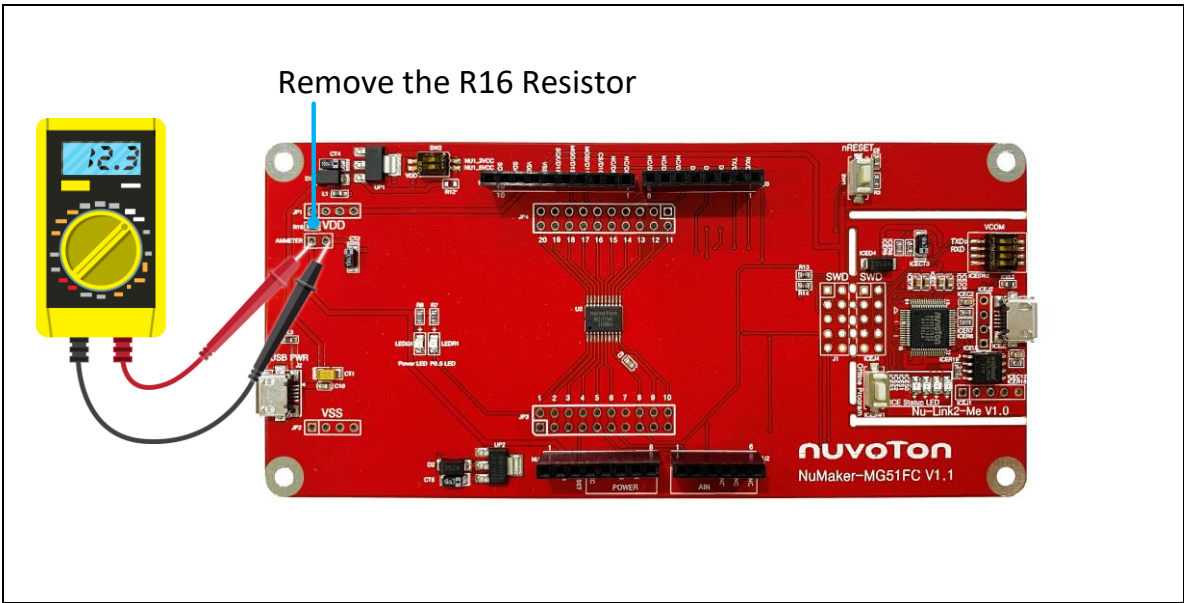


Figure 3-8 Wiring between Ammeter Connector and Ammeter

CM1003CF2_BSP_Keil_C51

SampleCode

PowerManagment

PowerDown_MinCurrent

Figure 3-9 Project Path of PowerDown_MinCurrent

3.7 Push Buttons

Table 3-15 presents the push buttons.

Component	Description
ICESW1	Offline program button to start offline ICP programming the target chip.
SW1	Reset button to reset the target chip.

Table 3-15 Push Buttons

3.8 LEDs

Table 3-16 presents the LEDs.

Component	Description
Power LED	The power LED indicates that the NuMaker-CM1003CF2 is powered.
P0.5 LED	The LED is connected to the target chip P0.5.
ICES0, ICES1, ICES2 and ICES3	Nu-Link2-Me status LED.

Table 3-16 LEDs

3.9 Nu-Link2-Me

The Nu-Link2-Me is an attached on-board debugger and programmer. The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming through SWD interface. The Nu-Link2-Me also supports virtual COM port (VCOM) for printing debug messages on PC. Besides, the programming status could be shown on the built-in LEDs. Lastly, the Nu-Link2-Me could be detached from the evaluation board and become a stand-alone mass production programmer. For more information about Nu-Link2-Me, please refer to *Nu-Link2-Pro Debugger and Programmer User Manual*.

3.9.1 VCOM Switches

Table 3-17 presents how to set the VCOM function by ICESW2.

ICESW2		
Pin	Function	Description
1	TXD	On: Connect target chip Pin2(UART0_TXD) to Nu-Link2-Me. Off: Disconnect target chip Pin2 (UART0_TXD) to Nu-Link2-Me.
2	RXD	On: Connect target chip Pin3 (UART0_RXD) to Nu-Link2-Me. Off: Disconnect target chip Pin3(UART0_RXD) to Nu-Link2-Me.
Note: Pin 3 and 4 is unused.		

Table 3-17 VCOM Function of Nu-Link2-Me

3.9.2 Status LEDs

Table 3-18 presents the status LEDs patterns for different operation on Nu-Link2-Me.

Operation Status	Status LED			
	ICES0	ICES1	ICES2	ICES3
Boot	Flash x 3	Flash x 3	Flash x 3	Flash x 3
Idle	On	-	-	-
One Nu-Link2-Me is selected to connect	Flash x 3	Flash x 3	Flash x 3	On
ICE online (Not connected to a target chip)	On	-	Flash x 3	Flash x 3
ICE online (Connected to a target chip)	On	-	-	On
ICE online (Failed to connect to a target chip)	On	Any	Flash	On
During offline programming	-	On	-	Flash
Offline programming completed	On	-	-	-
Offline programming completed (Auto mode)	On	On	-	-
Offline programming failed	On	Flash	-	-
Note: "Online" means Nu-Link2-Me is connected to ICP Programming Tool, IDE or NuTool.				

Table 3-18 Operation Status LED Patterns

4 QUICK START

4.1 Toolchains Supporting

Install the preferred toolchain. Please make sure at least one of the toolchains has been installed.

- [KEIL PK51 Professional Developer's Kit](#)
- [IAR EMBEDDED WORKBENCH FOR 8051](#)
- [NuEclipse Windows \(For NuMicro 8051\)](#)
- [NuEclipse Linux \(For NuMicro 8051\)](#)

4.2 Nuvoton Nu-Link Driver Installation

Download and install the latest Nuvoton Nu-Link Driver.

- Download and install [Nu-Link Keil Driver](#) when using Keil MDK.
- Download and install [Nu-Link IAR Driver](#) when using IAR EWARM.

Please install the Nu-Link USB Driver as well at the end of the installation. The installation is presented in Figure 4-1 and Figure 4-2.

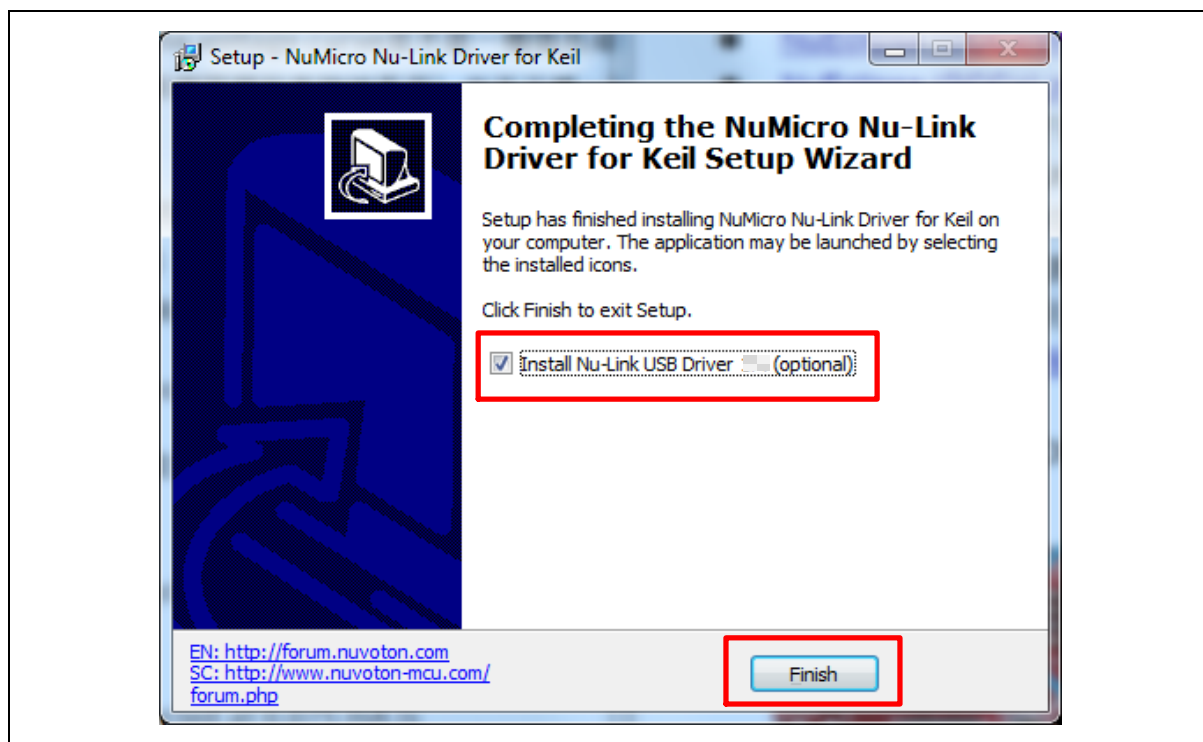


Figure 4-1 Nu-Link USB Driver Installation Setup

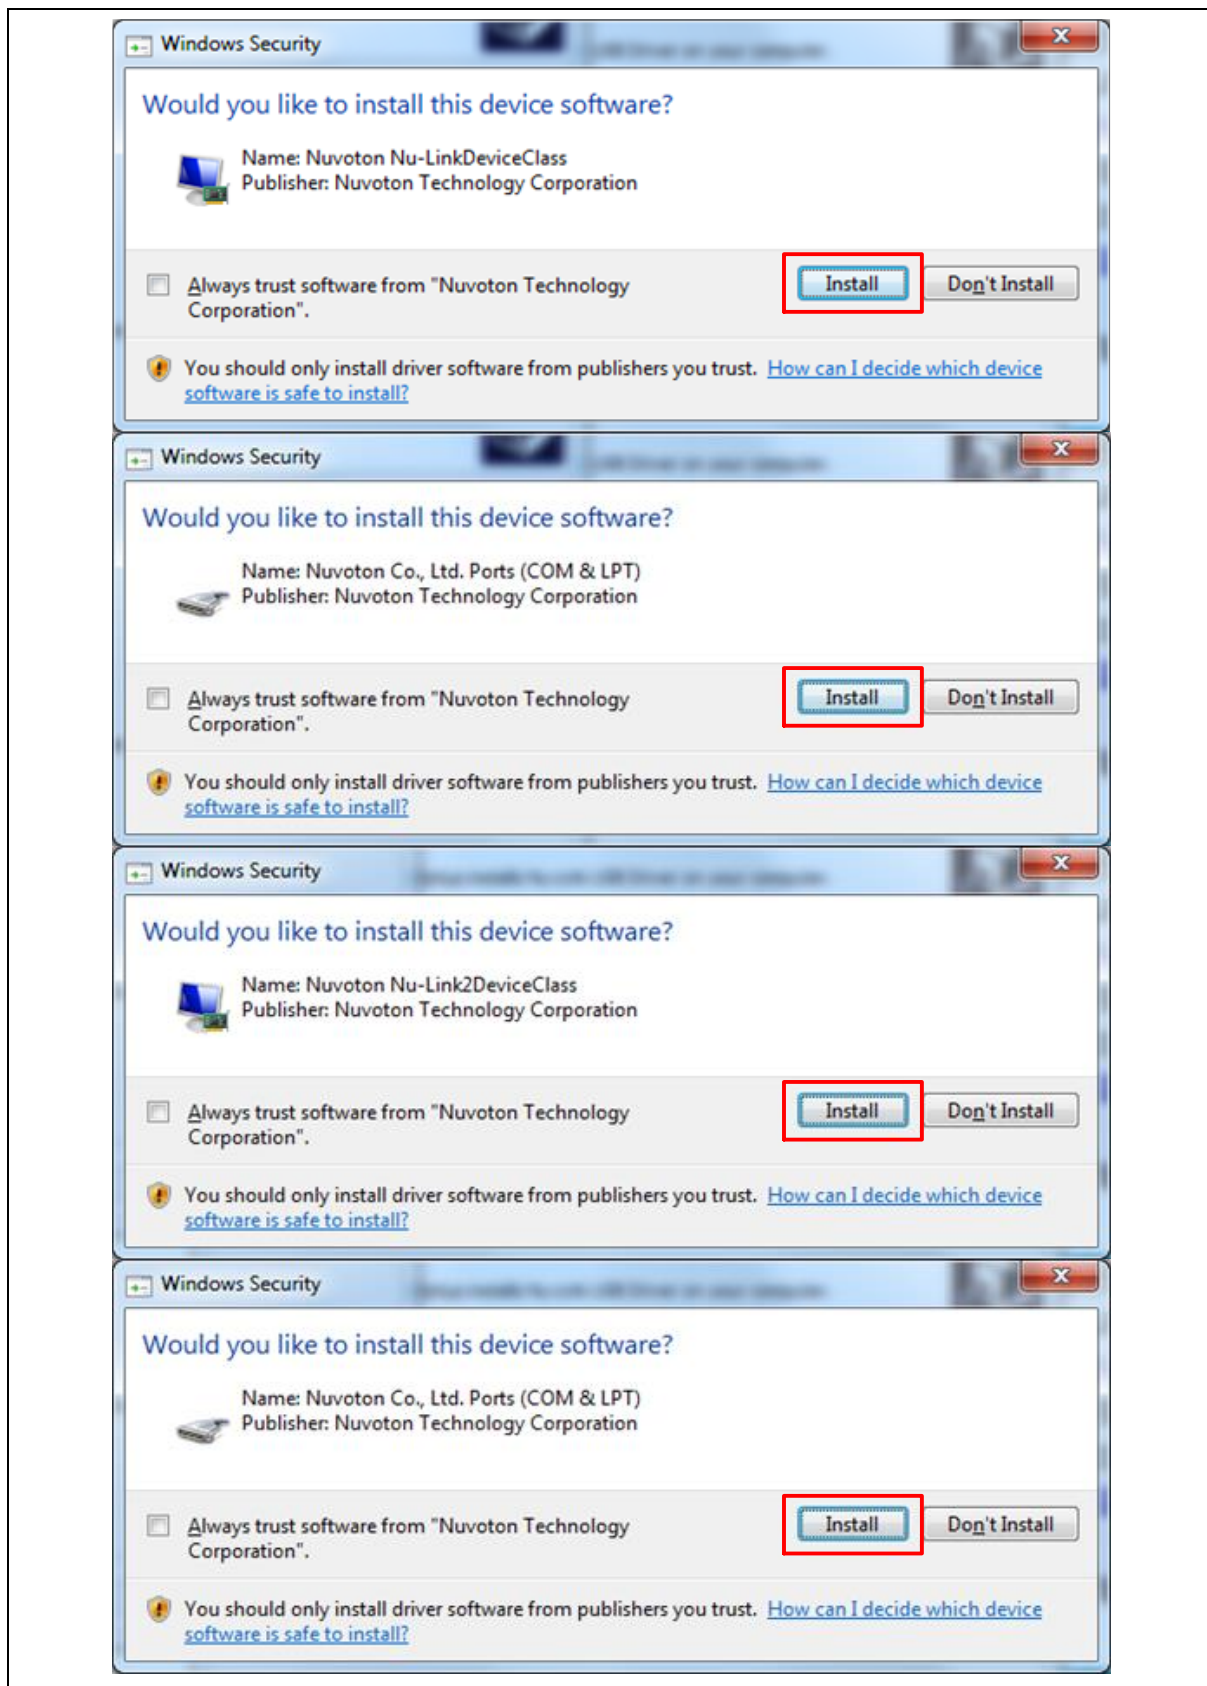


Figure 4-2 Nu-Link USB Driver Installation

Download and unzip the [Board Support Package \(BSP\)](#).

1. Open the virtual COM (VCOM) function by changing Nu-Link2-Me VCOM Switch No. 1 and 2 to ON.



Figure 4-3 Open VCOM Function

2. Connect the ICE USB connector shown in Figure 4-4 to the PC USB port through a USB cable.

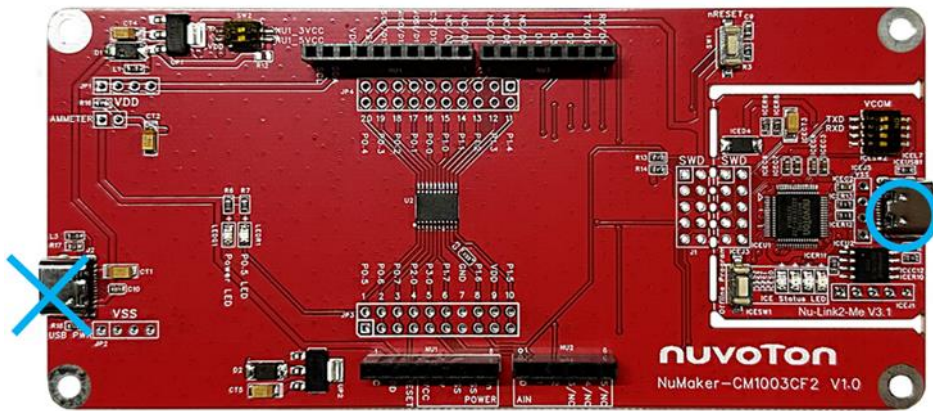


Figure 4-4 ICE USB Connector

- Find the “Nuvoton Virtual COM Port” on the Device Manger as Figure 4-5.

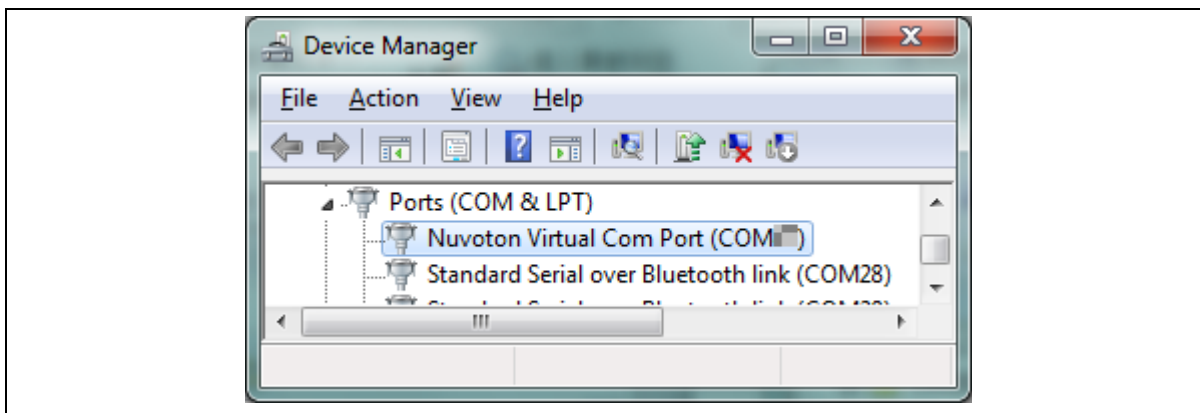


Figure 4-5 Device Manger

- Open a serial port terminal, PuTTY for example, to print out debug message. Set the speed to 115200. Figure 4-6 presents the PuTTY session setting.

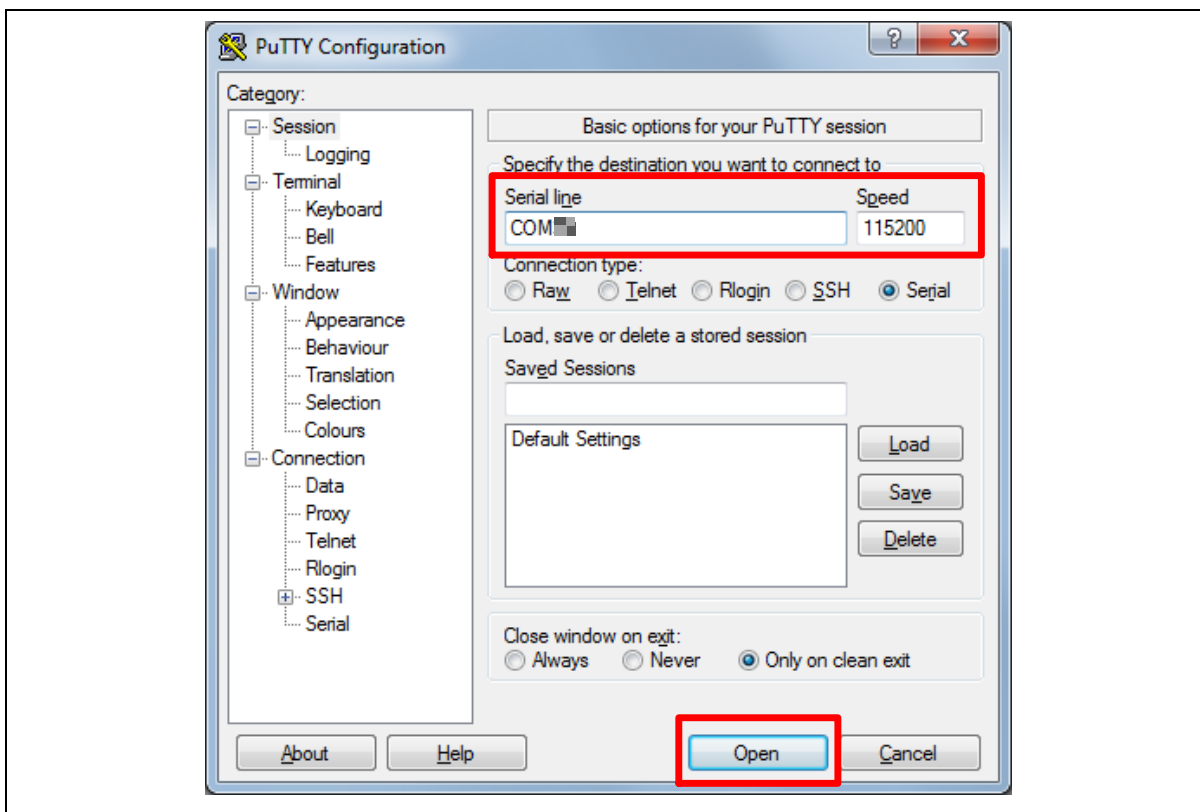


Figure 4-6 PuTTY Session Setting

4.5 Find the Example Project

Use the “Template” project as an example. The project can be found under the BSP folder as shown in Figure 4-7.

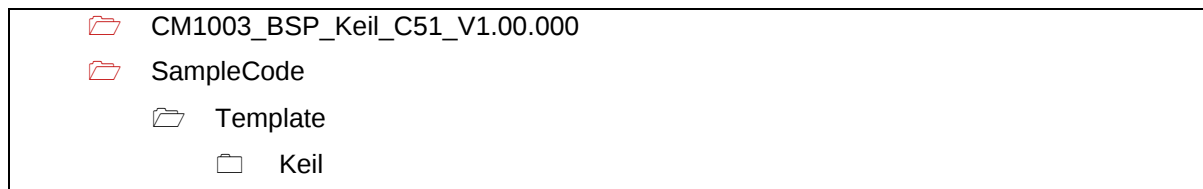


Figure 4-7 Template Project Folder Path

4.6 Execute the Project under Toolchains

Open and execute the project under the toolchain. The section 4.6.1 and 4.6.2 describe the steps of executing project in Keil MDK and IAR EWARM, respectively.

4.6.1 Keil MDK

This section provides steps to beginners on how to run a project by using Keil MDK.

1. Double-click the “Template.uvproj” to open the project.

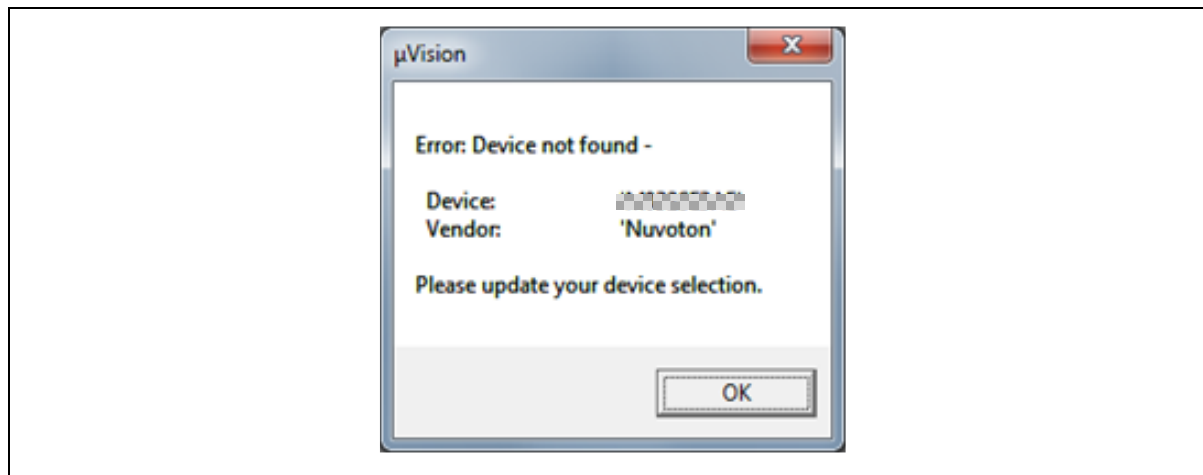


Figure 4-8 Warning Message of “Device not found”

Note: If Figure 4-8 warning message jumps out, please migrate to version 5 format as shown in Figure 4-9. The “.uvproj” filename extension will change to “.uvprojx”.

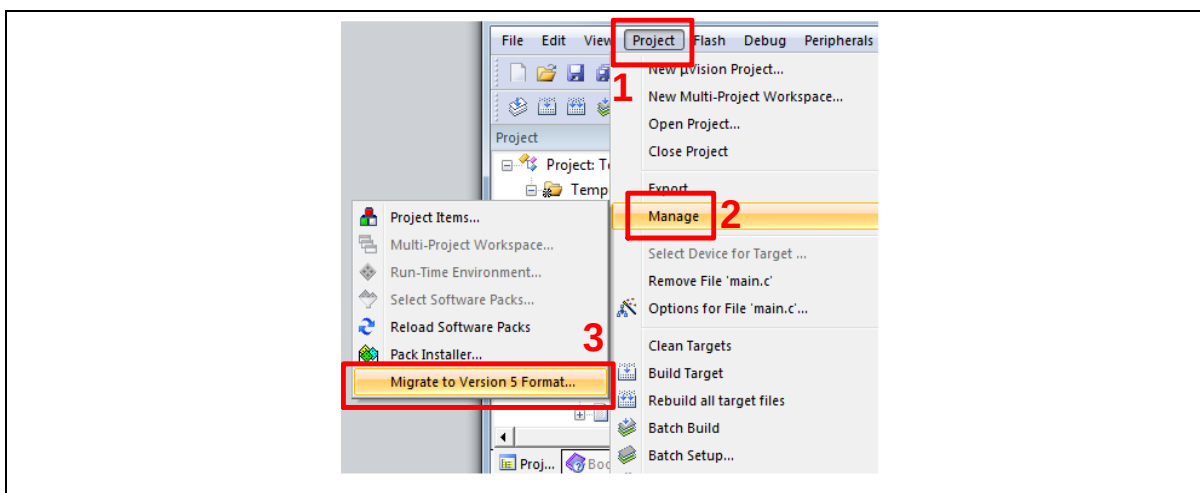


Figure 4-9 Project File Migrate to Version 5 Format

2. Make sure the debugger is “Nuvoton Nu-Link Debugger” as shown in Figure 4-10 and Figure 4-11.

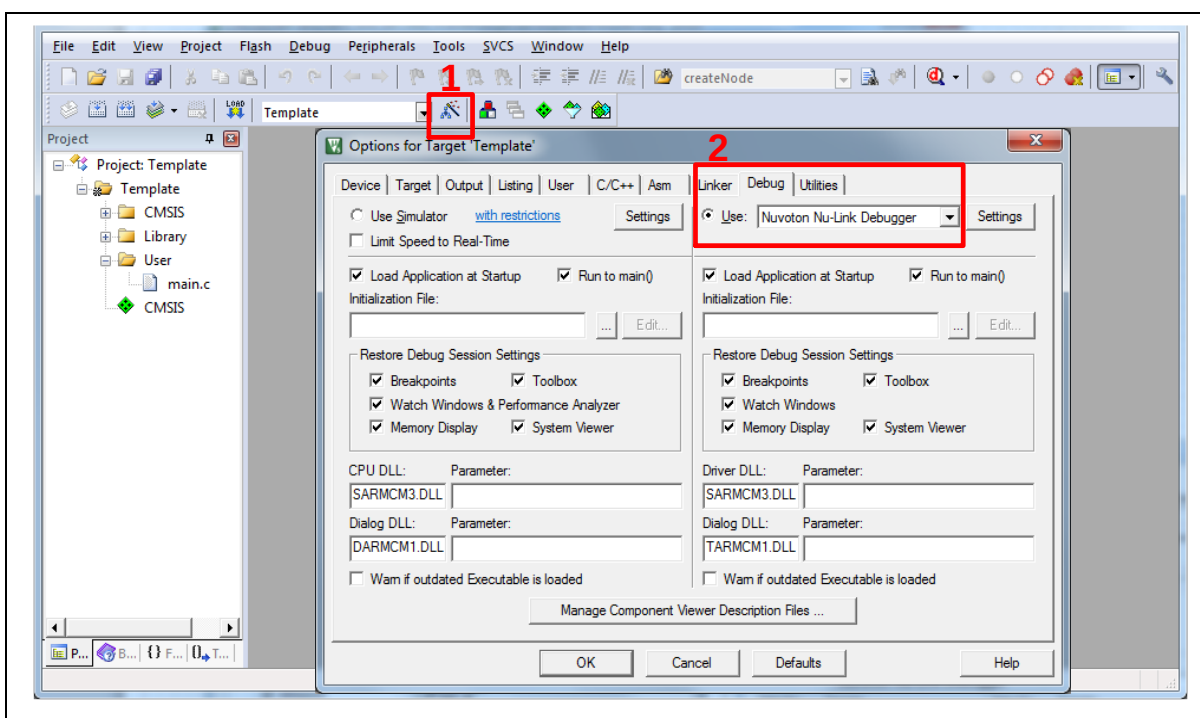


Figure 4-10 Debugger Setting in Options Window

Note: If the dropdown menu in Figure 4-10 does not contain “Nuvoton Nu-Link Debugger” item, please rework section4.2.

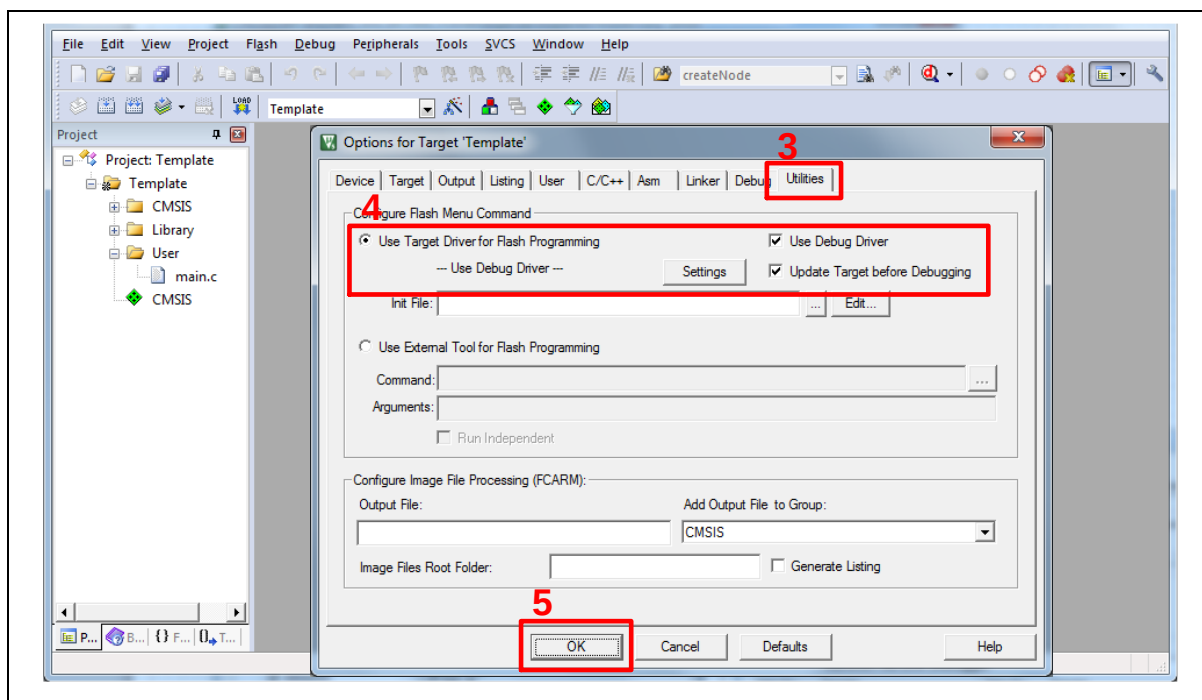


Figure 4-11 Programming Setting in Options Window

3. Rebuild all target files. After successfully compiling the project, download code to the Flash memory. Click **"Start/Stop Debug Section"** button to enter debug mode.

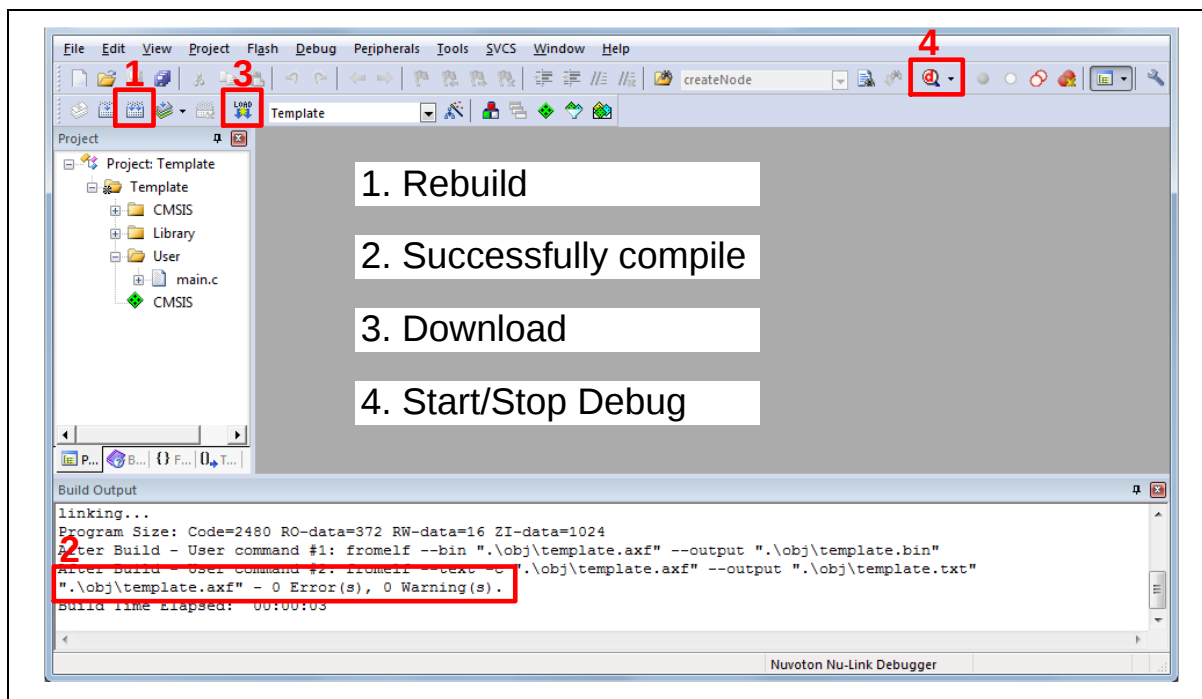


Figure 4-12 Compile and Download the Project

4. Figure 4-13 shows the debug mode under Keil MDK. Click “Run” and the debug message will be printed out as shown in Figure 4-14. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

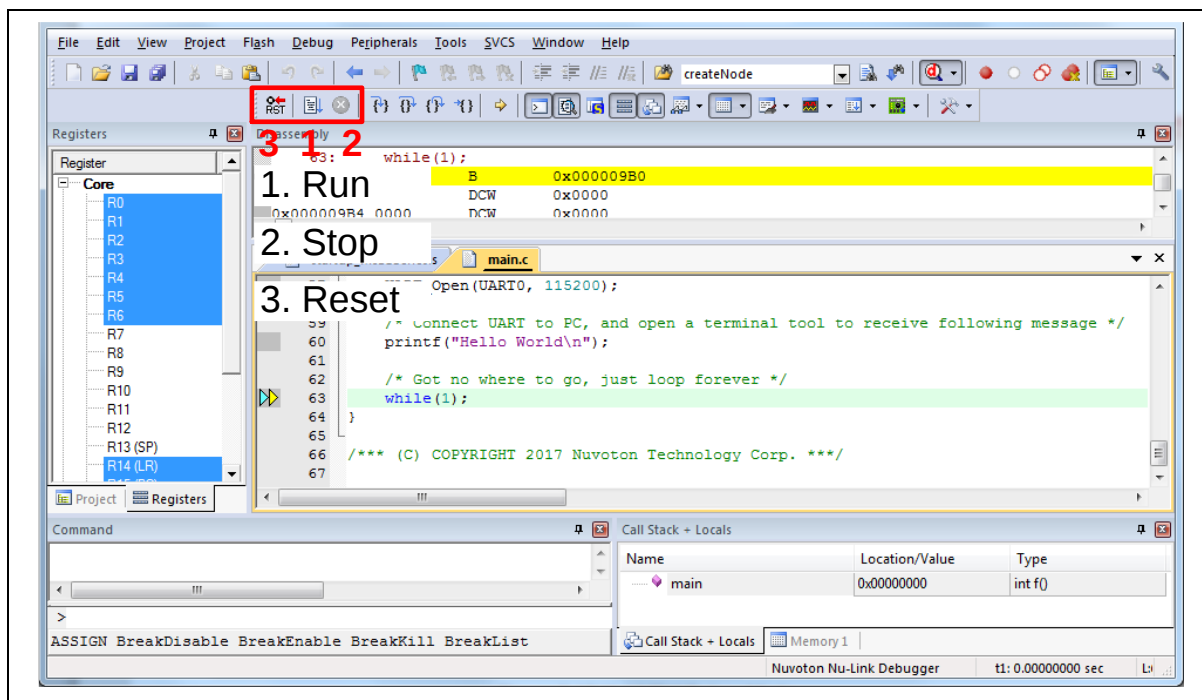


Figure 4-13 Keil MDK Debug Mode



Figure 4-14 Debug Message on Serial Port Terminal Windows

4.6.2 IAR EWARM

This section provides steps to beginners on how to run a project by using IAR EWARM.

1. Double click the “Template.eww” to open the project.
2. Make sure the toolbar contains “Nu-Link” item as shown in Figure 4-15.

Note: If the toolbar does not contain “Nu-Link” item, please rework section 4.2.

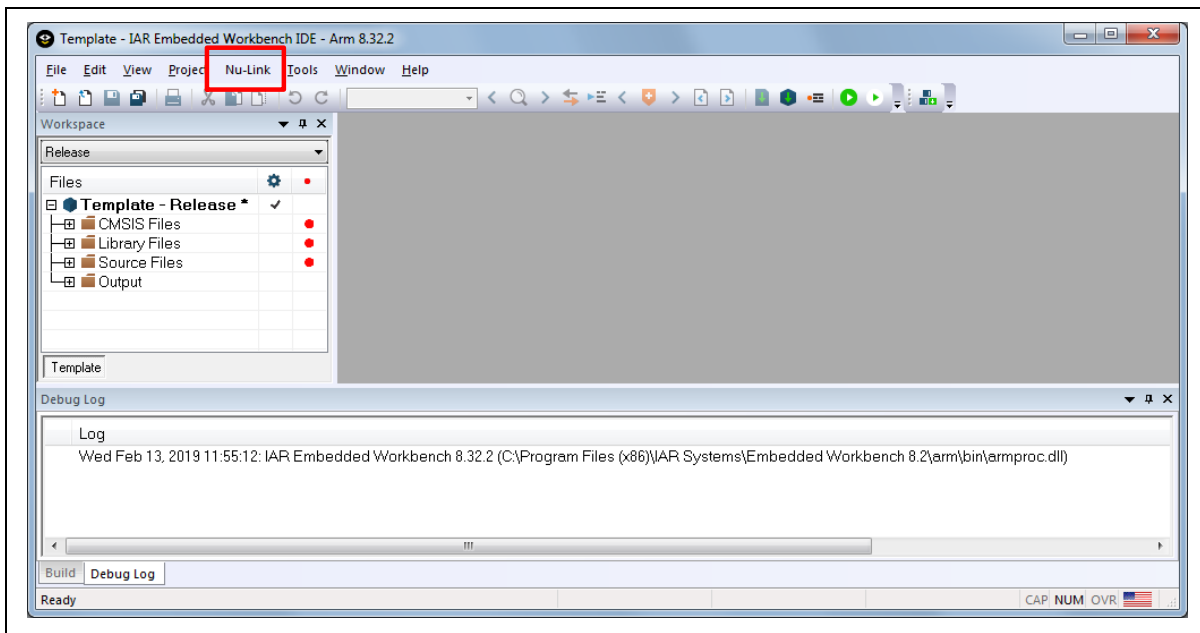


Figure 4-15 IAR EWARM Window

3. Make a target file as presented in Figure 4-16. After successfully compiling the project, download code to the Flash memory and enter debug mode.

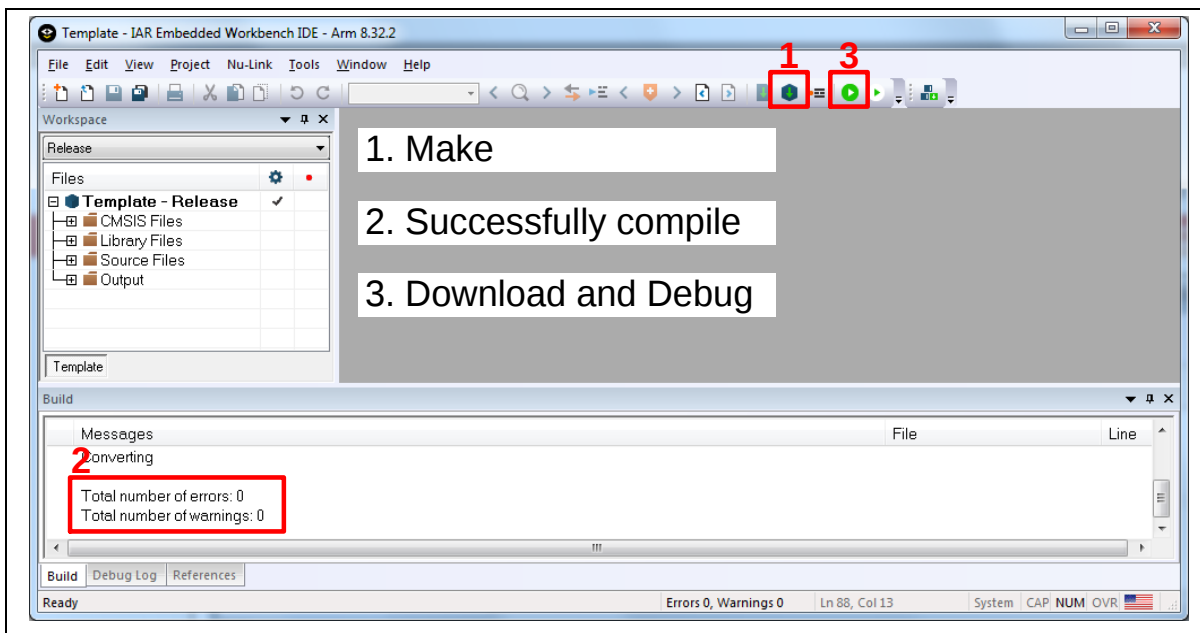


Figure 4-16 Compile and Download the Project

4. Figure 4-17 shows the debug mode under IAR EWARN. Click “Go” and the debug message will be printed out as shown in Figure 4-18. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

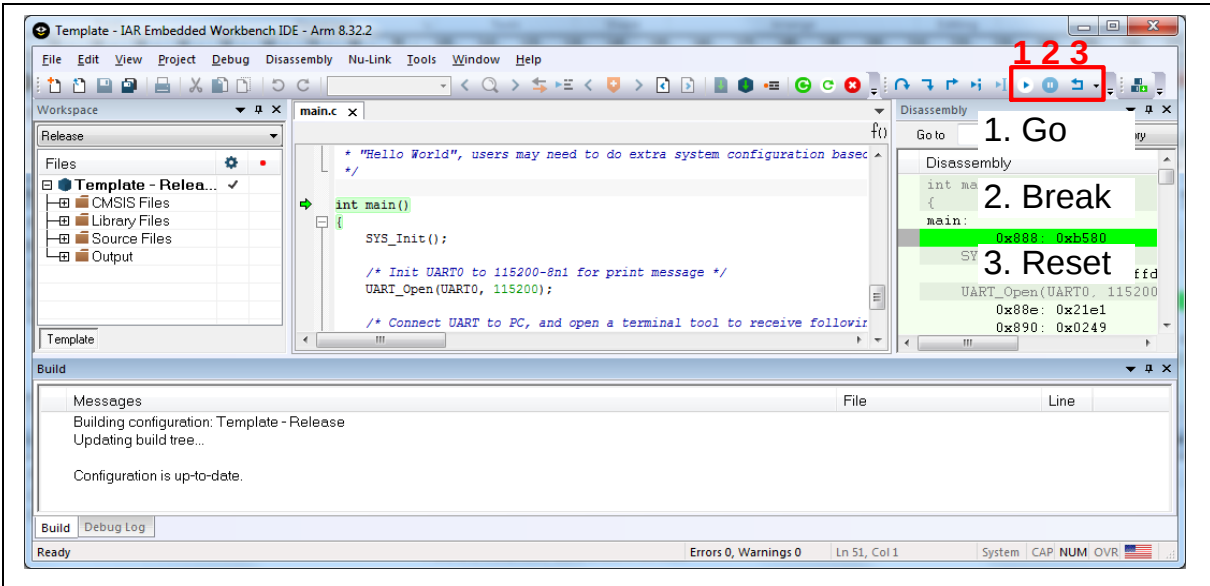


Figure 4-17 IAR EWARM Debug Mode

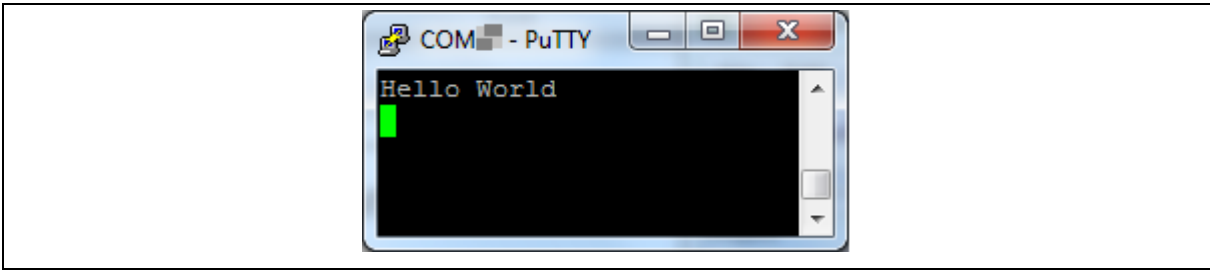


Figure 4-18 Debug Message on Serial Port Terminal Windows

5.2 NuMaker-CM1003CF2 Schematics

Figure 5-2 shows the CM1003CF2 target board circuit.

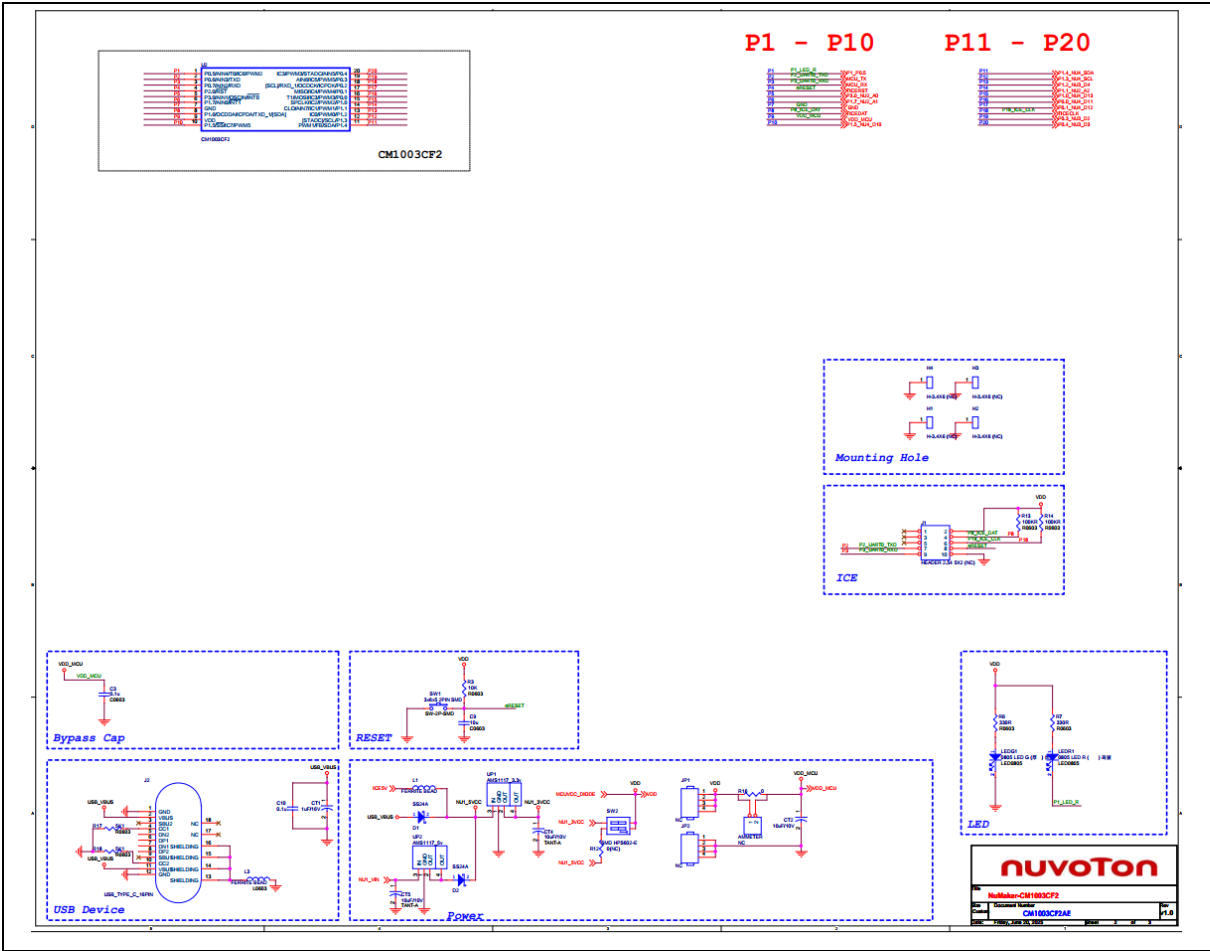


Figure 5-2 CM1003CF2 Target Board Circuit

5.3 Extension Connectors

Figure 5-3 shows extension connectors of NuMaker-CM1003CF2.

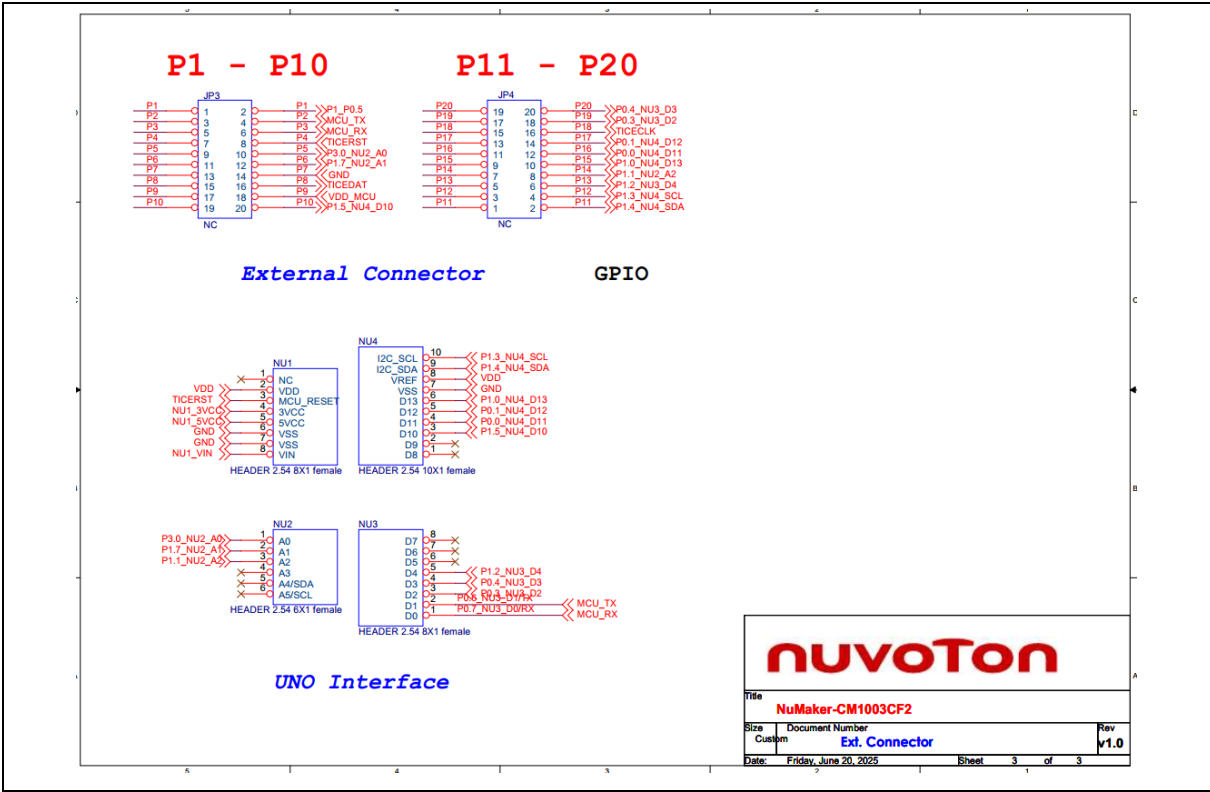


Figure 5-3 Extension Connectors Circuit

5.4 PCB Placement

Figure 5-4 and Figure 5-5 show the front and rear placement of NuMaker-CM1003CF2.

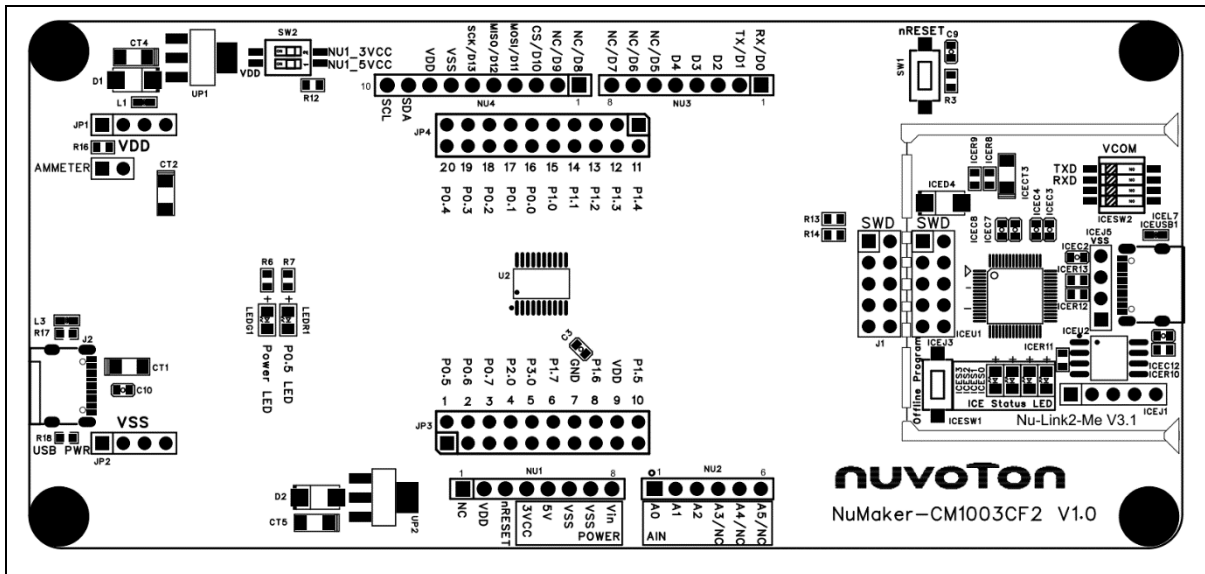


Figure 5-4 Front Placement

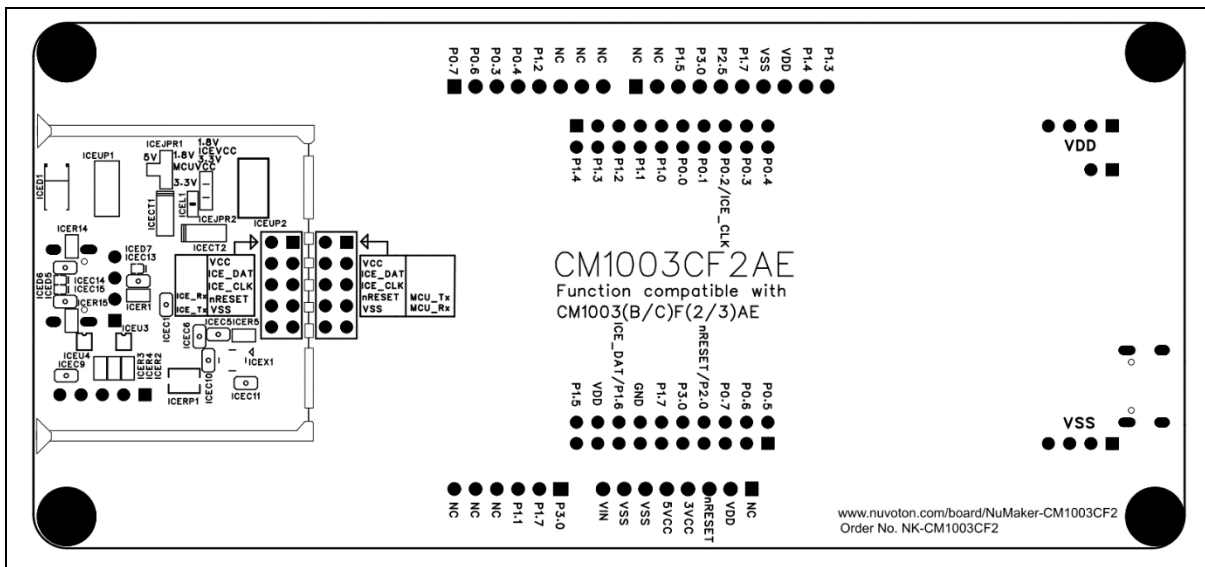


Figure 5-5 Rear Placement

6 REVISION HISTORY

Date	Revision	Description
2025.07.07	1.0	Initial version.

Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

*Please note that all data and specifications are subject to change without notice.
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.*