

**ARM<sup>®</sup> Cortex<sup>®</sup>-M**  
**32-bit Microcontroller**

**NuMaker-M0A23OC**  
**User Manual**  
**NuMicro<sup>®</sup> M0A21 Series**

*The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.*

*Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.*

*All data and specifications are subject to change without notice.*

For additional information or questions, please contact: Nuvoton Technology Corporation.

[www.nuvoton.com](http://www.nuvoton.com)

**Table of Contents**

|        |   |    |
|--------|---|----|
| 1      | Overview.....                                     | 7  |
| 2      | Features .....                                    | 8  |
| 3      | Hardware Configuration.....                       | 9  |
| 3.1    | Front View.....                                   | 9  |
| 3.2    | Rear View .....                                   | 11 |
| 3.3    | Extension Connectors.....                         | 12 |
| 3.3.1  | Pin Assignment for Extension Connectors.....      | 12 |
| 3.3.2  | Arduino UNO Compatible Extension Connectors ..... | 15 |
| 3.4    | Power Supply Configuration .....                  | 17 |
| 3.4.1  | VIN Power Source .....                            | 17 |
| 3.4.2  | 5 V Power Sources .....                           | 17 |
| 3.4.3  | 3.3 V Power Sources.....                          | 18 |
| 3.4.4  | Power Connectors .....                            | 18 |
| 3.4.5  | USB Connectors .....                              | 19 |
| 3.4.6  | Power Switches .....                              | 19 |
| 3.4.7  | Power Supply Models .....                         | 19 |
| 3.5    | Ammeter Connector .....                           | 22 |
| 3.6    | Function Switches .....                           | 23 |
| 3.7    | CAN Mode Selection .....                          | 24 |
| 3.8    | LIN Mode Selection.....                           | 24 |
| 3.9    | Push Buttons .....                                | 25 |
| 3.10   | LEDs .....  | 25 |
| 3.11   | Nu-Link2-Me .....                                 | 25 |
| 3.11.1 | VCOM Switches.....                                | 25 |
| 3.11.2 | Status LEDs .....                                 | 26 |
| 4      | Quick Start .....                                 | 27 |
| 4.1    | Toolchains Support .....                          | 27 |
| 4.2    | Nuvoton Nu-Link Driver Installation .....         | 27 |
| 4.3    | BSP Firmware Download.....                        | 29 |
| 4.4    | Hardware Setup .....                              | 29 |
| 4.5    | Find the Example Project.....                     | 31 |
| 4.6    | Execute the Project under Toolchains.....         | 31 |
| 4.6.1  | Keil MDK .....                                    | 31 |

|       |                                  |    |
|-------|----------------------------------|----|
| 4.6.2 | IAR EWARM.....                   | 35 |
| 4.6.3 | NuEclipse .....                  | 37 |
| 5     | NuMaker-M0A23OC Schematics ..... | 43 |
| 5.1   | Nu-Link2-Me .....                | 43 |
| 5.2   | M0A21 Platform .....             | 44 |
| 5.3   | Extension Connector .....        | 45 |
| 5.4   | PCB Placement .....              | 46 |
| 6     | REVISION HISTORY .....           | 47 |

## List of Figures

|  |    |
|--|----|
| Figure 1-1 NuMaker-M0A23OC Development Board .....               | 7  |
| Figure 3-1 Front View of NuMaker-M0A23OC .....                   | 9  |
| Figure 3-2 Rear View of NuMaker-M0A23OC .....                    | 11 |
| Figure 3-3 M0A23OC1AC Extension Connectors.....                  | 12 |
| Figure 3-4 Arduino UNO Compatible Extension Connectors.....      | 15 |
| Figure 3-5 External Power Supply Sources on Nu-Link2-Me .....    | 19 |
| Figure 3-6 External Power Supply Sources on M0A21 platform ..... | 20 |
| Figure 3-7 Detach the Nu-Link2-Me from NuMaker-M0A23OC.....      | 21 |
| Figure 3-8 Wiring between Ammeter Connector and Ammeter.....     | 23 |
| Figure 3-9 Function Switches on NuMaker-M0A23OC.....             | 24 |
| Figure 4-1 Nu-Link USB Driver Installation Setup.....            | 27 |
| Figure 4-2 Nu-Link USB Driver Installation .....                 | 28 |
| Figure 4-3 Open VCOM Function .....                              | 29 |
| Figure 4-4 ICE USB Connector.....                                | 29 |
| Figure 4-5 Device Manger.....                                    | 30 |
| Figure 4-6 PuTTY Session Setting.....                            | 30 |
| Figure 4-7 Template Project Folder Path .....                    | 31 |
| Figure 4-8 Warning Message of “Device not found” .....           | 31 |
| Figure 4-9 Project File Migrate to Version 5 Format.....         | 32 |
| Figure 4-10 Debugger Setting in Options Window.....              | 32 |
| Figure 4-11 Programming Setting in Options Window.....           | 33 |
| Figure 4-12 Compile and Download the Project .....               | 33 |
| Figure 4-13 Keil MDK Debug Mode .....                            | 34 |
| Figure 4-14 Debug Message on Serial Port Terminal Windows .....  | 34 |
| Figure 4-15 IAR EWARM Window .....                               | 35 |
| Figure 4-16 Compile and Download the Project .....               | 35 |
| Figure 4-17 IAR EWARM Debug Mode .....                           | 36 |
| Figure 4-18 Debug Message on Serial Port Terminal Windows .....  | 36 |
| Figure 4-19 Import the Project in NuEclipse .....                | 37 |
| Figure 4-20 Import Projects Windows .....                        | 37 |
| Figure 4-21 Open Project Properties Window .....                 | 38 |
| Figure 4-22 Project Properties Settings .....                    | 38 |
| Figure 4-23 Build Project.....                                   | 39 |
| Figure 4-24 Open Debug Configuration .....                       | 39 |
| Figure 4-25 Main Tab Configuration .....                         | 40 |
| Figure 4-26 Debugger Tab Configuration .....                     | 40 |

|   |    |
|---|----|
| Figure 4-27 Startup Tab Configuration .....                     | 41 |
| Figure 4-28 NuEclipse Debug Mode .....                          | 42 |
| Figure 4-29 Debug Message on Serial Port Terminal Windows ..... | 42 |
| Figure 5-1 Nu-Link2-Me Circuit .....                            | 43 |
| Figure 5-2 M0A21 platform Circuit .....                         | 44 |
| Figure 5-3 Extension Connectors Circuit .....                   | 45 |
| Figure 5-4 Front Placement .....                                | 46 |
| Figure 5-5 Rear Placement .....                                 | 46 |

## List of Tables

|  |    |
|--|----|
| Table 3-1 Extension Connectors.....  | 12 |
| Table 3-2 M0A23OC1AC Full-pin Extension Connectors and GPIO Function List .....  | 14 |
| Table 3-3 Arduino UNO Extension Connectors and M0A23OC1AC Mapping GPIO List..... | 16 |
| Table 3-4 Vin Power Source .....   | 17 |
| Table 3-5 5 V Power Sources .....  | 17 |
| Table 3-6 3.3 V Power Sources .....  | 18 |
| Table 3-7 Power Connectors .....   | 18 |
| Table 3-8 USB Connectors .....   | 19 |
| Table 3-9 Power Switches .....   | 19 |
| Table 3-10 Supply External Power through Nu-Link2-Me .....                       | 20 |
| Table 3-11 Supply External Power for M0A21 Platform .....                        | 22 |
| Table 3-12 Ammeter Connector.....  | 22 |
| Table 3-13 Function Switches.....  | 23 |
| Table 3-14 Operating Mode of CAN Transceiver.....                                | 24 |
| Table 3-15 Operating Mode of LIN Transceiver.....                                | 24 |
| Table 3-16 Push-Buttons .....  | 25 |
| Table 3-17 LEDs .....  | 25 |
| Table 3-18 VCOM Function of Nu-Link2-Me.....                                     | 25 |
| Table 3-19 Operation Status LED Patterns .....                                   | 26 |

## 1 OVERVIEW

The NuMaker-M0A23OC is a development board for Nuvoton NuMicro® M0A21 microcontrollers. The NuMaker-M0A23OC consists of two parts: a M0A21 platform and an on-board Nu-Link2-Me debugger and programmer. The NuMaker-M0A23OC is designed for industrial and automotive control application evaluation, prototype development and validation with power consumption monitoring function.

The M0A21 platform is based on NuMicro® M0A23OC1AC. For the development flexibility, the M0A21 platform provides the extension connectors of M0A23OC1AC, the Arduino UNO compatible headers and able to adopt multiple power supply. The M0A21 platform also provides CAN and LIN transceiver for relative function development. Furthermore, the Nuvoton-designed ammeter connector can measure the power consumption instantly, which is essential for the prototype evaluation.

In addition to the M0A21 platform, there is an attached on-board debugger and programmer “Nu-Link2-Me”. The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming via SWD interface. The Nu-Link2-Me supports virtual COM (VCOM) port for printing debug messages on PC. Besides, the programming status can be shown on the built-in LEDs. Further, the Nu-Link2-Me can be detached from the development board to become a stand-alone mass production programmer.

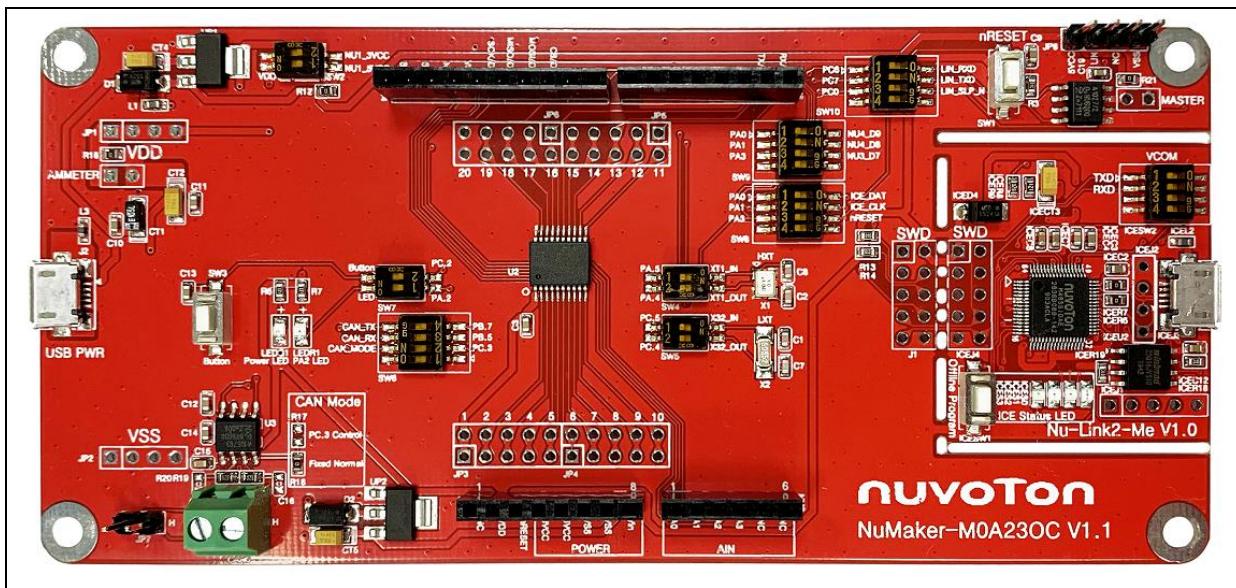


Figure 1-1 NuMaker-M0A23OC Development Board

## 2 FEATURES

- NuMicro® M0A23OC1AC microcontroller with function compatible with:
  - ◆ M0A23OC1AC
  - ◆ M0A23OB1AC
  - ◆ M0A21OC1AC
  - ◆ M0A21OB1AC
- M0A23OC1AC full pin extension connectors
- Arduino UNO compatible extension connectors
- Ammeter connector for measuring the microcontroller's power consumption
- Flexible board power source:
  - ◆ External V<sub>DD</sub> power connector
  - ◆ Arduino UNO compatible extension connector Vin
  - ◆ LIN bus connector JP8\_5VCC
  - ◆ USB FS connector on M0A21 platform
  - ◆ ICE USB connector on Nu-Link2-Me
- On-board CAN transceiver and bus connector
- On-board LIN transceiver and bus connector
- On-board Nu-Link2-Me debugger and programmer:
  - ◆ Debug through SWD interface
  - ◆ On-line/off-line programming
  - ◆ Virtual COM port function

### 3 HARDWARE CONFIGURATION

#### 3.1 Front View

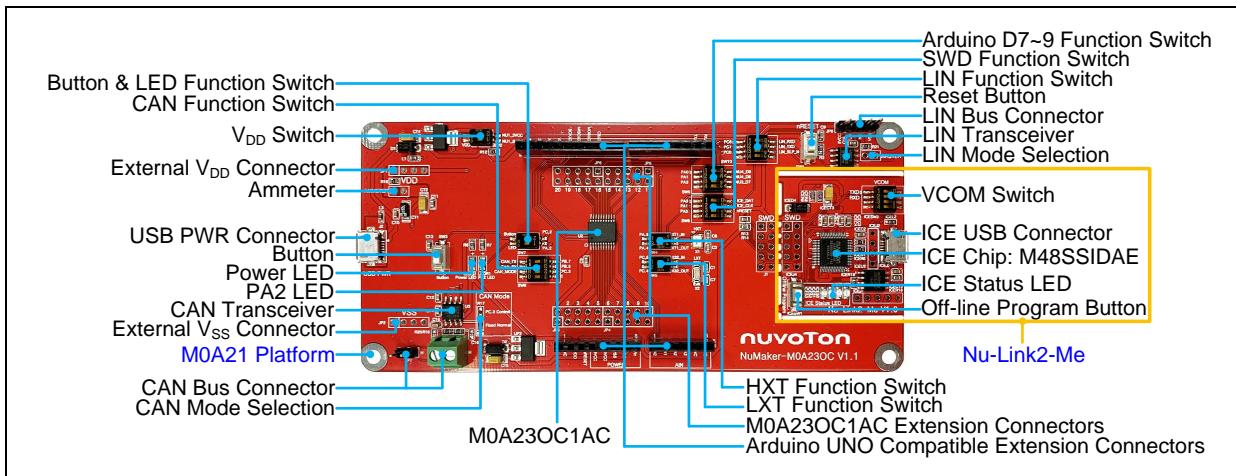


Figure 3-1 Front View of NuMaker-M0A23OC

Figure 3-1 shows the main components and connectors from the front side of NuMaker-M0A23OC. The following lists components and connectors from the front view:

- Target chip: M0A23OC1AC (U2)
- USB PWR Connector (J2)
- Arduino UNO Compatible Extension Connectors (NU1, NU2, NU3, NU4)
- M0A21 Extension Connectors (JP3, JP4, JP5 and JP6)
- External V<sub>DD</sub> Power Connector (JP1)
- External V<sub>SS</sub> Power Connector (JP2)
- On-board CAN Transceiver (U3)
- CAN Bus Connector (JP7 and CAN0)
- CAN Function Switch (SW6)
  - ◆ Enable PB.5 and PB.7 to CAN transceiver
  - ◆ Enable PC.3 to control CAN Mode
- On-board LIN Transceiver (U4)
- LIN Bus Connector (JP8)
- LIN Function Switch (SW10)
  - ◆ Enable PC.6 and PC.7 to LIN transceiver
  - ◆ Enable PC.0 to control LIN mode
- V<sub>DD</sub> Switch (SW2)
- Ammeter Connector (AMMETER)
- Reset Button (SW1)
- Power LED and PA2 LED (LEDG1 and LEDR1)
- Button (SW3)

- Button & LED Function Switch (SW7)
  - ◆ Enable PC.2 to Button
  - ◆ Enable PA.2 to LEDR1
- HXT Function Switch (SW4)
  - ◆ Enable PA.4 and PA.5 to External 12 MHz Crystal
- LXT Function Switch (SW5)
  - ◆ Enable PC.4 and PC.5 to External 32.768 kHz Crystal
- SWD Function Switch (SW8)
  - ◆ Enable PA.0 and PA.1 to ICE\_DAT and ICE\_CLK
  - ◆ Enable PA.3 to nRESET
- Arduino D7~9 Function Switch
  - ◆ Enable PA.0, PA.1 and PA.3 to Arduino D9, D8 and D7
- Nu-Link2-Me
  - ◆ VCOM Switch
  - ◆ ICE Chip: M48SSIDAE (ICEU2)
  - ◆ ICE USB Connector (ICEJ3)
  - ◆ ICE Status LED (ICES0,ICES1, ICES2, ICES3)
  - ◆ Off-line Program Button (ICESW1)

### 3.2 Rear View

Figure 3-2 shows the main components and connectors from the rear side of NuMaker-M0A23OC.

The following lists components and connectors from the rear view:

- Nu-Link2-Me
  - ◆ MCUVCC Power Switch (ICEJPR1)
  - ◆ ICEVCC Power Switch (ICEJPR2)

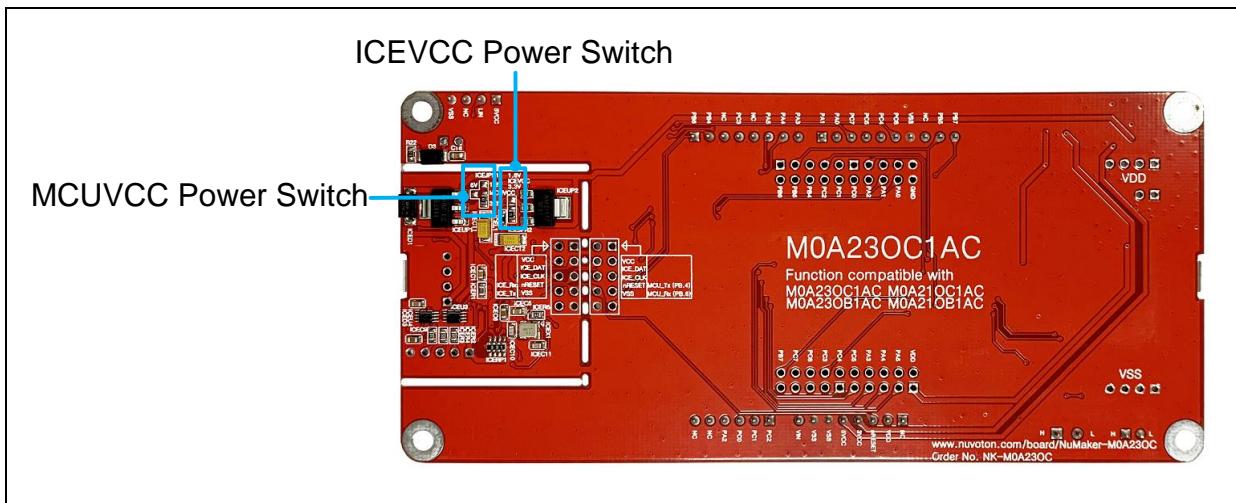


Figure 3-2 Rear View of NuMaker-M0A23OC

### 3.3 Extension Connectors

Table 3-1 presents the extension connectors.

| Connector             | Description  |
|-----------------------|--|
| JP3, JP4, JP5 and JP6 | Full pins extension connectors on the NuMaker-M0A23OC. |
| NU1, NU2, NU3 and NU4 | Arduino UNO compatible pins on the NuMaker-M0A23OC.    |

Table 3-1 Extension Connectors

#### 3.3.1 Pin Assignment for Extension Connectors

The NuMaker-M0A23OC provides the M0A23OC1AC onboard and extension connectors (JP3, JP4, JP5 and JP6). Figure 3-3 shows the M0A23OC1AC extension connectors.

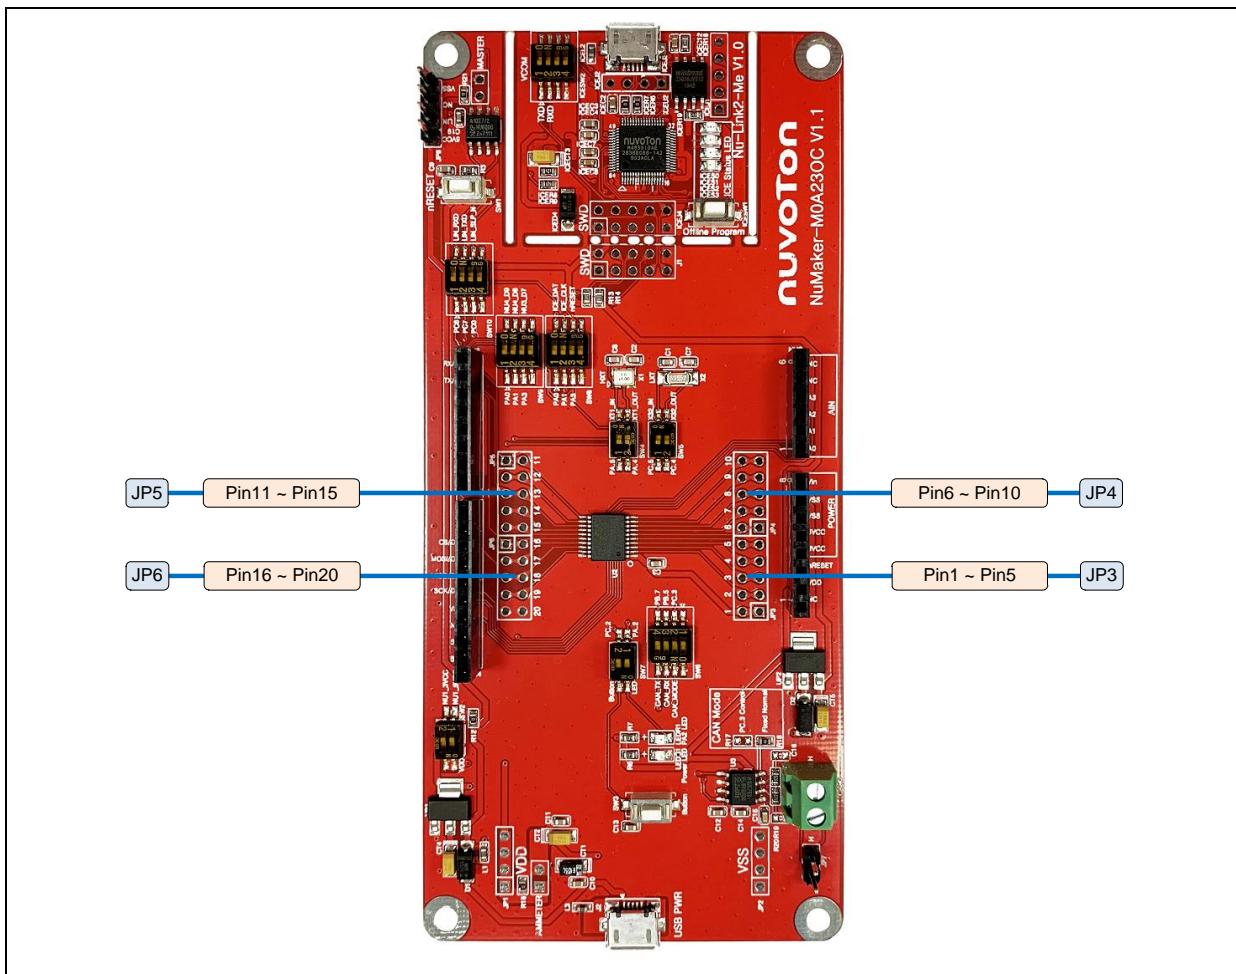


Figure 3-3 M0A23OC1AC Extension Connectors

| Header | M0A23OC1AC |  |
|--------|------------|--|
|        | Pin No.    | Function   |
| JP3    | JP3.1      | 1 V <sub>DD</sub>  |
|        | JP3.2      | 2 PA.5 / ADC0_CH16 / UART0_nRTS / XT1_IN / CLKO / PWM0_CH0 / PWM0_CH2 / PWM0_CH4 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI0_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM0 / TM2 / TM0_EXT / TM2_EXT / UART1_TXD / UART1_RXD / ACMP0_WLAT                     |
|        | JP3.3      | 3 PA.4 / ADC0_CH15 / UART0_nRTS / XT1_OUT / CLKO / PWM0_CH1 / PWM0_CH3 / PWM0_CH5 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI1_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM1 / TM3 / TM1_EXT / TM3_EXT / UART1_TXD / UART1_RXD / ACMP1_WLAT                    |
|        | JP3.4      | 4 PA.3 / nRESET / UART0_nCTS / PWM0_CH0 / PWM0_CH2 / PWM0_CH4 / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI0_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ADC0_ST / TM0 / TM2 / TM0_EXT / TM2_EXT / UART1_RXD / INT0  |
|        | JP3.5      | 5 PC.5 / ADC0_CH14 / X32_IN / UART0_nCTS / CLKO / PWM0_CH1 / PWM0_CH3 / PWM0_CH5 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI0_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM1 / TM3 / TM1_EXT / TM3_EXT / UART1_TXD / UART1_RXD / INT1                           |
| JP4    | JP4.1      | 6 PC.4 / ADC0_CH13 / X32_OUT / UART0_nCTS / CLKO / PWM0_CH0 / PWM0_CH2 / PWM0_CH4 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI1_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM0 / TM2 / TM0_EXT / TM2_EXT / UART1_TXD / UART1_RXD / INT2                          |
|        | JP4.2      | 7 PC.3 / ADC0_CH12 / ACMP0_N3 / ACMP1_N3 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH1 / PWM0_CH3 / PWM0_CH5 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI1_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM1 / TM3 / TM1_EXT / TM3_EXT / UART1_TXD / UART1_RXD / INT3 |
|        | JP4.3      | 8 PC.6 / ADC0_CH11 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH0 / PWM0_CH2 / PWM0_CH4 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI1_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM0 / TM2 / TM0_EXT / TM2_EXT / UART1_TXD / UART1_RXD / INT4                       |
|        | JP4.4      | 9 PC.7 / ADC0_CH10 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH1 / PWM0_CH3 / PWM0_CH5 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI0_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM1 / TM3 / TM1_EXT / TM3_EXT / UART1_TXD / UART1_RXD / INT5                       |
|        | JP4.5      | 10 PB.7 / ADC0_CH9 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH0 / PWM0_CH2 / PWM0_CH4 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI1_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM0 / TM2 / TM0_EXT / TM2_EXT / UART1_TXD / UART1_RXD / ACMP0_WLAT                 |
| JP5    | JP5.1      | 11 PB.6 / ADC0_CH8 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH1 / PWM0_CH3 / PWM0_CH5 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI0_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM1 / TM3 / TM1_EXT / TM3_EXT / UART1_TXD /  |

| Header | M0A23OC1AC |   |
|--------|------------|---|
|        | Pin No.    | Function  |
|        |            | UART1_RXD / ACMP1_WLAT  |
| JP5.2  | 12         | PB.5 / ADC0_CH7 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH0 / PWM0_CH2 / PWM0_CH4 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI1_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM0 / TM2 / TM0_EXT / TM2_EXT / UART1_RXD / INT0   |
| JP5.3  | 13         | PB.4 / ADC0_CH6 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH1 / PWM0_CH3 / PWM0_CH5 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI0_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM1 / TM3 / TM1_EXT / TM3_EXT / UART1_RXD / UART1_nCTS                                   |
| JP5.4  | 14         | PC.2 / ADC0_CH5 / ACMP0_N2 / ACMP1_N2 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH0 / PWM0_CH2 / PWM0_CH4 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI1_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM0 / TM2 / TM0_EXT / TM2_EXT / UART1_RXD / UART1_RXD / UART1_nRTS |
| JP5.5  | 15         | PC.1 / ADC0_CH4 / ACMP0_N1 / ACMP1_N1 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH1 / PWM0_CH3 / PWM0_CH5 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI0_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM1 / TM3 / TM1_EXT / TM3_EXT / UART1_RXD / UART1_RXD              |
| JP6    | 16         | PC.0 / ADC0_CH3 / ACMP1_P0 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH0 / PWM0_CH2 / PWM0_CH4 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI1_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM0 / TM2 / TM0_EXT / TM2_EXT / UART1_RXD / UART1_RXD / PWM0_BRAKE0           |
|        | 17         | PA.2 / ADC0_CH2 / UART0_nRTS / UART0_nCTS / CLKO / PWM0_CH1 / PWM0_CH3 / PWM0_CH5 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI0_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM1 / TM3 / TM1_EXT / TM3_EXT / UART1_RXD / PWM0_BRAKE1                                  |
|        | 18         | PA.1 / ADC0_CH1 / ACMP0_N0 / ACMP1_N0 / VREF+ / ICE_CLK / UART0_nCTS / CLKO / PWM0_CH0 / PWM0_CH2 / PWM0_CH4 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI1_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM0 / TM2 / TM0_EXT / TM2_EXT / UART1_RXD / PWM0_BRAKE0       |
|        | 19         | PA.0 / ADC0_CH0 / DAC0_OUT / ACMP0_P0 / ICE_DAT / UART0_nCTS / CLKO / PWM0_CH1 / PWM0_CH3 / PWM0_CH5 / UART0_TXD / UART0_RXD / USCI0_CLK / USCI0_DAT0 / USCI0_DAT1 / USCI0_CTL0 / USCI0_CTL1 / USCI1_CLK / USCI1_DAT0 / USCI1_DAT1 / USCI1_CTL0 / ACMP0_O / ACMP1_O / ADC0_ST / TM1 / TM3 / TM1_EXT / TM3_EXT / UART1_RXD / PWM0_BRAKE1               |
|        | 20         | V <sub>SS</sub>   |

Table 3-2 M0A23OC1AC Full-pin Extension Connectors and GPIO Function List

### 3.3.2 Arduino UNO Compatible Extension Connectors

Figure 3-4 shows the Arduino UNO compatible extension connectors.

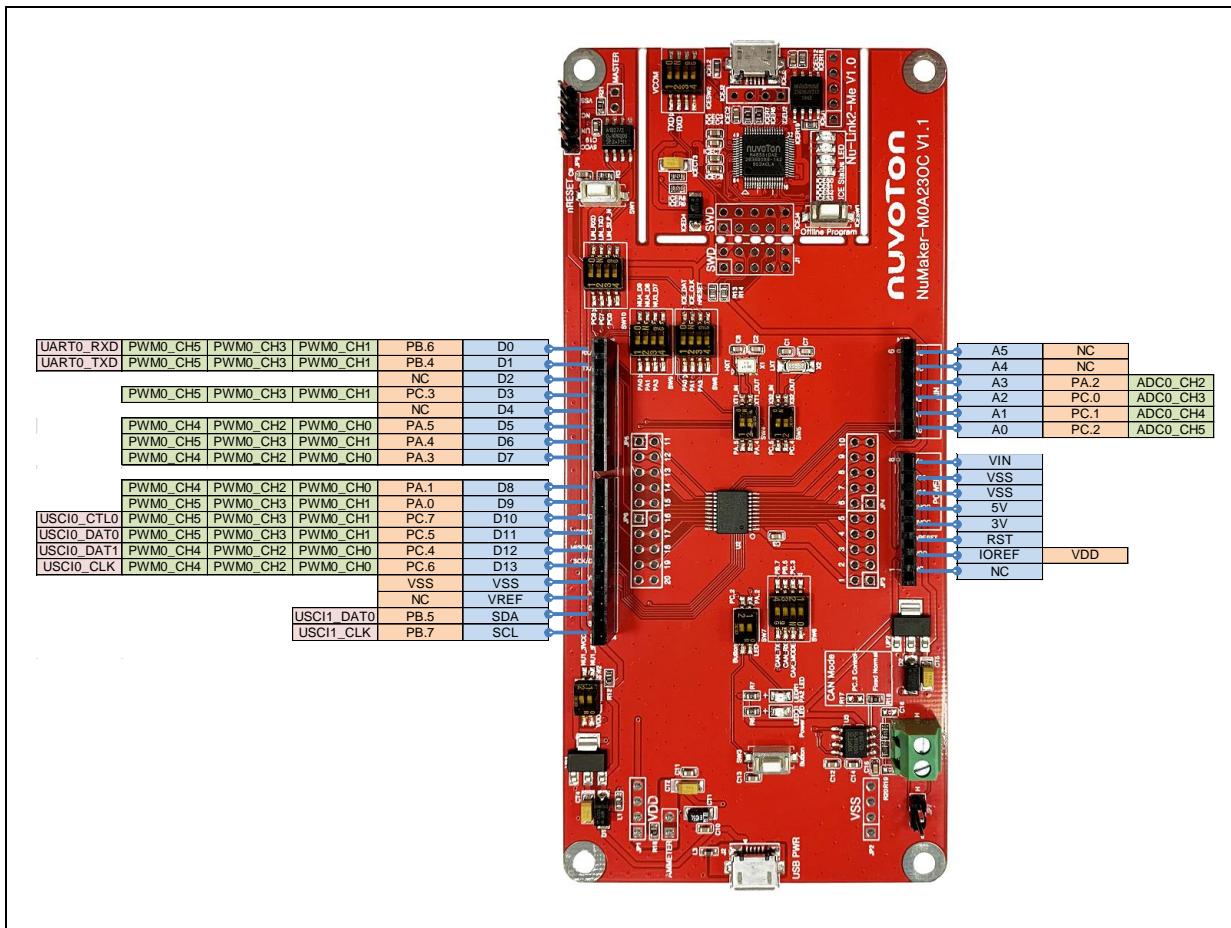


Figure 3-4 Arduino UNO Compatible Extension Connectors

| Header               |        | NuMaker-M0A23OC           |                        | Header               |       | NuMaker-M0A23OC           |                        |
|----------------------|--------|---------------------------|------------------------|----------------------|-------|---------------------------|------------------------|
|                      |        | Compatible to Arduino UNO | GPIO Pin of M0A23OC1AC |                      |       | Compatible to Arduino UNO | GPIO Pin of M0A23OC1AC |
| <b>N<br/>U<br/>3</b> | NU3.1  | D0                        | PB.6                   | <b>N<br/>U<br/>2</b> | NU2.6 | A5                        | NC                     |
|                      | NU3.2  | D1                        | PB.4                   |                      | NU2.5 | A4                        | NC                     |
|                      | NU3.3  | D2                        | NC                     |                      | NU2.4 | A3                        | PA.2                   |
|                      | NU3.4  | D3                        | PC.3                   |                      | NU2.3 | A2                        | PC.0                   |
|                      | NU3.5  | D4                        | NC                     |                      | NU2.2 | A1                        | PC.1                   |
|                      | NU3.6  | D5                        | PA.5                   |                      | NU2.1 | A0                        | PC.2                   |
|                      | NU3.7  | D6                        | PA.4                   |                      | NU1.8 | VIN                       | -                      |
|                      | NU3.8  | D7                        | PA.3                   |                      | NU1.7 | VSS                       |                        |
|                      | NU4.1  | D8                        | PA.1                   |                      | NU1.6 | VSS                       |                        |
| <b>N<br/>U<br/>4</b> | NU4.2  | D9                        | PA.0                   |                      | NU1.5 | 5V                        |                        |
|                      | NU4.3  | D10                       | PC.7                   |                      | NU1.4 | 3V                        |                        |
|                      | NU4.4  | D11                       | PC.5                   |                      | NU1.3 | RST                       | nRESET                 |
|                      | NU4.5  | D12                       | PC.4                   |                      | NU1.2 | IOREF                     | V <sub>DD</sub>        |
|                      | NU4.6  | D13                       | PC.6                   |                      | NU1.1 | NC                        | -                      |
|                      | NU4.7  | VSS                       | V <sub>SS</sub>        |                      |       |                           |                        |
|                      | NU4.8  | VREF                      | NC                     |                      |       |                           |                        |
|                      | NU4.9  | SDA                       | PB.5                   |                      |       |                           |                        |
|                      | NU4.10 | SCL                       | PB.7                   |                      |       |                           |                        |

Table 3-3 Arduino UNO Extension Connectors and M0A23OC1AC Mapping GPIO List

### 3.4 Power Supply Configuration

The NuMaker-M0A23OC is able to adopt multiple power supply. External power source include NU1 Vin (7 V to 12 V),  $V_{DD}$  (depending on target chip operating voltage), LIN bus through connector JP8 and PC through USB connector. By using switches and voltage regulator, multiple power domains can be created on the NuMaker-M0A23OC.

#### 3.4.1 VIN Power Source

Table 3-4 presents the Vin power source.

| Connector | Net Name in Schematic | Description   |
|-----------|-----------------------|---|
| NU1 pin8  | NU1_VIN               | Board external power source, with voltage range from 7 V to 12 V. The voltage regulator UP2 converts the NU1 pin8 input voltage to 5 V and supplies it to NU1_5VCC. |

Table 3-4 Vin Power Source

#### 3.4.2 5 V Power Sources

Table 3-5 presents the 5 V power sources.

| Connector | Net Name in Schematic | Description  |
|-----------|-----------------------|--|
| ICEJ3     | USB_HS_VBUS           | ICE USB connector supplies 5 V power from PC to M0A21 platform and Nu-Link2-Me.  |
| J2        | USB_VBUS              | USB connector on NuMaker-M0A23OC supplies 5 V power from PC to M0A21 platform and Nu-Link2-Me.                             |
| NU1 pin5  | NU1_5VCC              | ICEJ3, J2 or NU1 pin8 supplies 5 V power to NU1 pin5. NU1 pin5 supplies 5 V power to target chip or Arduino adapter board. |
| JP8       | JP8_5VCC              | JP8 on NuMaker-M0A23OC supplies 5 V power from LIN bus to M0A21 platform and Nu-Link2-Me.                                  |

Table 3-5 5 V Power Sources

### 3.4.3 3.3 V Power Sources

Table 3-6 presents the 3.3 V power sources.

| Voltage Regulator | 5 V Source  | Description   |
|-------------------|-------------|---|
| ICEUP1            | USB_HS_VBUS | ICEUP1 converts USB_HS_VBUS to 3.3 V and supplies 3.3 V to M0A21 platform or ICE chip.  |
| UP1               | USB_VBUS    | UP1 converts USB_VBUS to 3.3 V and supplies 3.3 V to M0A21 platform.<br><b>Note:</b> SW2.2 (NU1 3VCC) should be switched to ON. |
| UP1               | NU1_5VCC    | UP1 converts NU1_5VCC to 3.3 V and supplies 3.3 V to M0A21 platform.<br><b>Note:</b> SW2.2 (NU1 3VCC) should be switched to ON. |
| UP1               | JP8_5VCC    | UP1 converts JP8_5VCC to 3.3 V and supplies 3.3 V to M0A21 platform.<br><b>Note:</b> SW2.2 (NU1 3VCC) should be switched to ON. |

Table 3-6 3.3 V Power Sources

### 3.4.4 Power Connectors

Table 3-7 presents the power connectors.

| Connector | Description                                       |
|-----------|---|
| JP1       | V <sub>DD</sub> connector on the NuMaker-M0A23OC. |
| JP2       | V <sub>SS</sub> connector on the NuMaker-M0A23OC. |

Table 3-7 Power Connectors

### 3.4.5 USB Connectors

Table 3-8 presents the USB connectors.

| Connector | Description   |
|-----------|---|
| ICEJ3     | ICE USB connector on Nu-Link2-Me for power supply, debugging and programming from PC. |
| J2        | USB FS connector on NuMaker-M0A23OC for power supply.                                 |

Table 3-8 USB Connectors

### 3.4.6 Power Switches

Table 3-9 presents the power switches.

| Switch  | Description   |
|---------|---|
| ICEJPR1 | Configures the target chip operating voltage at 1.8 V / 3.3 V / 5 V.<br><b>Note:</b> M0A21 operating voltage range is from 2.4 V to 5.5 V. Do not switch ICEJPR1 (MCUVCC) to 1.8 V. |
| ICEJPR2 | Configures the ICE chip operating voltage at 1.8 V / 3.3 V.   |
| SW2     | Configures the target chip operating voltage at 3.3 V / 5 V.  |

Table 3-9 Power Switches

### 3.4.7 Power Supply Models

#### 3.4.7.1 External Power Supply through Nu-Link2-Me to Target Chip

The external power supply source on Nu-Link2-Me is shown in Figure 3-5.

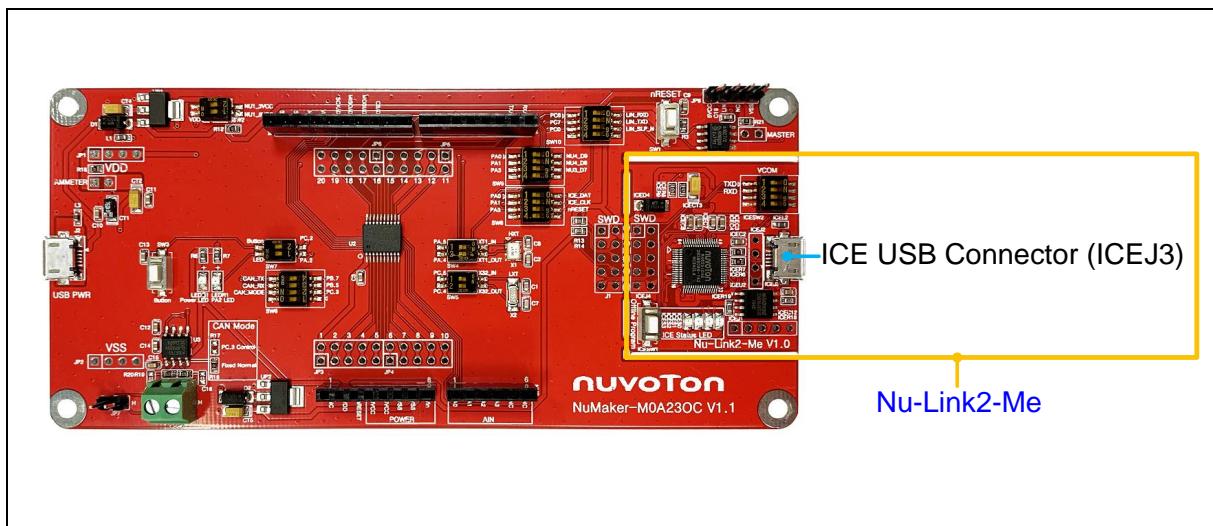


Figure 3-5 External Power Supply Sources on Nu-Link2-Me

To use ICEJ3 as external power supply source with Nu-Link2-Me, please follow the below steps:

1. Solder the resistor on ICEJPR1 (MCUVCC) depends on the target chip operating voltage.
2. Solder the resistor on ICEJPR2 (ICEVCC) depends on the ICE chip operating voltage.
3. Switch the SW2 to OFF.
4. Connect the external power supply to ICEJ3.

Table 3-10 presents all power models when supplies external power through Nu-Link2-Me. The Nu-Link2-Me external power sources are highlighted in yellow.

| Model | Target Chip Voltage | ICEJ3         | ICEJPR1 (MCUVCC) Selection <sup>[1]</sup> | ICEJPR2 (ICEVCC) Selection <sup>[2]</sup> | ICE Chip Voltage | SW2 Selection | J2 | Vin | JP1          |
|-------|---------------------|---------------|---|---|------------------|---------------|----|-----|--------------|
| 1     | 3.3 V               | Connect to PC | 3.3 V (default)                           | 3.3 V (default)                           | 3.3 V            | Off           | X  | X   | 3.3 V output |
| 2     | 5 V                 | Connect to PC |   | 5 V                                       | 3.3 V (default)  | Off           | X  | X   | 5 V output   |

**Note:**

1. 0 Ω should be soldered between ICEJPR1's MCVCC and 3.3 V / 5 V.
2. 0 Ω should be soldered between ICEJPR2's ICEVCC and 3.3 V.
3. X: Unused.

Table 3-10 Supply External Power through Nu-Link2-Me

### 3.4.7.2 External Power Supply through M0A21 platform to Target Chip

The external power supply sources on M0A21 platform are shown in Figure 3-6.

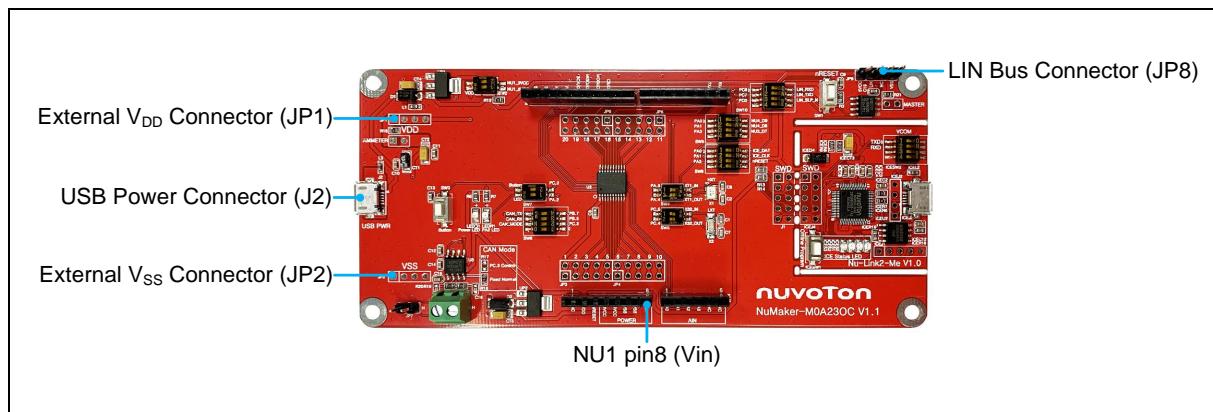


Figure 3-6 External Power Supply Sources on M0A21 platform

To use Vin, J2 or JP8 as external power supply source, please follow the below steps:

1. Switch the SW2 depends on the target chip operating voltage.
2. Remove the resistor on ICEJPR1 (MCUVCC).
3. Solder the resistor on ICEJPR2 (ICEVCC) depends on the ICE chip operating voltage.
4. Connect the external power supply to Vin, J2 or JP8.

To use JP1 as external power supply source, please follow the below steps:

1. Switch the SW2 to OFF.
2. Remove the resistor on ICEJPR1 (MCUVCC).
3. Solder the resistor on ICEJPR2 (ICEVCC) depends on the ICE chip operating voltage.
4. Connect ICEJ3 to PC.
5. Connect the external power supply to JP1.

To use Vin, J2 or JP8 as external power supply source with Nu-Link2-Me detached from NuMaker-M0A23OC, please follow the below steps:

1. Switch the SW2 depends on the target chip operating voltage.
2. Detach the Nu-Link2-Me from NuMaker-M0A23OC.
3. Connect the external power supply to Vin, J2 or JP8.

To use JP1 as external power supply source with Nu-Link2-Me detached from NuMaker-M0A23OC, please follow the below steps:

1. Switch the SW2 to OFF.
2. Detach the Nu-Link2-Me from NuMaker-M0A23OC.
3. Connect the external power supply to JP1.

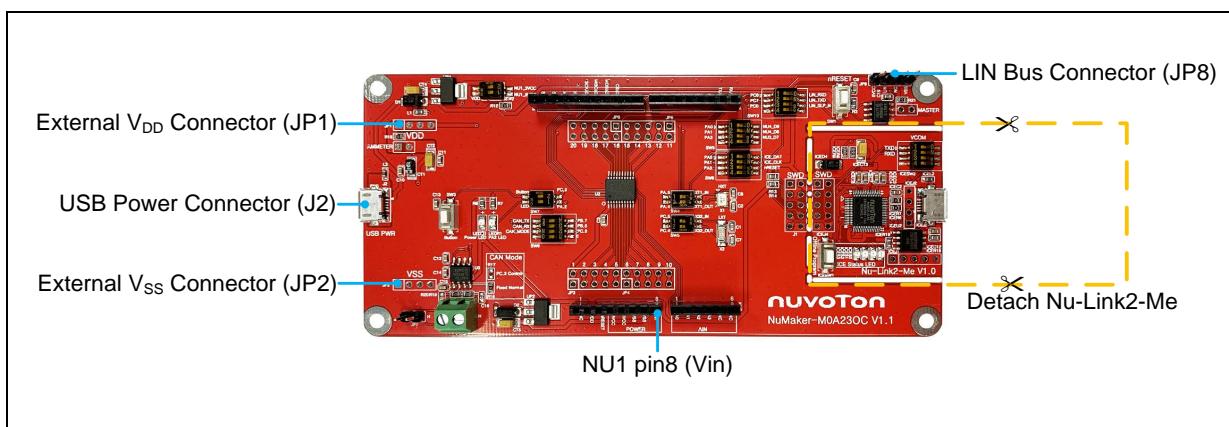


Figure 3-7 Detach the Nu-Link2-Me from NuMaker-M0A23OC

Table 3-11 presents all power models when supplies external power through M0A21 platform. The M0A21 platform external power sources are highlighted in yellow.

| Model | Target Chip Voltage | Vin <sup>[1]</sup> | J2 <sup>[1]</sup> | JP8 <sup>[1]</sup> | ICEJ3               | SW2 Selection | JP1 <sup>[2]</sup>     | ICEJPR1 (MCUVCC) Selection <sup>[3]</sup> | ICEJPR2 (ICEVCC) Selection <sup>[4]</sup> | ICE Chip Voltage <sup>[5]</sup> |
|-------|---------------------|--------------------|-------------------|--------------------|---------------------|---------------|------------------------|---|---|---------------------------------|
| 3     | 3.3 V               | 7 V ~ 12 V Input   | X                 | X                  | X                   | NU1 3VCC      | 3.3 V output           | Remove resistor                           | 3.3 V                                     | 3.3 V                           |
| 4     | 3.3 V               | X                  | Connect to PC     | X                  | X                   | NU1 3VCC      | 3.3 V output           | Remove resistor                           | 3.3 V                                     | 3.3 V                           |
|       | 3.3                 | X                  | X                 | Connect to LIN bus | X                   | NU1 3VCC      | 3.3 V output           | Remove resistor                           | 3.3 V                                     | 3.3 V                           |
| 5     | 5 V                 | 7 V ~ 12 V Input   | X                 | X                  | X                   | NU1 5VCC      | 5 V output             | Remove resistor                           | 3.3 V                                     | 3.3 V                           |
| 6     | 5 V                 | X                  | Connect to PC     | X                  | X                   | NU1 5VCC      | 5 V output             | Remove resistor                           | 3.3 V                                     | 3.3 V                           |
| 7     | 5V                  | X                  | X                 | Connect to LIN bus | X                   | NU1 5VCC      | 5 V output             | Remove resistor                           | 3.3 V                                     | 3.3 V                           |
| 8     | 2.4 V ~ 5.5 V       | X                  | X                 | X                  | Connect to PC       | OFF           | DC Input 2.4 V ~ 5.5 V | Remove resistor                           | 1.8 / 3.3 V                               | 1.8 / 3.3 V                     |
| 9     | 2.4 V ~ 5.5 V       | X                  | X                 | X                  | Nu-Link2-Me removed | OFF           | DC Input 2.4 V ~ 5.5 V | X   | X   | X                               |

**Note:**

- The Vin input voltage will be converted by voltage regulator UP2 to 5 V. Supply external power to Vin, J2 or JP8 can provide 5 V to NU1 pin5 (5V) and 3.3 V to NU1 pin4 (3VCC).
- JP1 external power input only provides voltage to target chip.
- 0 Ω should be removed from ICEJPR1's MCUVCC and 1.8 V / 3.3 V / 5 V.
- 0 Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V.
- The ICE chip voltage should be close to the target chip voltage.
- X: Unused

Table 3-11 Supply External Power for M0A21 Platform

### 3.5 Ammeter Connector

Table 3-12 presents the ammeter connector.

| Connector | Description  |
|-----------|--|
| AMMETER   | Connector for user to measure the target chip power consumption easily. User needs to remove the R16 resistor. |

Table 3-12 Ammeter Connector

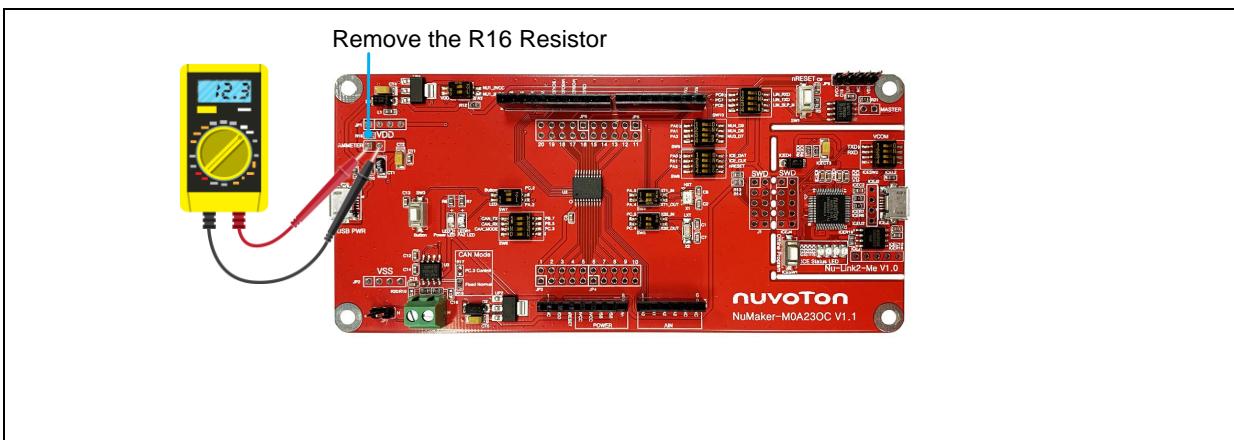


Figure 3-8 Wiring between Ammeter Connector and Ammeter

### 3.6 Function Switches

Table 3-13 presents the function switches.

| Component | Description  |
|-----------|--|
| SW4       | Switch both SW4.1 and SW4.2 to ON to enable PA.4 and PA.5 to external 12 MHz crystal.  |
| SW5       | Switch both SW5.1 and SW5.2 to ON to enable PC.4 and PC.5 to external 32.768 kHz crystal.  |
| SW6       | Switch both SW6.3 and SW6.4 to ON to enable PB.5 and PB.7 to CAN transceiver.<br>Switch SW6.2 to ON to enable PC.3 to control CAN mode.  |
| SW7       | Switch SW7.1 to ON to enable PA.2 to LEDR1.<br>Switch SW7.2 to ON to enable PC.2 to Button (SW3).  |
| SW8       | Switch SW8.1, SW8.2 and SW8.3 to ON to enable PA.0, PA.1 and PA.3 to SWD interface (ICE_DAT, ICE_CLK and nRESET).<br><b>Note:</b> Do not switch SW9 at the same time for safety. |
| SW9       | Switch SW9.1, SW9.2 and SW9.3 to ON to enable PA.0, PA.1 and PA.3 to Arduino interface (D7 ~ D9).<br><b>Note:</b> Do not switch SW8 at the same time for safety.                 |
| SW10      | Switch both SW10.1 and SW10.2 to ON to enable PC.6 and PC.7 to LIN transceiver.<br>Switch SW10.3 to ON to enable PC.0 to control LIN mode.                                       |

Table 3-13 Function Switches

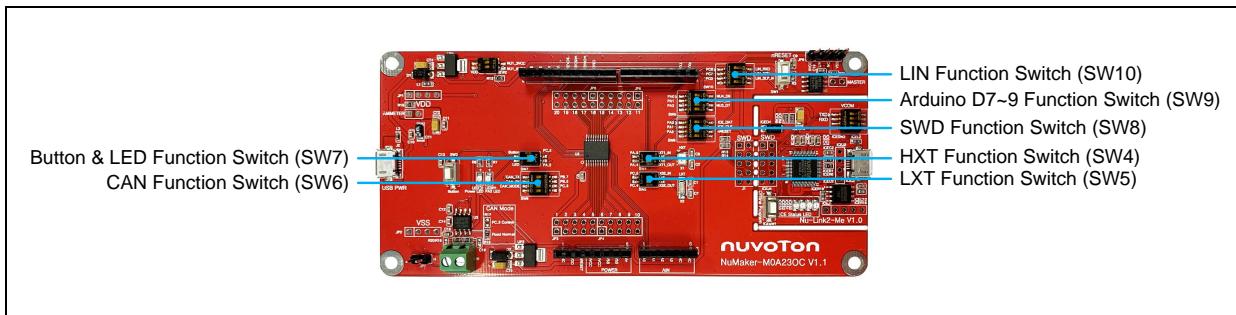


Figure 3-9 Function Switches on NuMaker-M0A23OC

### 3.7 CAN Mode Selection

Table 3-14 presents all selection to control operating mode of CAN transceiver. The control sources are highlighted in yellow.

| Model | CAN Operating Mode | R18 | R17 | PC.3 | SW6.3 | SW6.4 | SW6.2 |
|-------|--------------------|-----|-----|------|-------|-------|-------|
| 1     | Disable            | X   | X   | X    | OFF   | OFF   | OFF   |
| 2     | Normal             | 0Ω  | X   | X    | ON    | ON    | OFF   |
| 3     | Normal             | X   | 0Ω  | Low  | ON    | ON    | ON    |
| 4     | Silent             | X   | 0Ω  | High | ON    | ON    | ON    |

**Note:** X: Unused.

Table 3-14 Operating Mode of CAN Transceiver

### 3.8 LIN Mode Selection

Table 3-15 presents all selection to control operating mode of LIN transceiver. The control sources are highlighted in yellow.

| Model | LIN Operating Mode | R21 | MASTER | PC.0 | SW10.1 | SW10.2 | SW10.3 |
|-------|--------------------|-----|--------|------|--------|--------|--------|
| 1     | Reset              | X   | X      | X    | OFF    | OFF    | OFF    |
| 2     | Master Normal      | 0Ω  | X      | High | ON     | ON     | ON     |
| 3     | Master Sleep       | 0Ω  | X      | Low  | ON     | ON     | ON     |
| 4     | Master Normal      | X   | 0Ω     | High | ON     | ON     | ON     |
| 5     | Master Sleep       | X   | 0Ω     | Low  | ON     | ON     | ON     |
| 6     | Slave Normal       | X   | X      | High | ON     | ON     | ON     |
| 7     | Slave Sleep        | X   | X      | Low  | ON     | ON     | ON     |

**Note:** X: Unused.

Table 3-15 Operating Mode of LIN Transceiver

### 3.9 Push Buttons

Table 3-16 presents the push buttons.

| Component | Description   |
|-----------|---|
| ICESW1    | Offline program button to start offline ICP programming the target chip.      |
| SW1       | Reset button to reset the target chip.  |
| SW3       | Customize button is connected to the M0A23OC1AC PC.2 if SW7.2 switches to ON. |

Table 3-16 Push-Buttons

### 3.10 LEDs

Table 3-17 presents the LEDs.

| Component                     | Description  |
|-------------------------------|--|
| Power LED                     | The power LED indicates that the NuMaker-M0A23OC is powered.         |
| PB14 LED                      | The LED is connected to the M0A23OC1AC PA.2 if SW7.1 switches to ON. |
| ICES0, ICES1, ICES2 and ICES3 | Nu-Link2-Me status LED.  |

Table 3-17 LEDs

### 3.11 Nu-Link2-Me

The Nu-Link2-Me is an attached on-board debugger and programmer. The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming through SWD interface. The Nu-Link2-Me also supports virtual COM port (VCOM) for printing debug messages on PC. Besides, the programming status can be shown on the built-in LEDs. Further, the Nu-Link2-Me can be detached from the development board to become a stand-alone mass production programmer. For more information about Nu-Link2-Me, please refer to Nu-Link2-Pro Debugger and Programmer User Manual.

#### 3.11.1 VCOM Switches

Table 3-18 presents how to set the VCOM function by ICESW2.

| ICESW2                              |          |  |
|-------------------------------------|----------|--|
| Pin                                 | Function | Description  |
| 1                                   | TXD      | <b>On:</b> Connect target chip PB.4 (UART0_TXD) to Nu-Link2-Me.<br><b>Off:</b> Disconnect target chip PB.4 (UART0_TXD) to Nu-Link2-Me. |
| 2                                   | RXD      | <b>On:</b> Connect target chip PB.6 (UART0_RXD) to Nu-Link2-Me.<br><b>Off:</b> Disconnect target chip PB.6 (UART0_RXD) to Nu-Link2-Me. |
| <b>Note:</b> Pin 3 and 4 is unused. |          |  |

Table 3-18 VCOM Function of Nu-Link2-Me

### 3.11.2 Status LEDs

Table 3-19 presents the status LEDs patterns for different operation on Nu-Link2-Me.

| Operation Status                                | Status LED |           |           |           |
|---|------------|-----------|-----------|-----------|
|   | ICES0      | ICES1     | ICES2     | ICES3     |
| Power on  | Flash x 3  | Flash x 3 | Flash x 3 | Flash x 3 |
| Connected to IDE/NuTool                         | Flash x 3  | Flash x 3 | Flash x 3 | On        |
| ICE online (Not connected to a target chip)     | On         | -         | Flash x 3 | Flash x 3 |
| ICE online (Connected to a target chip)         | On         | -         | -         | On        |
| ICE online (Failed to connect to a target chip) | On         | Any       | Flash     | On        |
| During Offline Programming                      | -          | On        | -         | Flash     |
| Offline Programming Completed                   | On         | -         | -         | -         |
| Offline Programming Completed (Auto mode)       | On         | On        | -         | -         |
| Offline Programming Failed                      | On         | Flash     | -         | -         |

Table 3-19 Operation Status LED Patterns

## 4 QUICK START

### 4.1 Toolchains Support

Install the preferred toolchain. Please make sure at least one of the toolchains has been installed.

- [KEIL MDK Nuvoton edition M0/M23](#)
- [IAR EWARM](#)
- [NuEclipse GCC \(for Windows\)](#)
- [NuEclipse GCC \(for Linux\)](#)

### 4.2 Nuvoton Nu-Link Driver Installation

Download and install the latest Nuvoton Nu-Link Driver.

- Download and install [Nu-Link Keil Driver](#) when using Keil MDK.
- Download and install [Nu-Link IAR Driver](#) when using IAR EWARM.
- Skip this step when using NuEclipse.

Please install the Nu-Link USB Driver as well at the end of the installation. The installation is presented in Figure 4-1 and Figure 4-2.

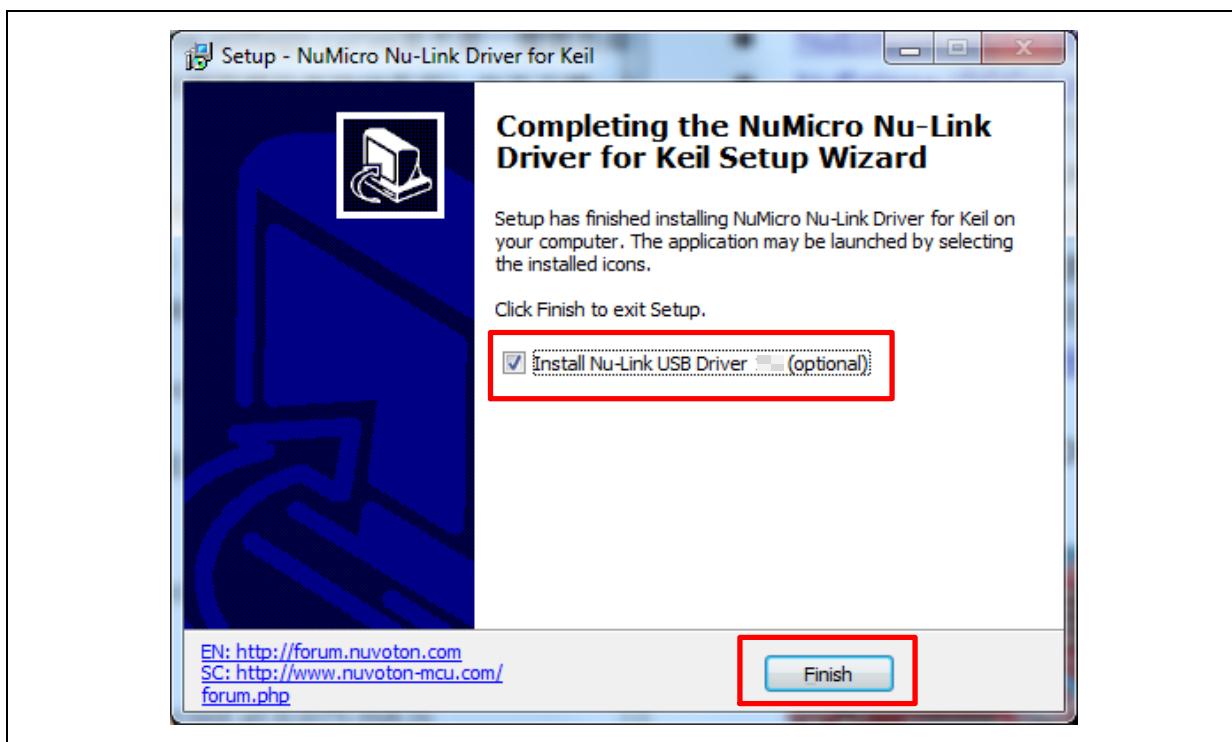


Figure 4-1 Nu-Link USB Driver Installation Setup



Figure 4-2 Nu-Link USB Driver Installation

#### 4.3 BSP Firmware Download

Download and unzip the [Board Support Package \(BSP\)](#).

#### 4.4 Hardware Setup

1. Open the virtual COM (VCOM) function by changing Nu-Link2-Me VCOM Switch No. 1 and 2 to ON.

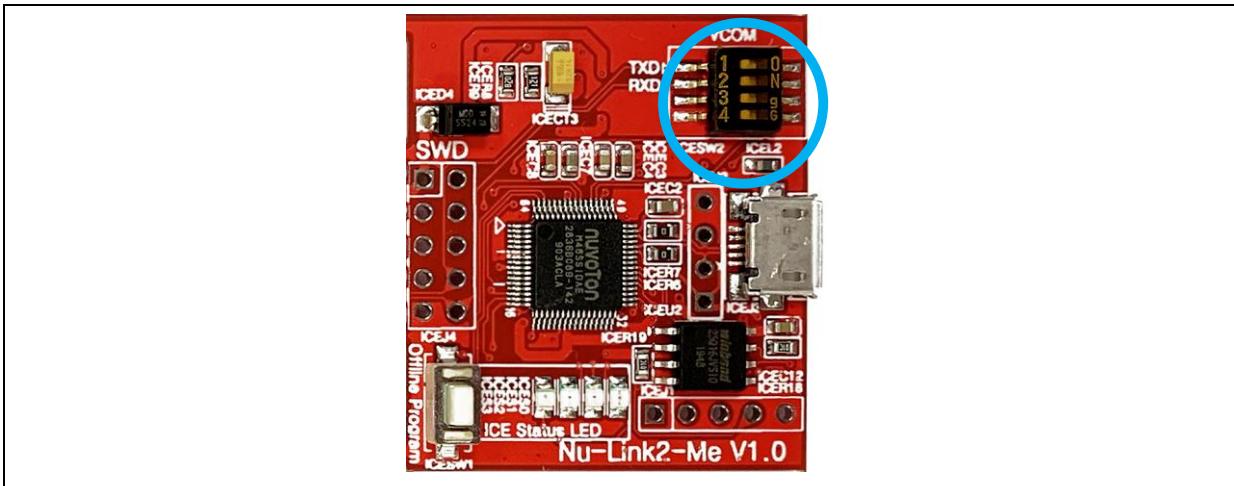


Figure 4-3 Open VCOM Function

2. Connect the ICE USB connector shown in Figure 4-4 to the PC USB port through USB cable.

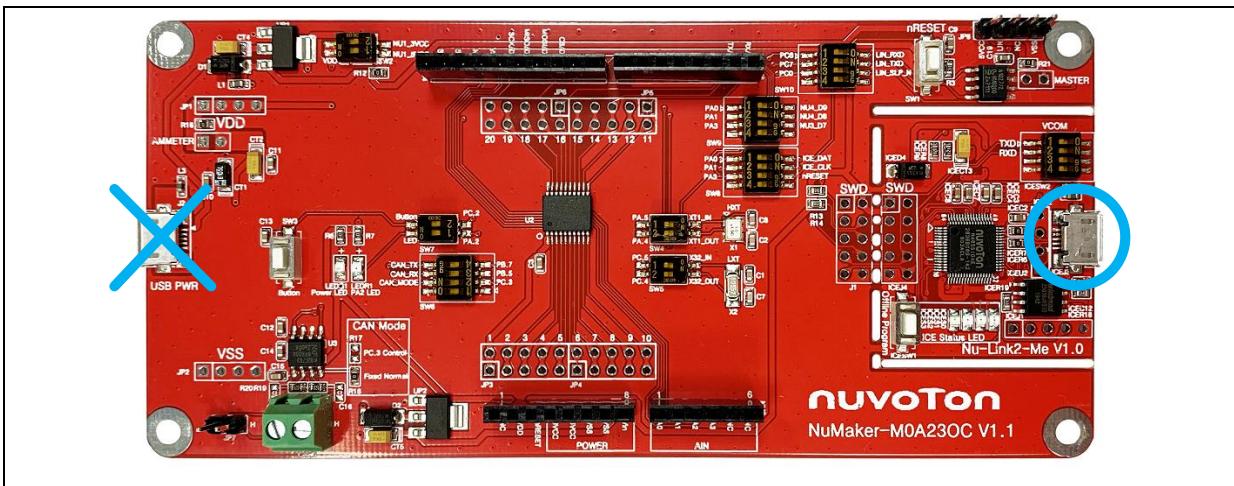


Figure 4-4 ICE USB Connector

3. Find the “Nuvoton Virtual COM Port” on the Device Manger as Figure 4-5.

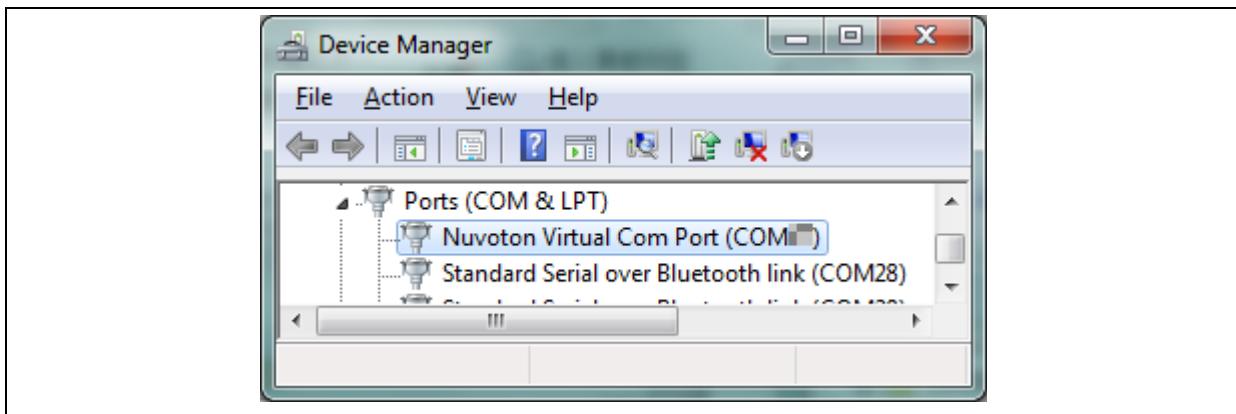


Figure 4-5 Device Manger

4. Open a serial port terminal, PuTTY for example, to print out debug message. Set the speed to 115200. Figure 4-6 presents the PuTTY session setting.

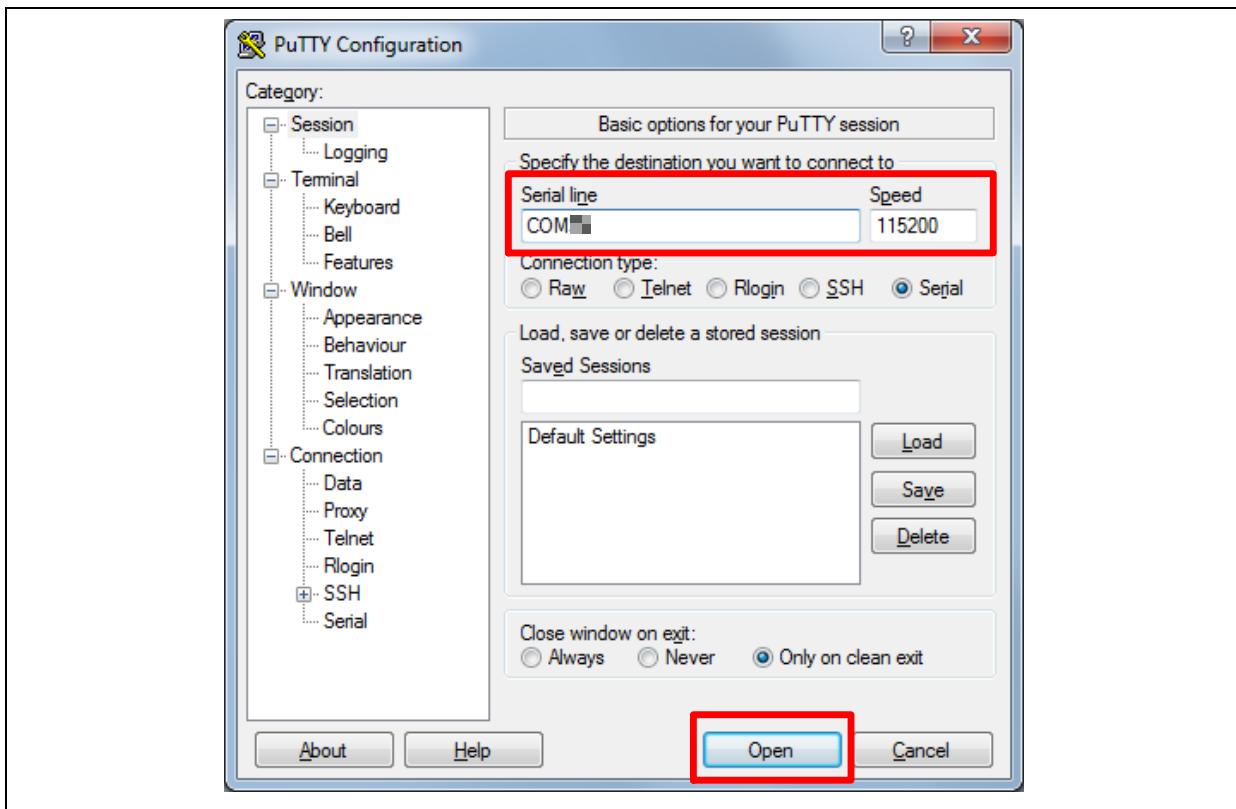


Figure 4-6 PuTTY Session Setting

## 4.5 Find the Example Project

Use the “Template” project as an example. The project can be found under the BSP folder as shown in Figure 4-7.

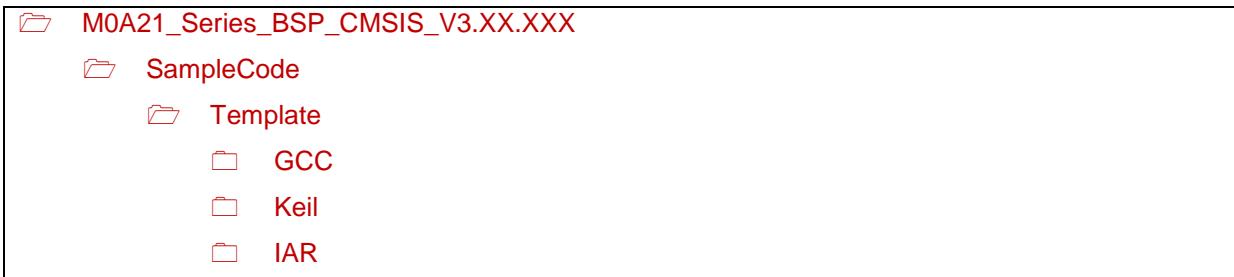


Figure 4-7 Template Project Folder Path

## 4.6 Execute the Project under Toolchains

Open and execute the project under the toolchain. The section 4.6.1, 4.6.2, and 4.6.3 describe the steps of executing project in Keil MDK, IAR EWARM and NuEclipse, respectively.

### 4.6.1 Keil MDK

This section provides steps to beginners on how to run a project by using Keil MDK.

1. Double click the “Template.uvproj” to open the project.

**Note:** If Figure 4-8 warning message jumps out, please migrate to version 5 formats as shown in Figure 4-9. The “.uvproj” filename extension will change to “.uvprojx”.

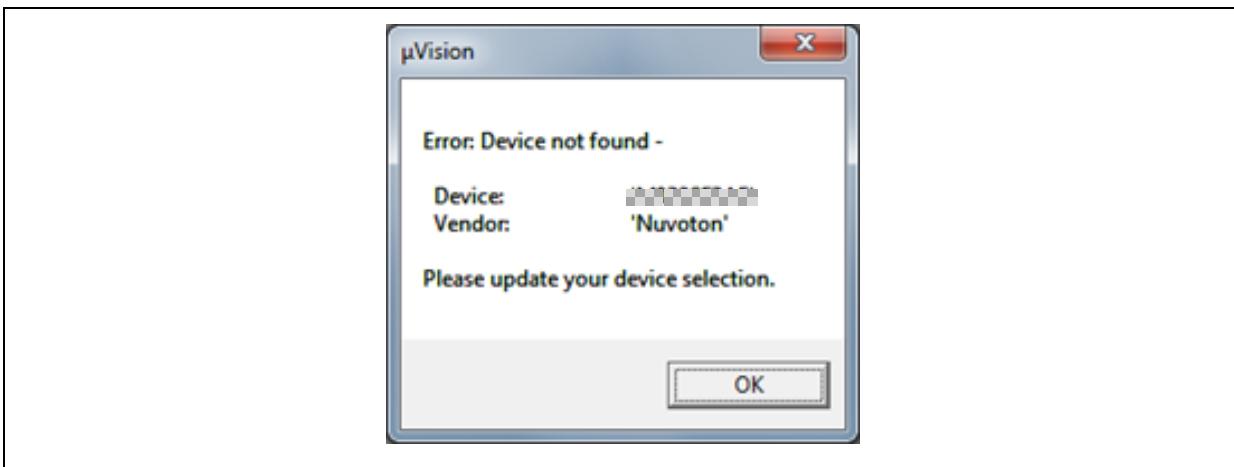


Figure 4-8 Warning Message of “Device not found”

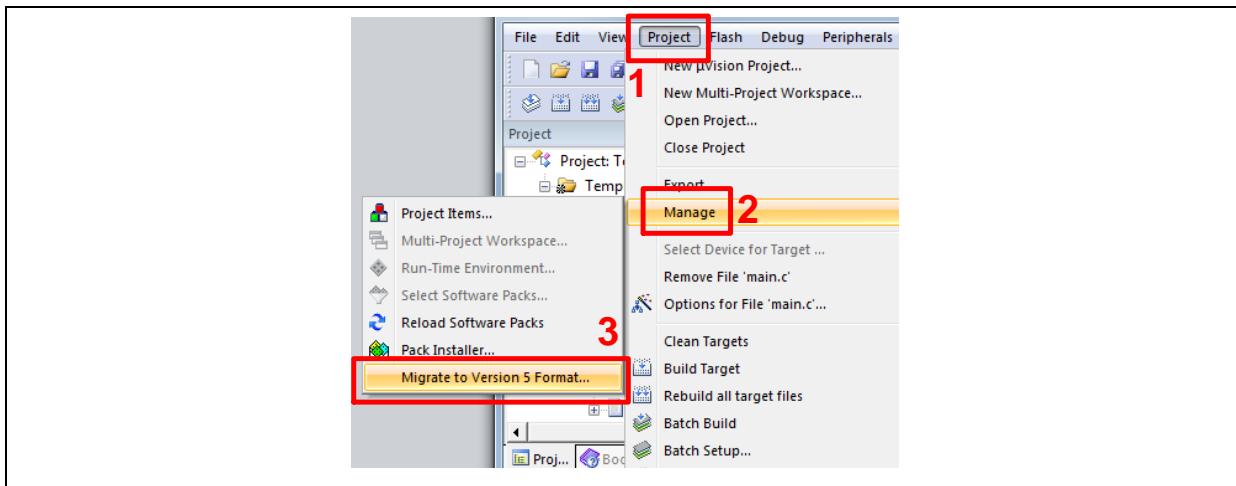


Figure 4-9 Project File Migrate to Version 5 Format

2. Make sure the debugger is “Nuvoton Nu-Link Debugger” as shown in Figure 4-10 and Figure 4-11.

**Note:** If the dropdown menu in Figure 4-10 does not contain “Nuvoton Nu-Link Debugger” item, please rework section 4.2.

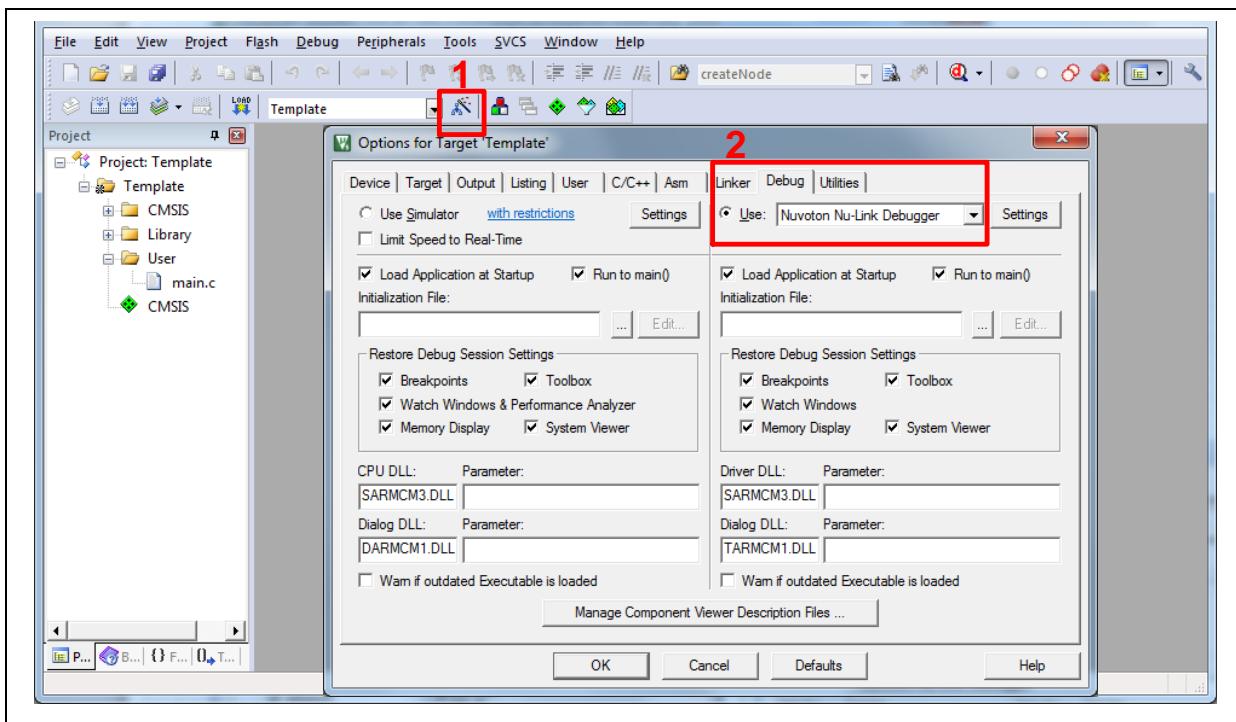


Figure 4-10 Debugger Setting in Options Window

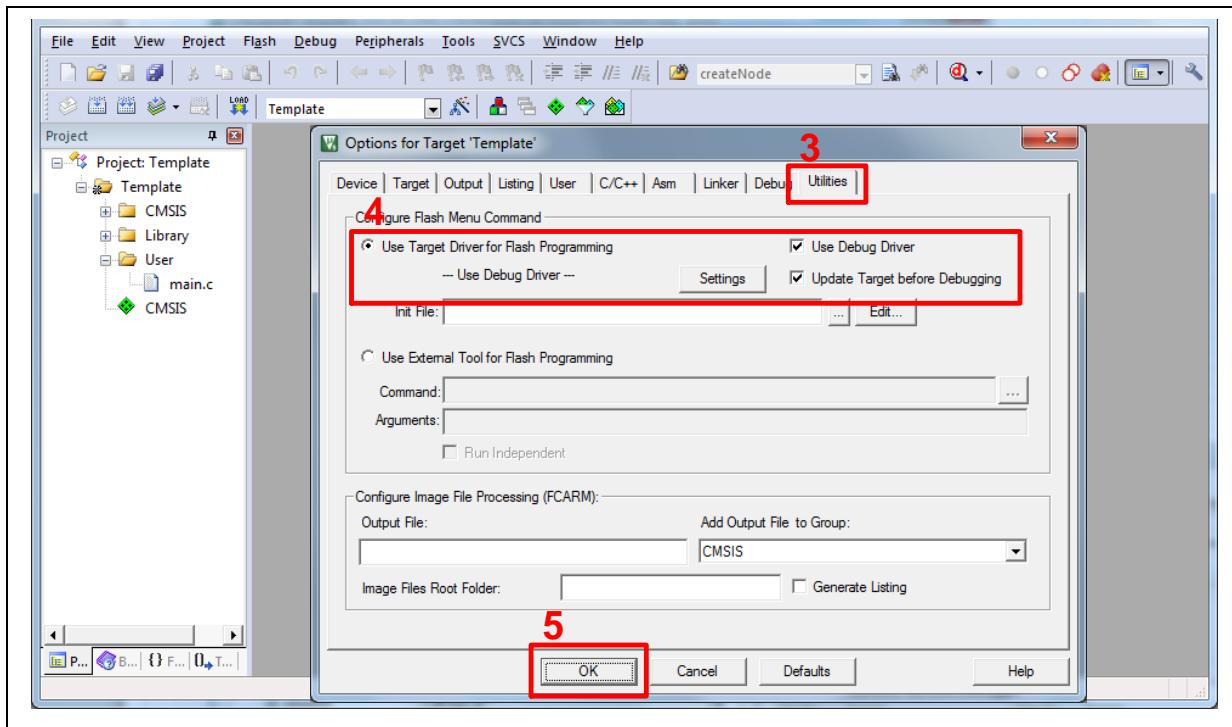


Figure 4-11 Programming Setting in Options Window

3. Rebuild all target files. After successfully compile the project, download code to the flash memory. Click “Start/Stop Debug Section” button can enter debug mode.

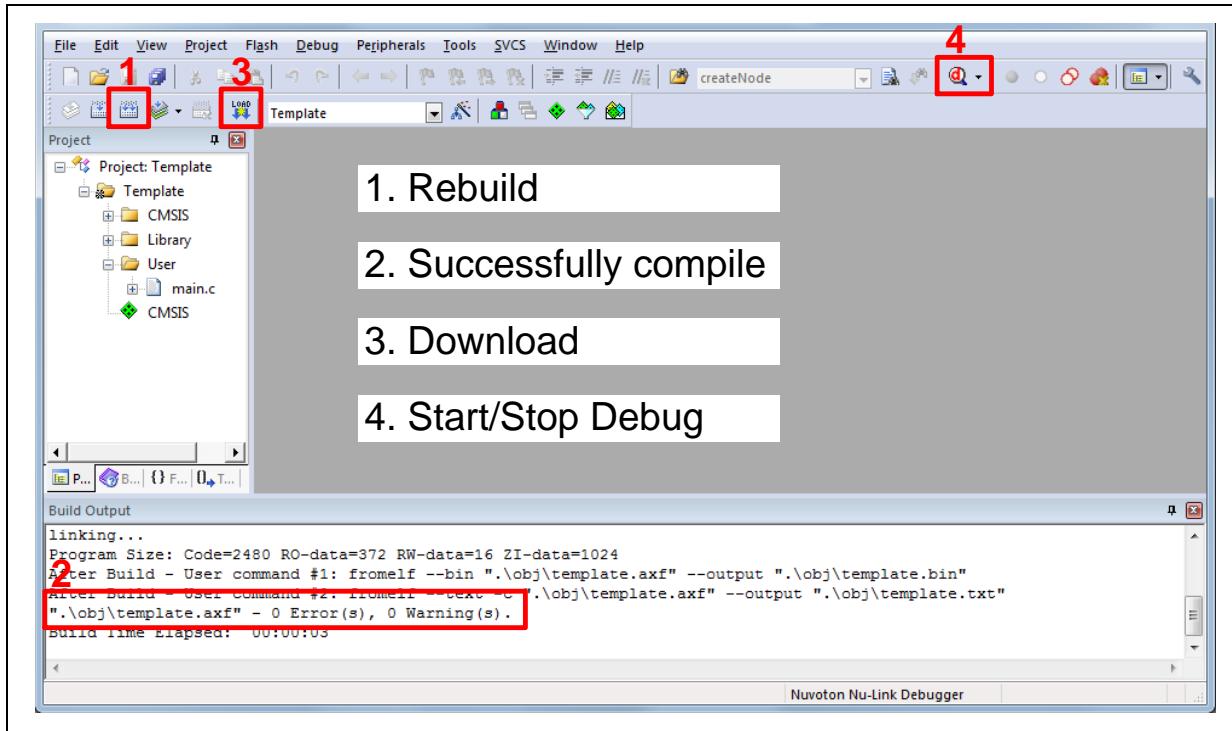


Figure 4-12 Compile and Download the Project

4. Figure 4-13 shows the debug mode under Keil MDK. Click “Run” and the debug message will be printed out as shown in Figure 4-14. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

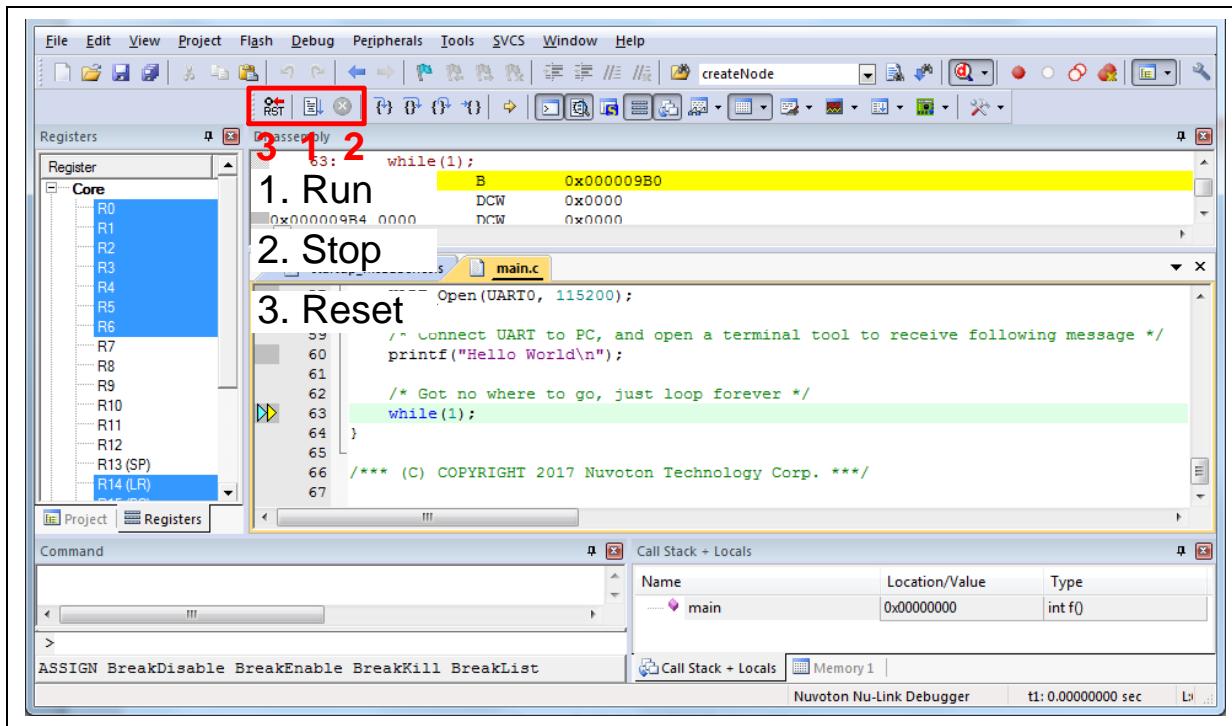


Figure 4-13 Keil MDK Debug Mode



Figure 4-14 Debug Message on Serial Port Terminal Windows

#### 4.6.2 IAR EWARM

This section provides steps to beginners on how to run a project by using IAR EWARM.

1. Double click the “Template.eww” to open the project.
2. Make sure the toolbar contain “Nu-Link” item as shown in Figure 4-15.

**Note:** If the toolbar does not contain “Nu-Link” item, please rework section 4.2.

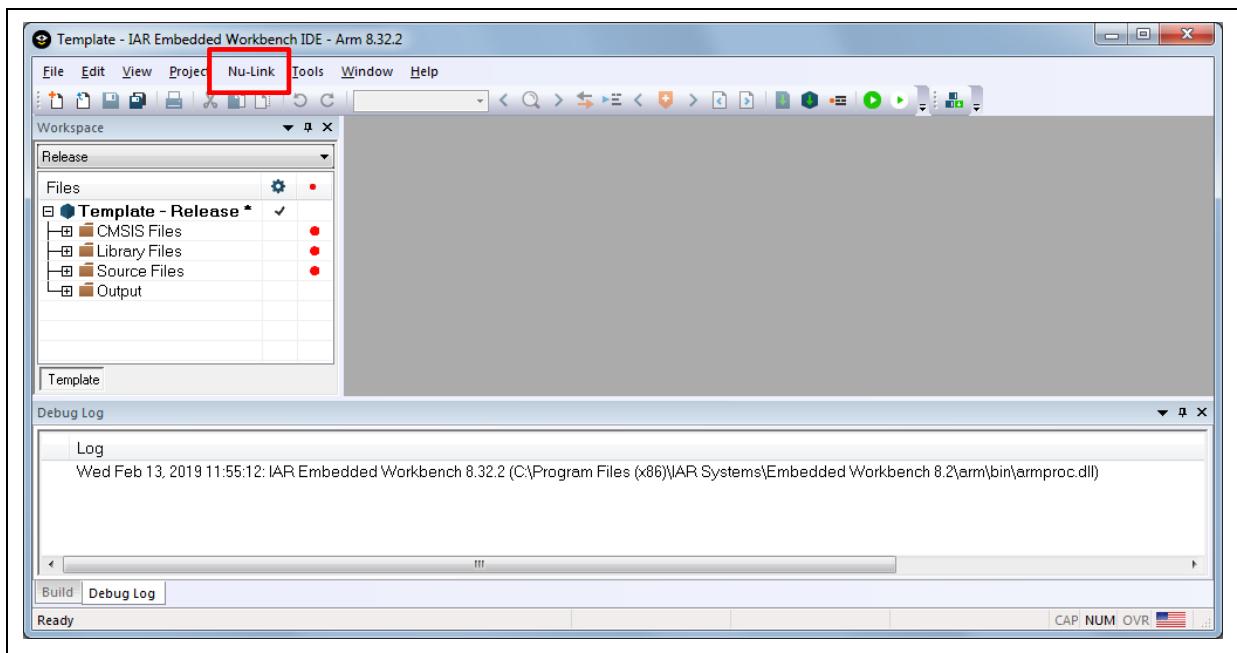


Figure 4-15 IAR EWARM Window

3. Make target file as presented in Figure 4-16. After successfully compile the project, download code to the flash memory and enter debug mode.

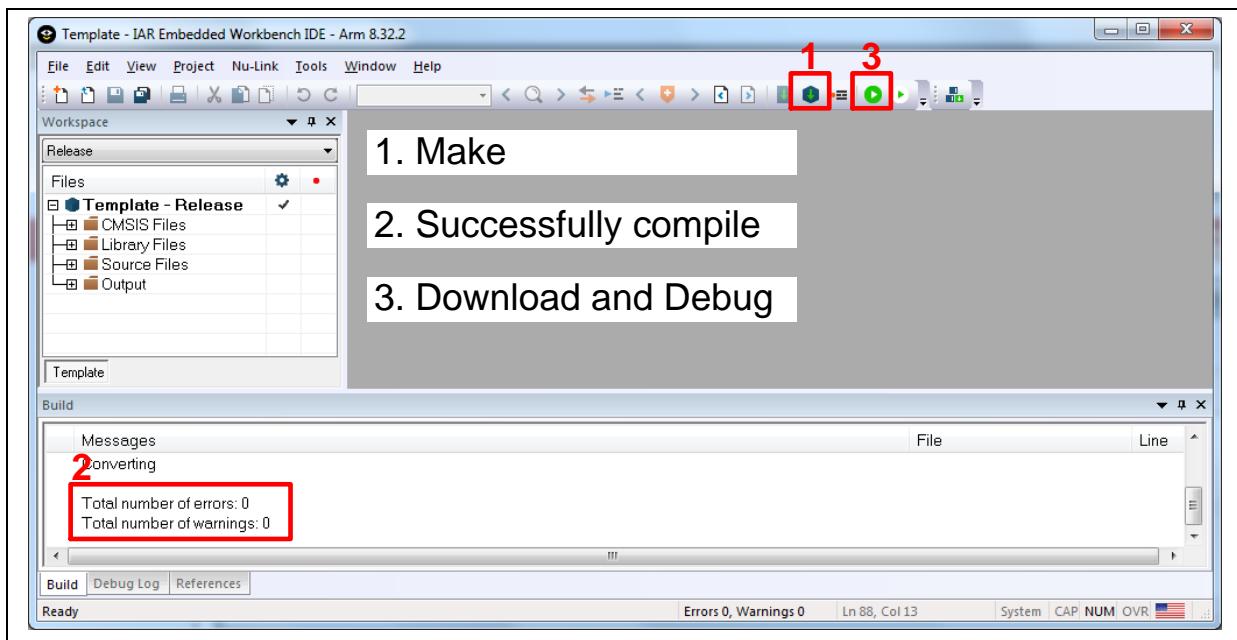


Figure 4-16 Compile and Download the Project

4. Figure 4-17 shows the debug mode under IAR EWARN. Click “Go” and the debug message will be printed out as shown in Figure 4-18. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

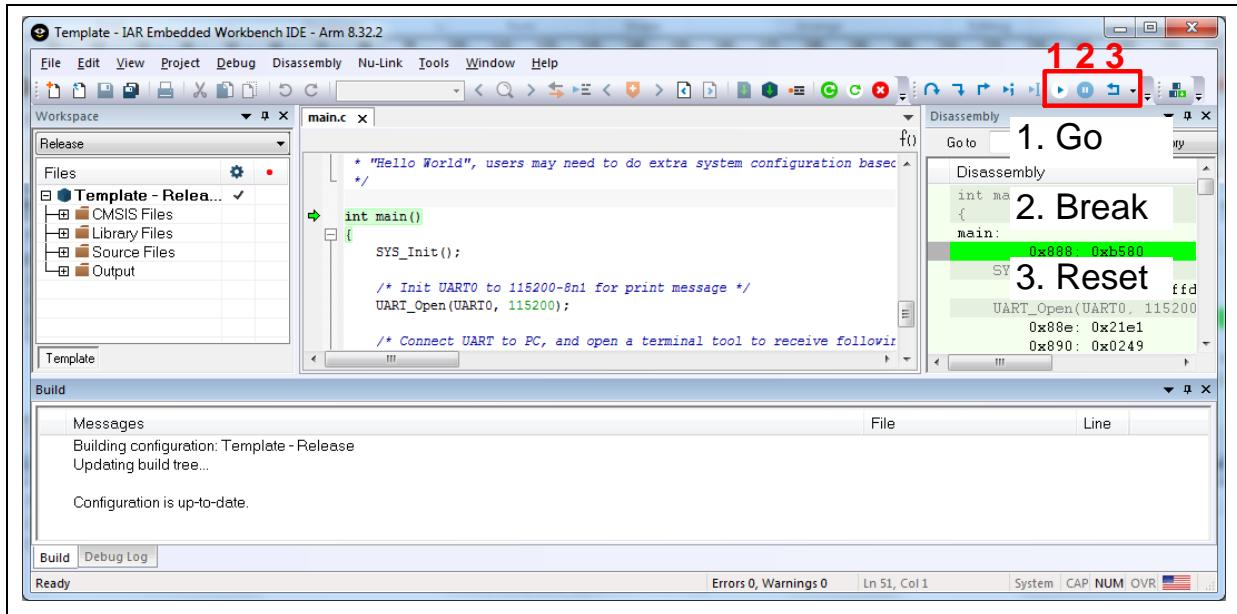


Figure 4-17 IAR EWARM Debug Mode



Figure 4-18 Debug Message on Serial Port Terminal Windows

#### 4.6.3 NuEclipse

This section provides steps to beginners on how to run a project by using NuEclipse. Please make sure the filenames and project folder path contain neither invalid character nor space.

1. Double-click NuEclipse.exe to open the toolchain.
2. Import the “Template” project by following the steps presented in Figure 4-19 and Figure 4-20.

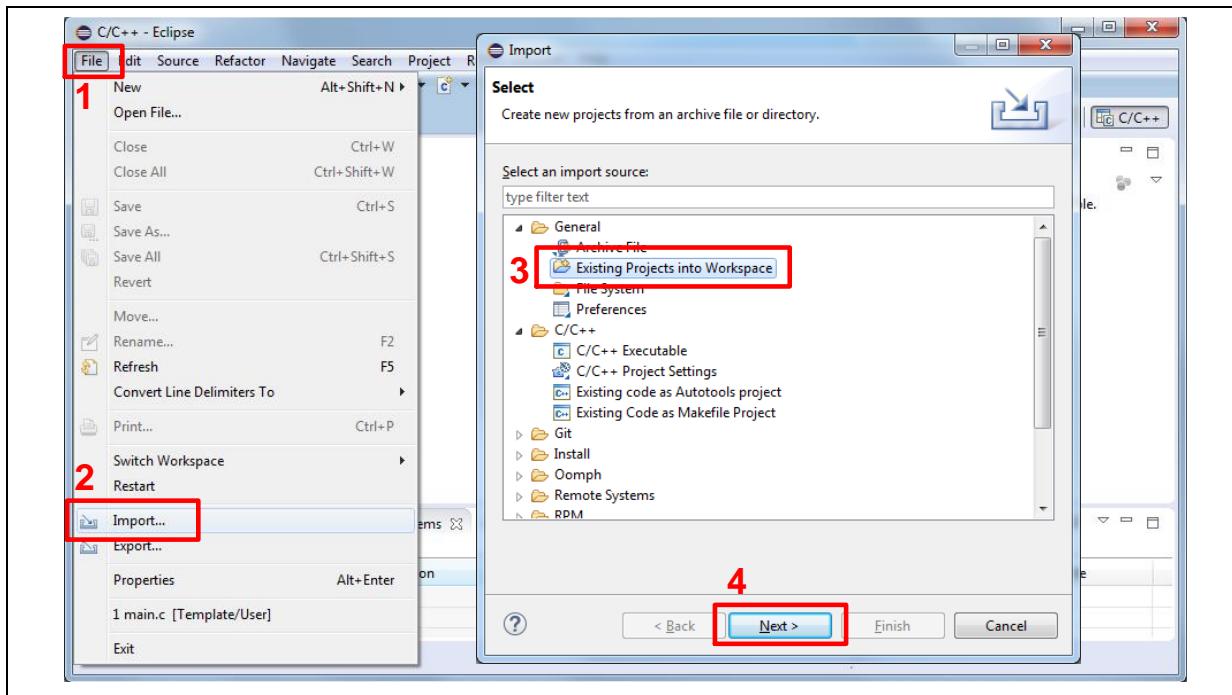


Figure 4-19 Import the Project in NuEclipse

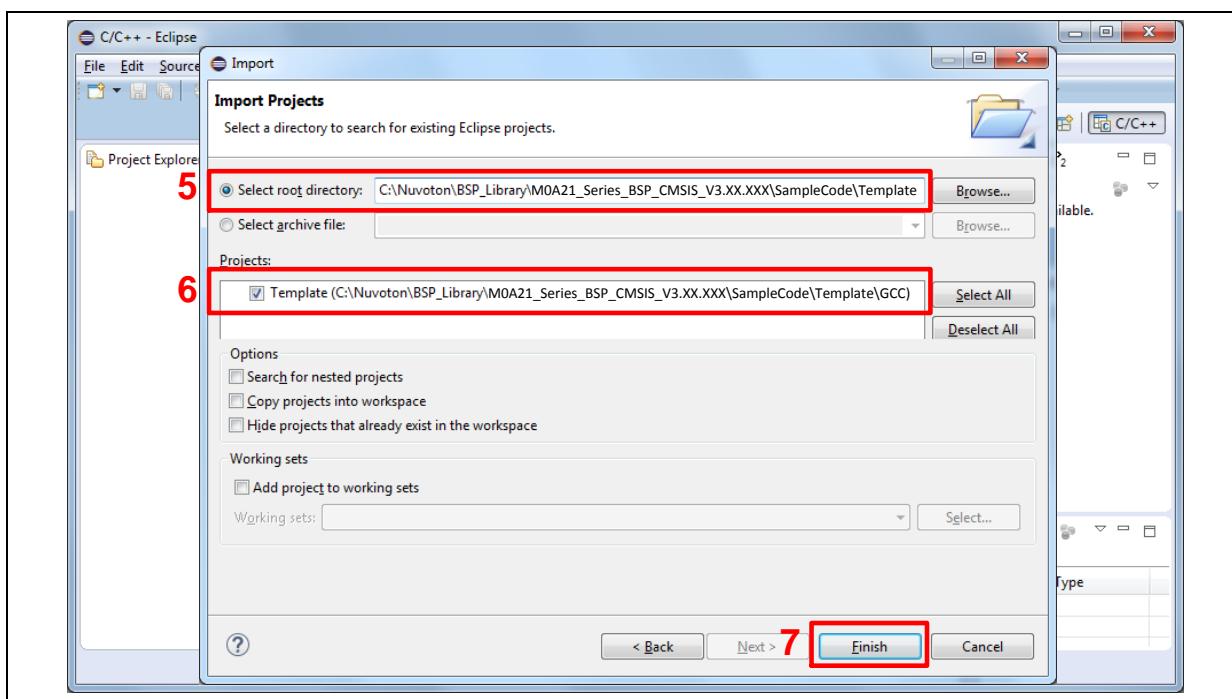


Figure 4-20 Import Projects Windows

3. Click the “Template” project and find the project properties as shown in Figure 4-21. Make sure the settings are the same as settings in Figure 4-22.

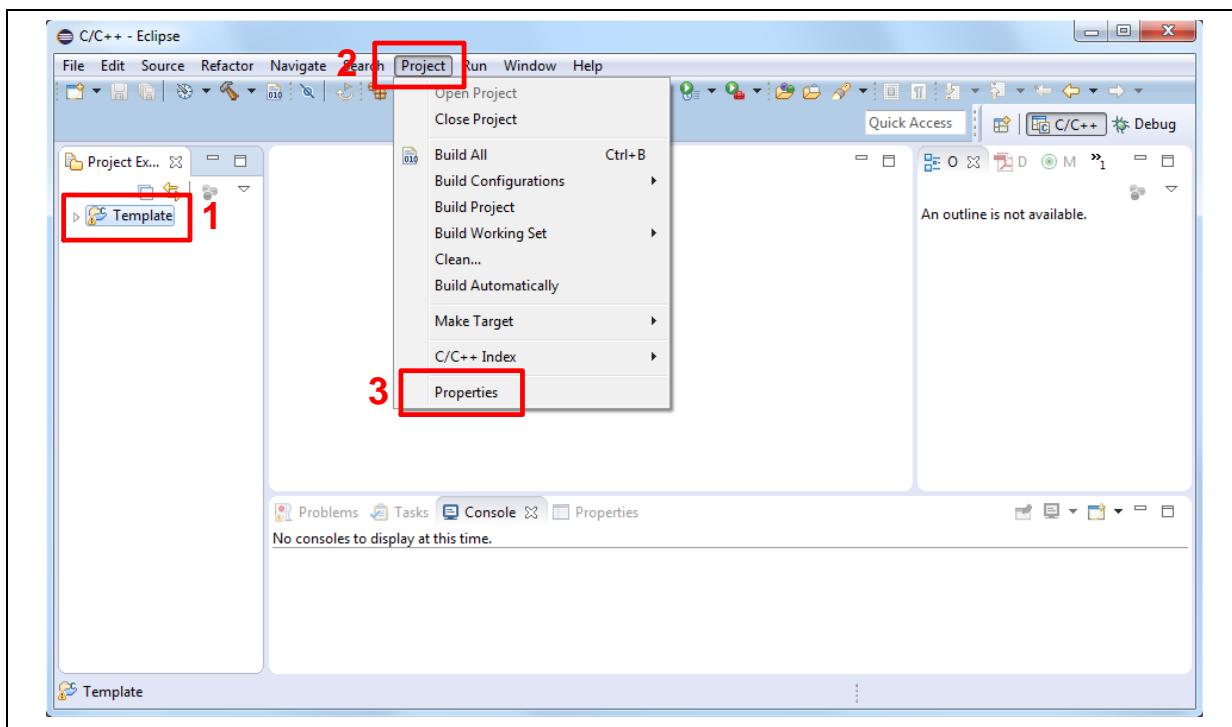


Figure 4-21 Open Project Properties Window

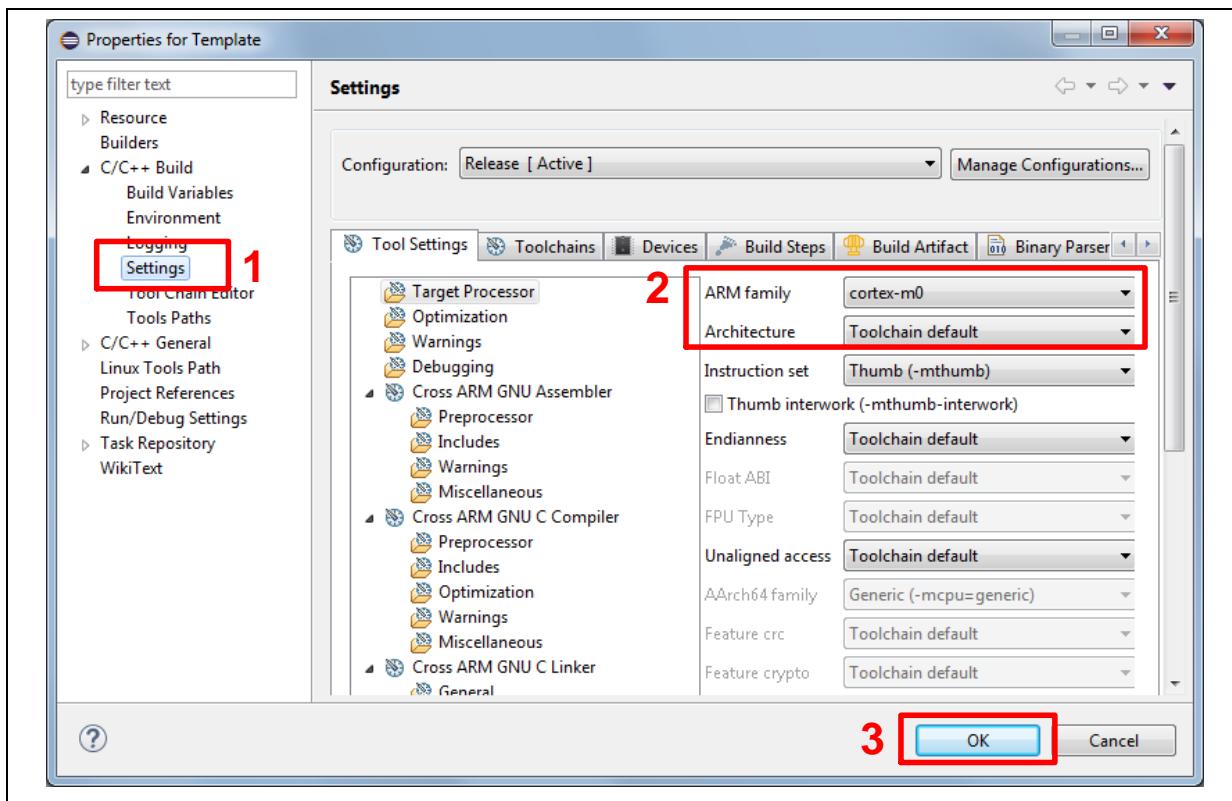


Figure 4-22 Project Properties Settings

4. Click the “Template” project and build the project.

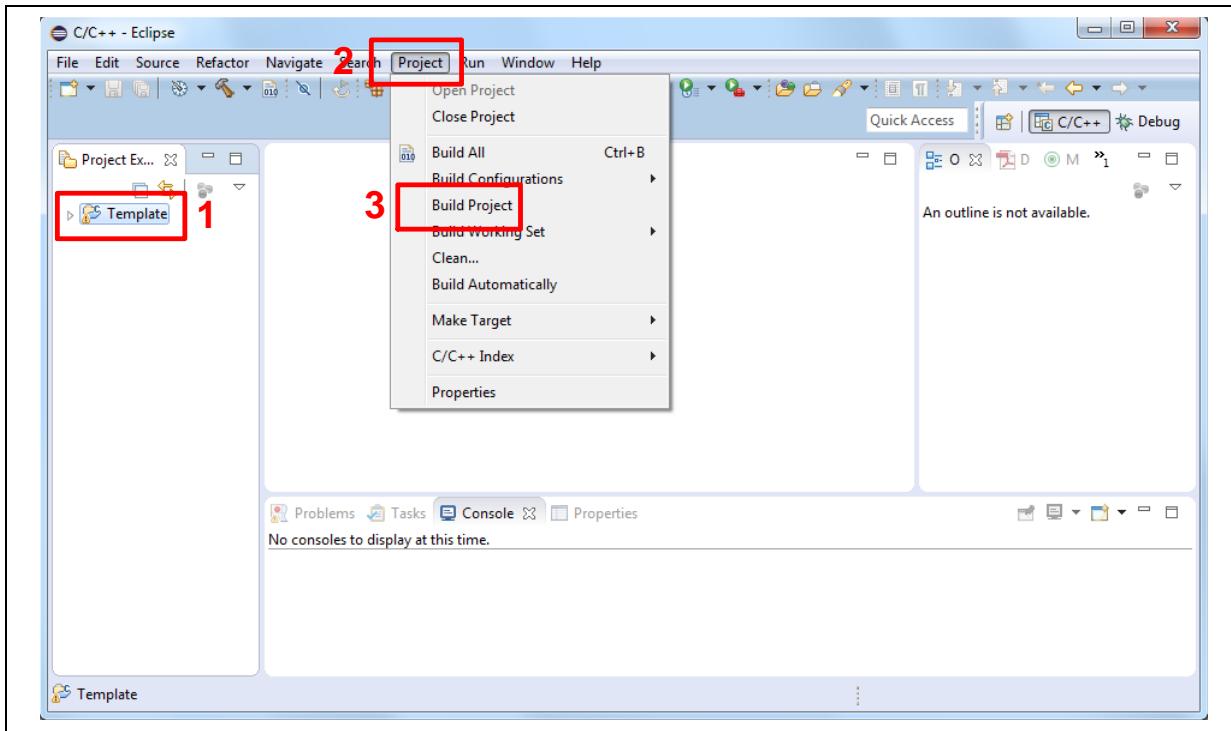


Figure 4-23 Build Project

5. After the project is built, click the “Template” project and set the “Debug Configuration” as shown in Figure 4-24. Follow the settings presented in Figure 4-25, Figure 4-26 and Figure 4-27 to enter debug mode.

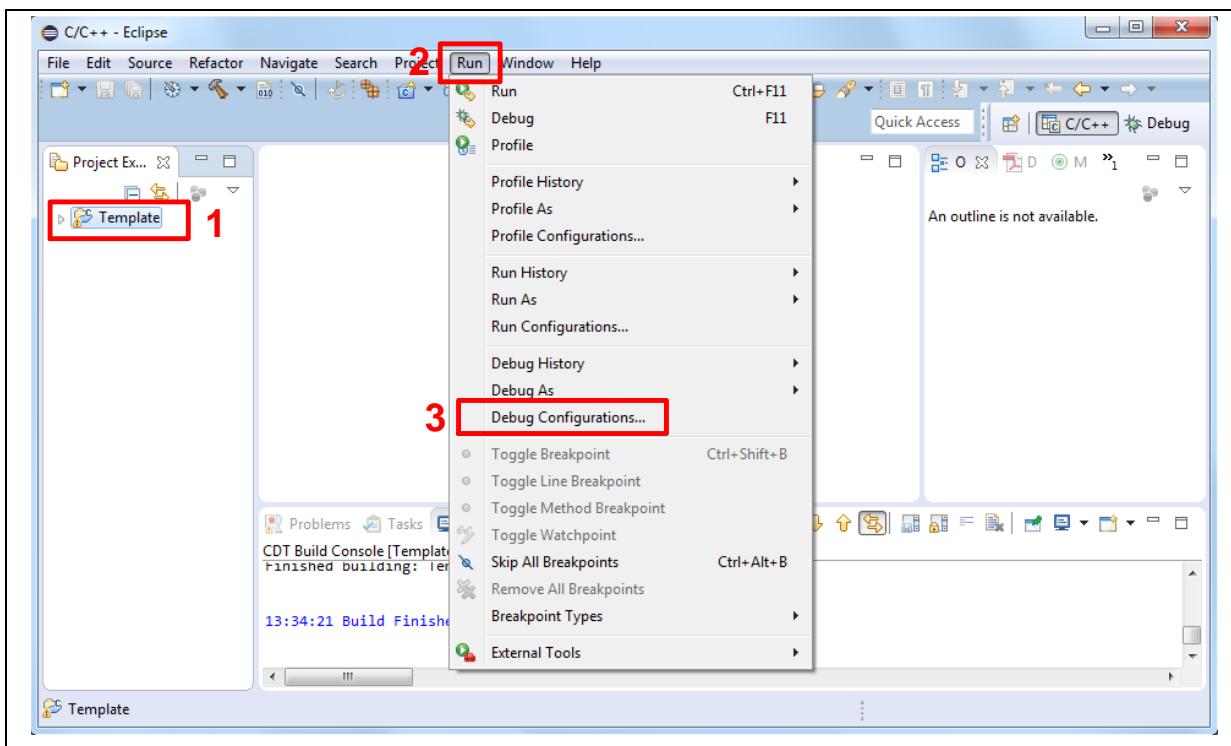


Figure 4-24 Open Debug Configuration

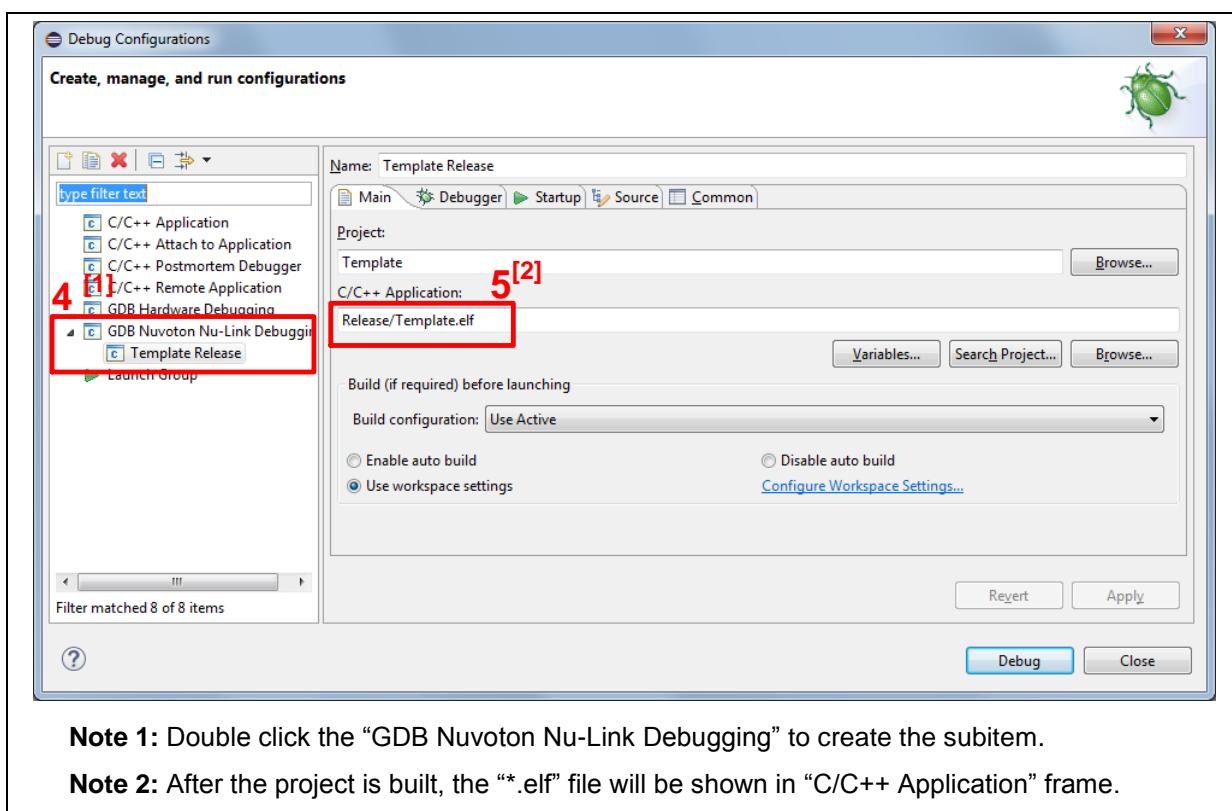


Figure 4-25 Main Tab Configuration

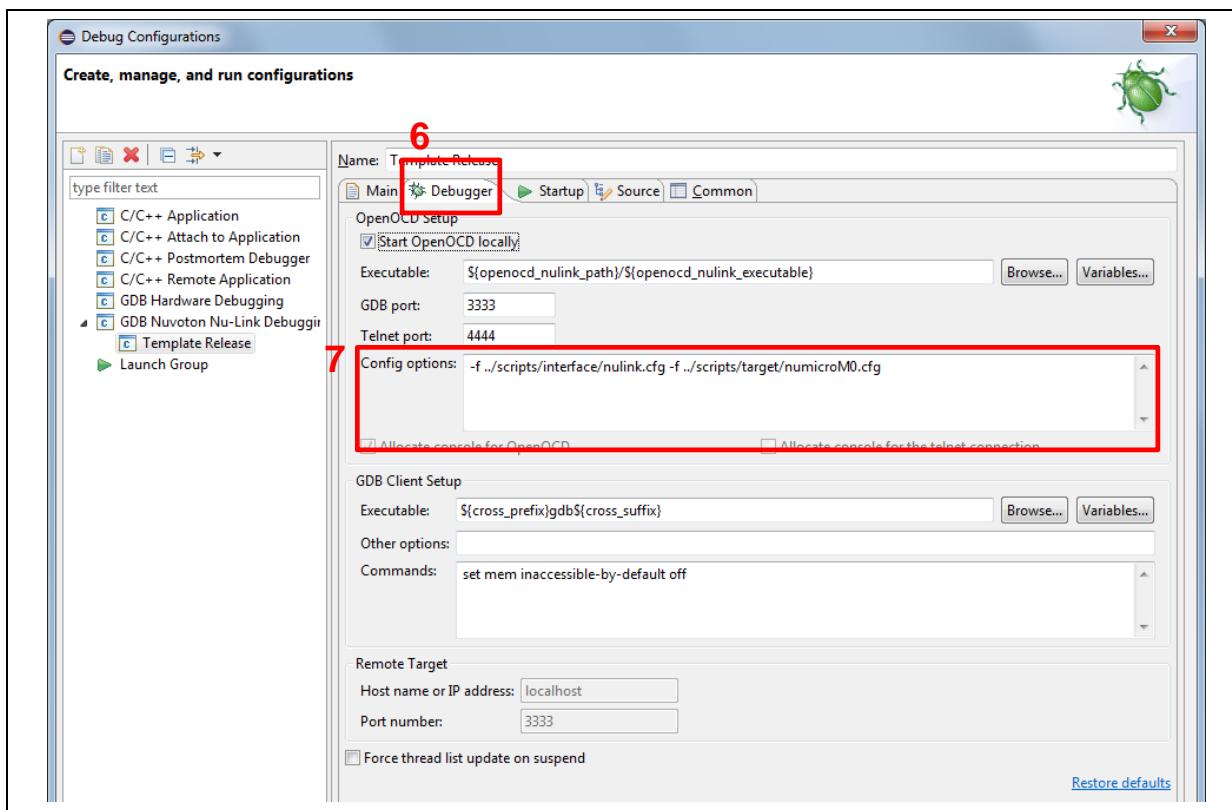


Figure 4-26 Debugger Tab Configuration

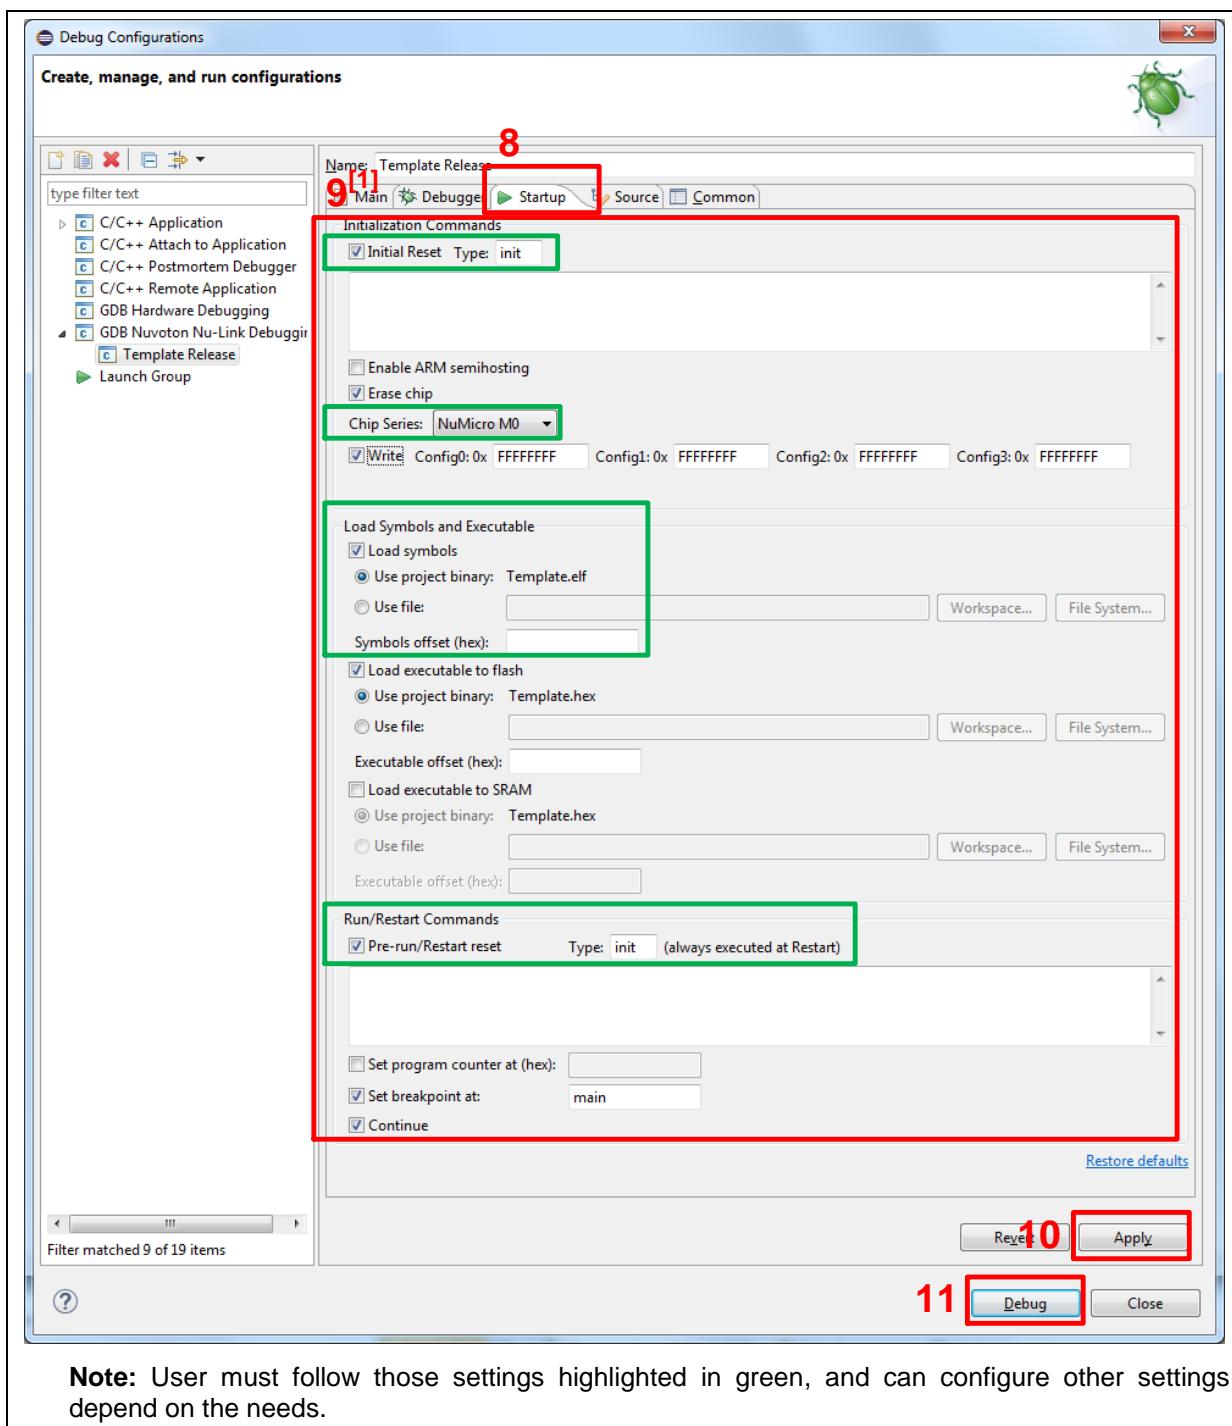


Figure 4-27 Startup Tab Configuration

6. Figure 4-28 shows the debug mode under NuEclipse. Click “Resume” and the debug message will be printed out as shown in Figure 4-29. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc. For more information about how to use NuEclipse, please refer to the NuEclipse User Manual.

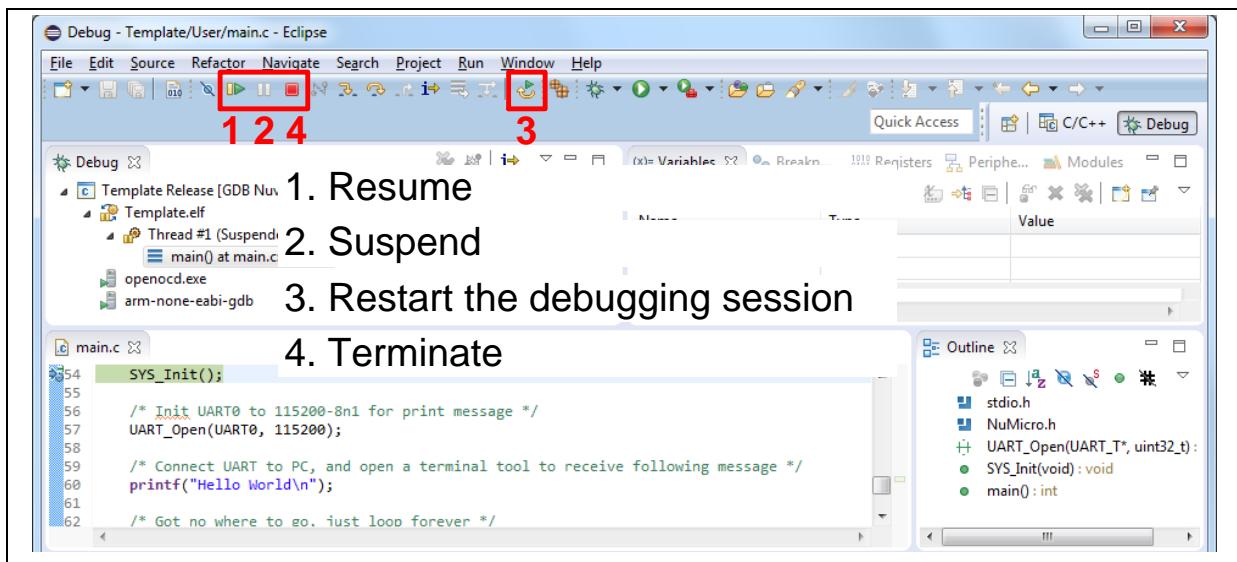


Figure 4-28 NuEclipse Debug Mode

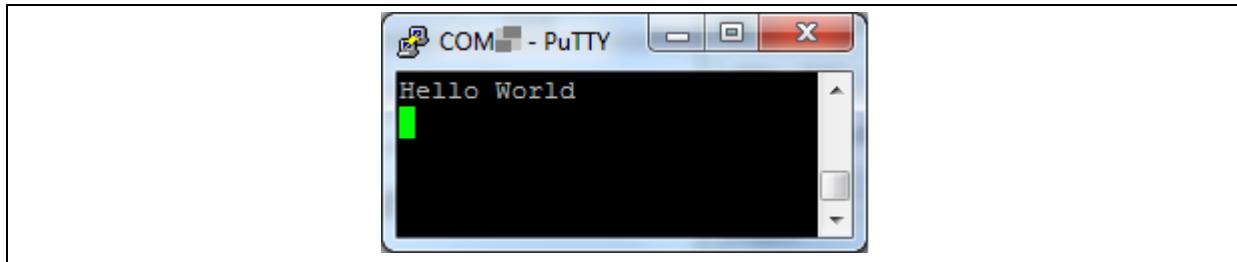


Figure 4-29 Debug Message on Serial Port Terminal Windows

## 5 NUMAKER-M0A23OC SCHEMATICS

### 5.1 Nu-Link2-Me

Figure 5-1 shows the Nu-Link2-Me circuit.

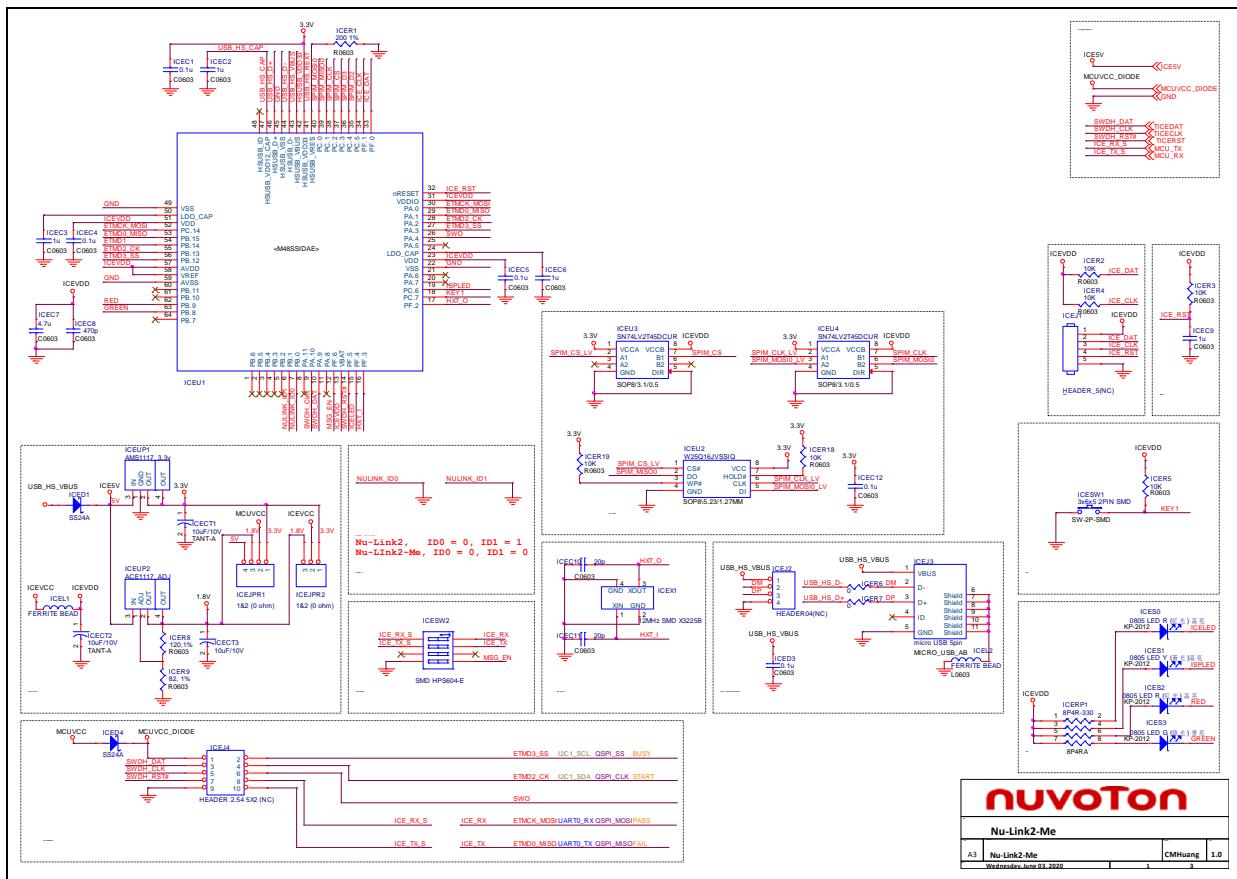


Figure 5-1 Nu-Link2-Me Circuit

## 5.2 M0A21 Platform

Figure 5-2 shows the M0A21 Platform circuit.

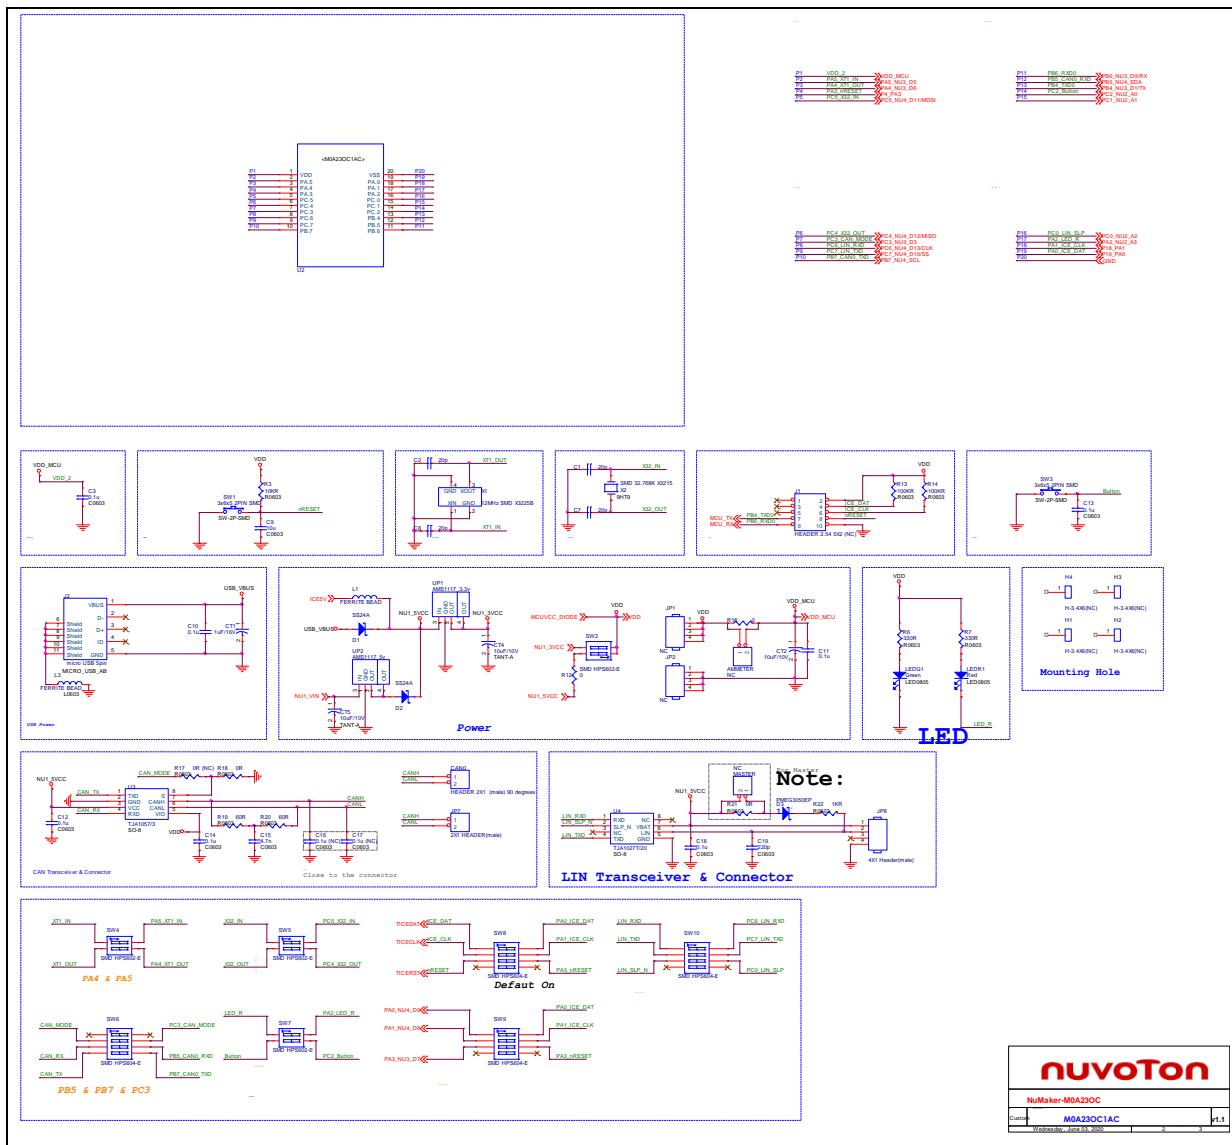


Figure 5-2 M0A21 platform Circuit

### 5.3 Extension Connector

Figure 5-3 shows extension connectors of NuMaker-M0A23OC.

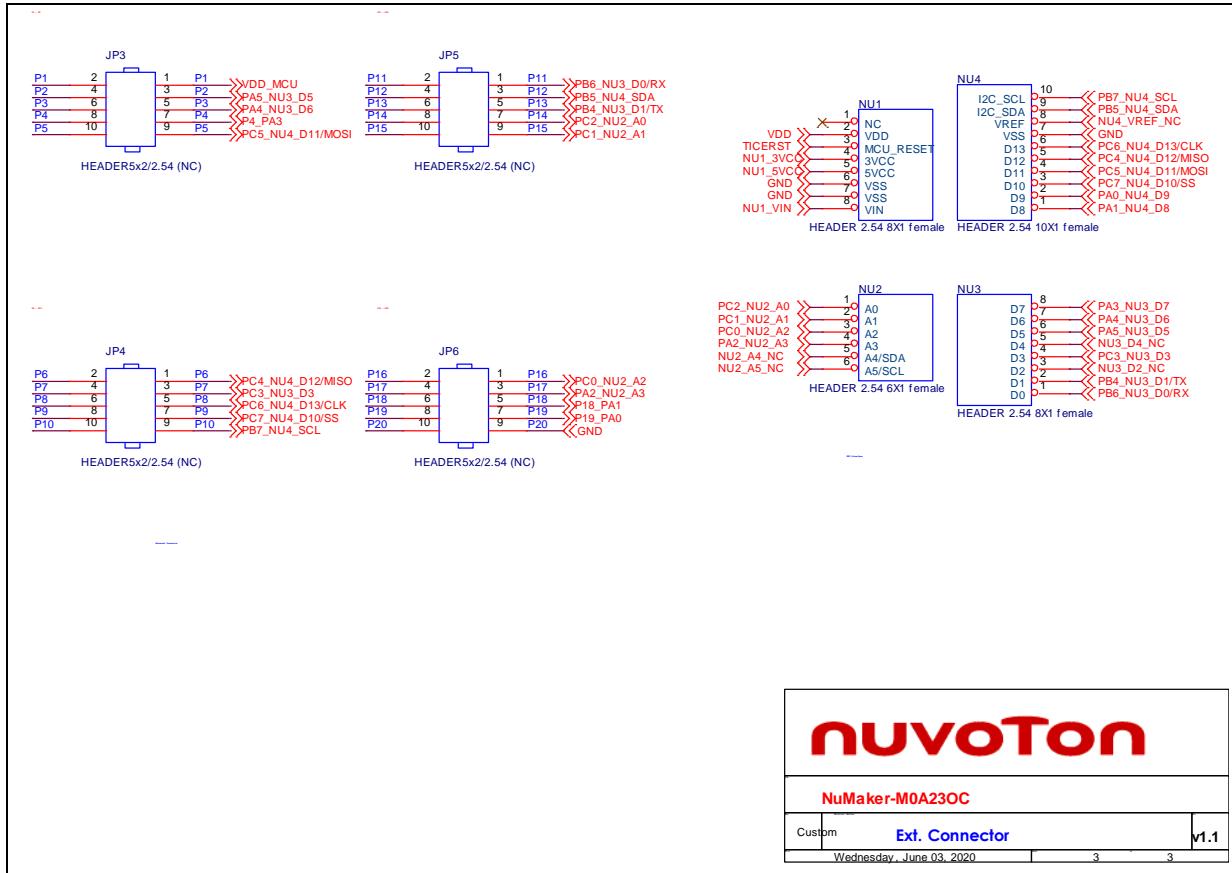


Figure 5-3 Extension Connectors Circuit

## 5.4 PCB Placement

Figure 5-4 and Figure 5-5 show the front and rear placement of NuMaker-M0A23OC.

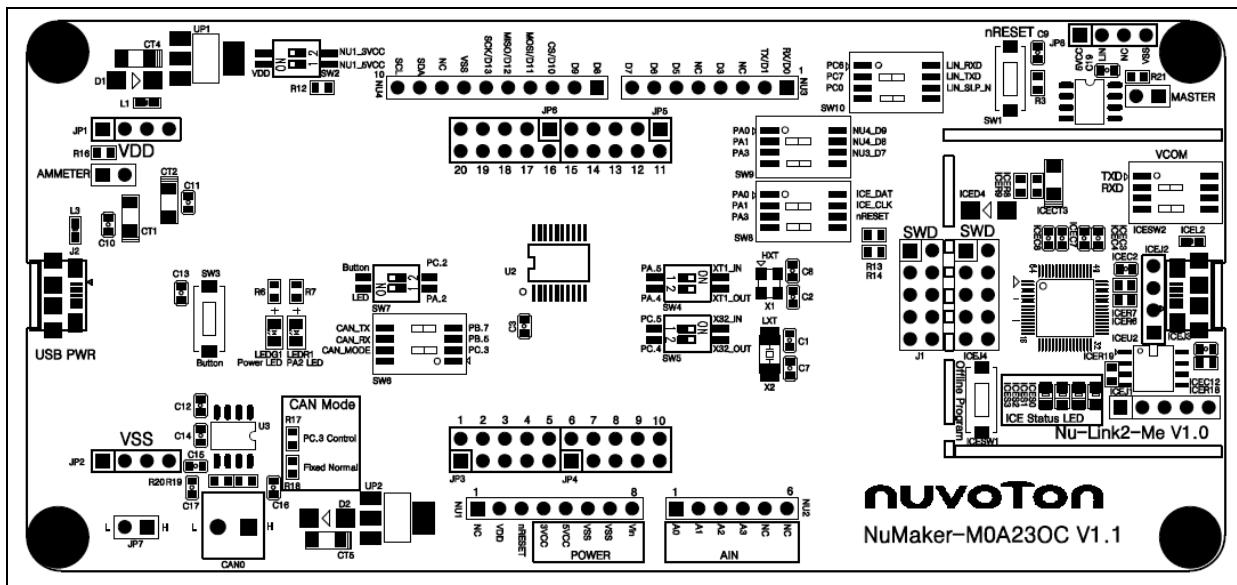


Figure 5-4 Front Placement

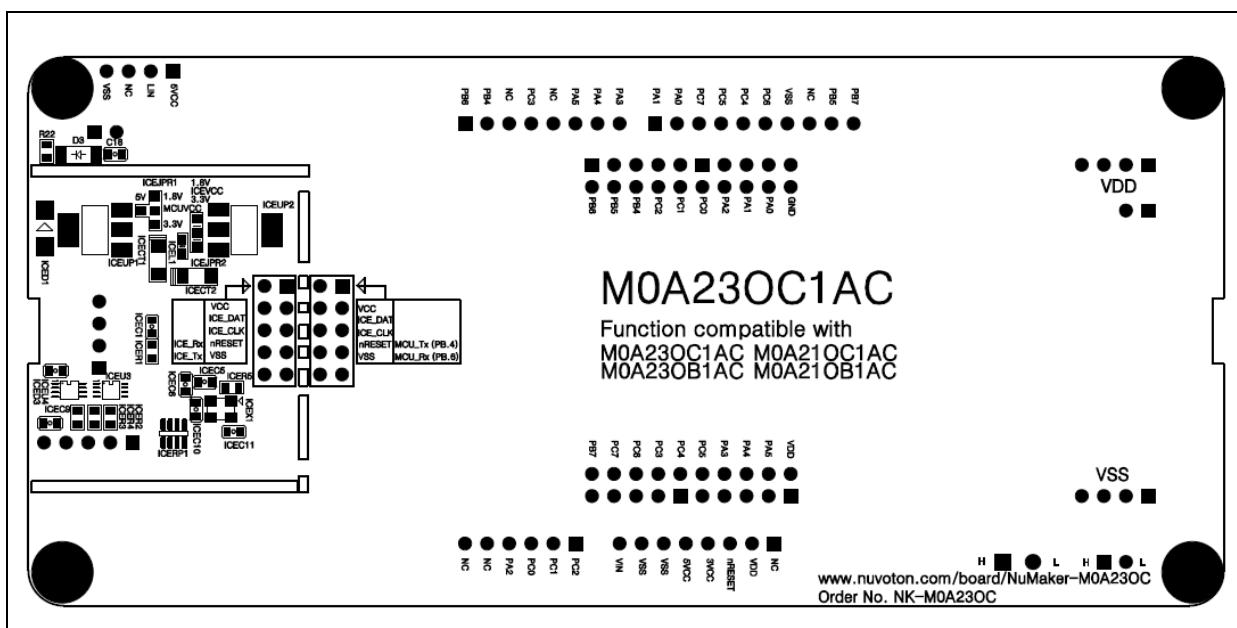


Figure 5-5 Rear Placement

## 6 REVISION HISTORY

| Date       | Revision | Description        |
|------------|----------|--------------------|
| 2020.07.23 | 1.01     | 1. Initial version |

### Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

---

Please note that all data and specifications are subject to change without notice.  
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.