

ARM® Cortex®-M**32-bit Microcontroller**

NuMaker-NUC131U

User Manual

NuMicro® NUC131SD2AEU

The information described in this document is the exclusive intellectual property of Nuvoton Technology Corporation and shall not be reproduced without permission from Nuvoton.

Nuvoton is providing this document only for reference purposes of NuMicro microcontroller based system design. Nuvoton assumes no responsibility for errors or omissions.

All data and specifications are subject to change without notice.

For additional information or questions, please contact: Nuvoton Technology Corporation.

www.nuvoton.com

Table of Contents

1	Overview.....	7
2	Features	8
3	Hardware Configuration.....	9
3.1	Front View.....	9
3.2	Rear View	10
3.3	Extension Connectors.....	11
3.3.1	Pin Assignment for Extension Connectors.....	11
3.3.2	Arduino UNO Compatible Extension Connectors	14
3.4	Power Supply Configuration	16
3.4.1	VIN Power Source	16
3.4.2	5 V Power Sources	16
3.4.3	3.3 V Power Sources.....	17
3.4.4	1.8 V Power Sources.....	17
3.4.5	Power Connectors	17
3.4.6	USB Connectors	18
3.4.7	Power Switches	18
3.4.8	Power Supply Models	19
3.5	CAN Bus Interface.....	22
3.6	External Reference Voltage Connector	22
3.7	Ammeter Connector	23
3.8	Push Buttons	23
3.9	LEDs	23
3.10	Nu-Link2-Me	24
3.10.1	VCOM Switches.....	24
3.10.2	Status LEDs	24
4	Quick Start	25
4.1	Toolchains Supporting	25
4.2	Nuvoton Nu-Link Driver Installation	25
4.3	BSP Firmware Download.....	27
4.4	Hardware Setup	27
4.5	Find the Example Project.....	29
4.6	Execute the Project under Toolchains.....	29
4.6.1	Keil MDK	29

4.6.2	IAR EWARM.....	33
4.6.3	NuEclipse	35
5	NuMaker-NUC131U Schematics	41
5.1	Nu-Link2-Me	41
5.2	NUC131U platform	42
5.3	Extension Connector	43
5.4	PCB Placement	44
6	REVISION HISTORY	45

List of Figures

Figure 1-1 NuMaker-NUC131U Development Board	7
Figure 3-1 Front View of NuMaker-NUC131U	9
Figure 3-2 Rear View of NuMaker-NUC131U	10
Figure 3-3 NUC131SD2AEU Extension Connectors	11
Figure 3-4 Arduino UNO Compatible Extension Connectors.....	14
Figure 3-5 External Power Supply Sources on Nu-Link2-Me	19
Figure 3-6 External Power Supply Sources on NUC131U platform	20
Figure 3-7 Detach the Nu-Link2-Me from NuMaker-NUC131U	21
Figure 3-8 Wiring between Ammeter Connector and Ammeter.....	23
Figure 4-1 Nu-Link USB Driver Installation Setup.....	25
Figure 4-2 Nu-Link USB Driver Installation	26
Figure 4-3 Open VCOM Function	27
Figure 4-4 ICE USB Connector.....	27
Figure 4-5 Device Manger.....	28
Figure 4-6 PuTTY Session Setting.....	28
Figure 4-7 Template Project Folder Path	29
Figure 4-8 Warning Message of “Device not found”	29
Figure 4-9 Project File Migrate to Version 5 Format.....	30
Figure 4-10 Debugger Setting in Options Window.....	30
Figure 4-11 Programming Setting in Options Window.....	31
Figure 4-12 Compile and Download the Project	31
Figure 4-13 Keil MDK Debug Mode	32
Figure 4-14 Debug Message on Serial Port Terminal Windows	32
Figure 4-15 IAR EWARM Window	33
Figure 4-16 Compile and Download the Project	33
Figure 4-17 IAR EWARM Debug Mode	34
Figure 4-18 Debug Message on Serial Port Terminal Windows	34
Figure 4-19 Import the Project in NuEclipse	35
Figure 4-20 Import Projects Windows	35
Figure 4-21 Open Project Properties Window	36
Figure 4-22 Project Properties Settings	36
Figure 4-23 Build Project.....	37
Figure 4-24 Open Debug Configuration	37
Figure 4-25 Main Tab Configuration	38
Figure 4-26 Debugger Tab Configuration	38
Figure 4-27 Startup Tab Configuration	39

Figure 4-28 NuEclipse Debug Mode	40
Figure 4-29 Debug Message on Serial Port Terminal Windows	40
Figure 5-1 Nu-Link2-Me Circuit	41
Figure 5-2 NUC131U platform Circuit	42
Figure 5-3 Extension Connectors Circuit	43
Figure 5-4 Front Placement	44
Figure 5-5 Rear Placement	44

List of Tables

Table 3-1 Extension Connectors.....	11
Table 3-2 NUC131SD2AEU Full-pin Extension Connectors and GPIO Function List.....	13
Table 3-3 Arduino UNO Extension Connectors and NUC131SD2AEU Mapping GPIO List	15
Table 3-4 Vin Power Source	16
Table 3-5 5 V Power Sources	16
Table 3-6 3.3 V Power Sources	17
Table 3-7 1.8 V Power Sources	17
Table 3-8 Power Connectors	17
Table 3-9 USB Connectors	18
Table 3-10 Power Switches	18
Table 3-11 Supply External Power through Nu-Link2-Me	19
Table 3-12 Supply External Power for NUC131U platform.....	21
Table 3-13 CAN Bus Interface	22
Table 3-14 U10 Pin Connection	22
Table 3-15 External Reference Voltage Connector	22
Table 3-16 Ammeter Connector.....	23
Table 3-17 Push-Buttons	23
Table 3-18 LEDs	23
Table 3-19 Nu-Link2-Me VCOM Switches	24
Table 3-20 Operation Status LED Patterns	24

1 OVERVIEW

The NuMaker-NUC131U is a development board for Nuvoton NuMicro® NUC131SD2AEU microcontrollers. The NuMaker-NUC131U consists of two parts: an NUC131U platform and an on-board Nu-Link2-Me debugger and programmer. The NuMaker-NUC131U is designed for project evaluation, prototype development and validation with power consumption monitoring function. The NuMaker-NUC131U is suitable for automotive and industrial control applications developing which need reliable and robust CAN communication.

The NUC131U platform is based on AEC-Q100 grade 2 qualified NuMicro® NUC131SD2AEU. For the development flexibility, the NUC131U platform provides the extension connectors of NUC131SD2AEU, the Arduino UNO compatible headers and able to adopt multiple power supply. Furthermore, the Nuvoton-designed ammeter connector can measure the power consumption instantly, which is essential for the prototype evaluation. Finally yet importantly, the NUC131U platform is implemented a CAN bus interface with an AEC-Q100 qualified high-speed CAN transceiver to realize new CAN design.

In addition to the M031 platform, there is an attached on-board debugger and programmer “Nu-Link2-Me”. The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming via SWD interface. The Nu-Link2-Me supports virtual COM (VCOM) port for printing debug messages on PC. Besides, the programming status could be shown on the built-in LEDs. Lastly, the Nu-Link2-Me could be detached from the development board and becoming a stand-alone mass production programmer.

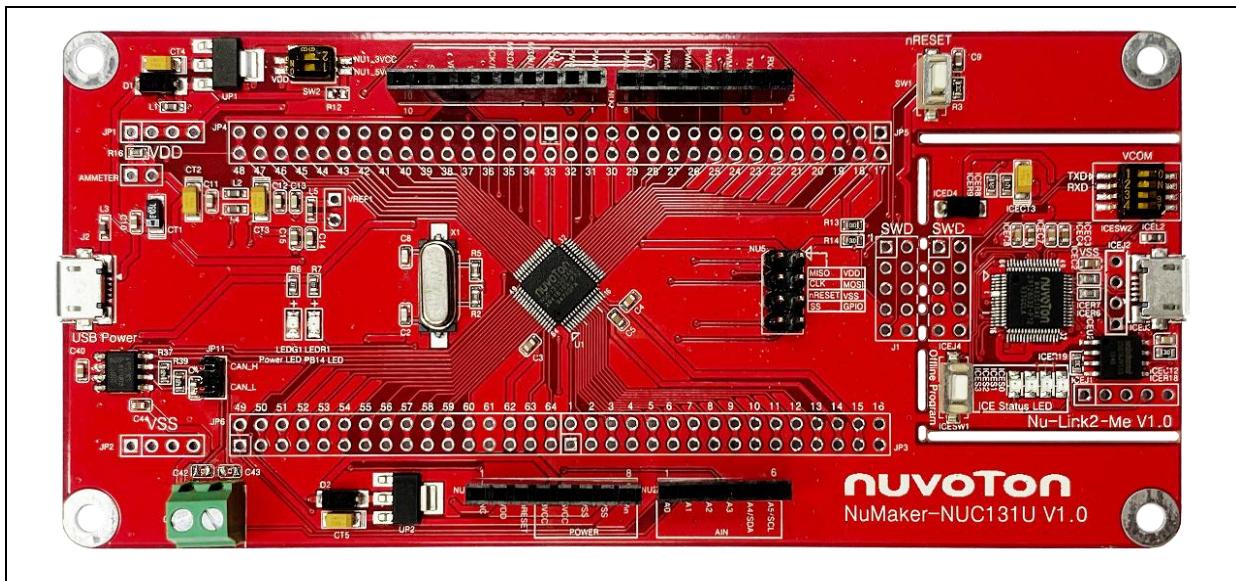


Figure 1-1 NuMaker-NUC131U Development Board

2 FEATURES

- NuMicro® NUC131SD2AEU microcontroller with function compatible with:
 - ◆ NUC131SC2AEU
- NUC131SD2AEU extension connectors
- Arduino UNO compatible extension connectors
- Ammeter connector for measuring the microcontroller's power consumption
- AEC-Q100 qualified high-speed CAN transceiver
- Flexible board power supply:
 - ◆ External V_{DD} power connector
 - ◆ Arduino UNO compatible extension connector Vin
 - ◆ USB connector on NUC131U platform
 - ◆ ICE USB connector on Nu-Link2-Me
- On-board Nu-Link2-Me debugger and programmer
 - ◆ Debug through SWD interface
 - ◆ On-line/off-line programming
 - ◆ Virtual COM port function

3 HARDWARE CONFIGURATION

3.1 Front View

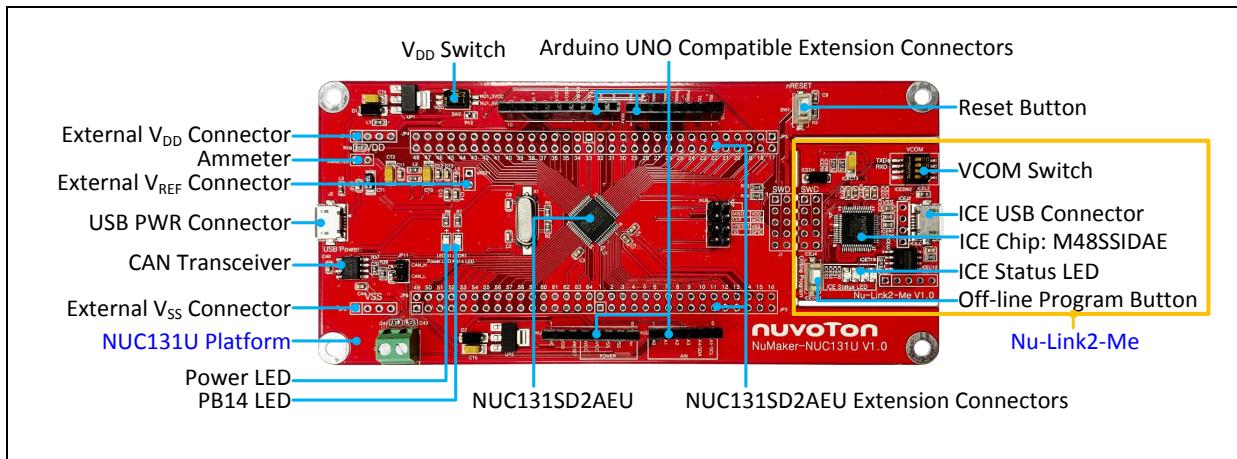


Figure 3-1 Front View of NuMaker-NUC131U

Figure 3-1 shows the main components and connectors from the front side of NuMaker-NUC131U. The following lists components and connectors from the front view:

- Target chip: NUC131SD2AEU (U1)
- USB PWR Connector (J2)
- Arduino UNO Compatible Extension Connectors (NU1, NU2, NU3, NU4)
- NUC131SD2AEU Extension Connectors (JP3, JP4, JP5 and JP6)
- CAN Transceiver TJA1057GT/3 (U10)
- External V_{DD} Power Connector (JP1)
- External V_{SS} Power Connector (JP2)
- External V_{REF} Connector (VREF1)
- V_{DD} Switch (SW2)
- Ammeter Connector (AMMETER)
- Reset Button (SW1)
- Power LED and PB14 LED (LEDG1 and LEDR1)
- Nu-Link2-Me
 - ◆ VCOM Switch (ICESW2)
 - ◆ ICE Chip: M48SSIDAE (ICEU2)
 - ◆ ICE USB Connector (ICEJ3)
 - ◆ ICE Status LED (ICES0,ICES1, ICES2, ICES3)
 - ◆ Off-line Program Button (ICESW1)

3.2 Rear View

Figure 3-2 shows the main components and connectors from the rear side of NuMaker-NUC131U.

The following lists components and connectors from the rear view:

- Nu-Link2-Me
 - ◆ MCVCC Power Switch (ICEJPR1)
 - ◆ ICEVCC Power Switch (ICEJPR2)

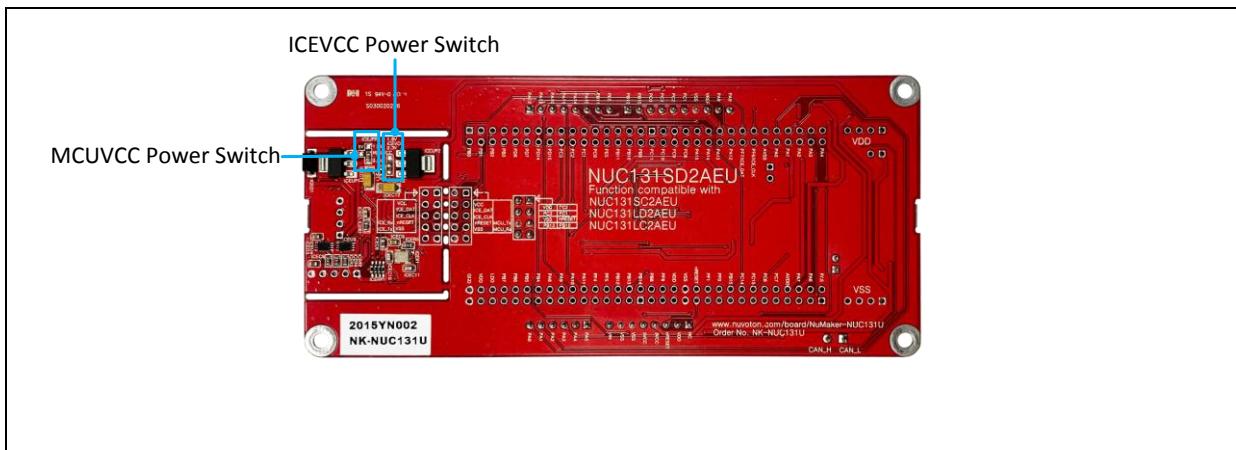


Figure 3-2 Rear View of NuMaker-NUC131U

3.3 Extension Connectors

Table 3-1 presents the extension connectors.

Connector	Description
JP3, JP4, JP5 and JP6	Full pins extension connectors on the NuMaker-NUC131U.
NU1, NU2, NU3 and NU4	Arduino UNO compatible pins on the NuMaker-NUC131U.

Table 3-1 Extension Connectors

3.3.1 Pin Assignment for Extension Connectors

The NuMaker-NUC131U provides the NUC131SD2AEU onboard and extension connectors (JP3, JP4, JP5 and JP6). The Figure 3-3 shows the NUC131SD2AEU extension connectors.

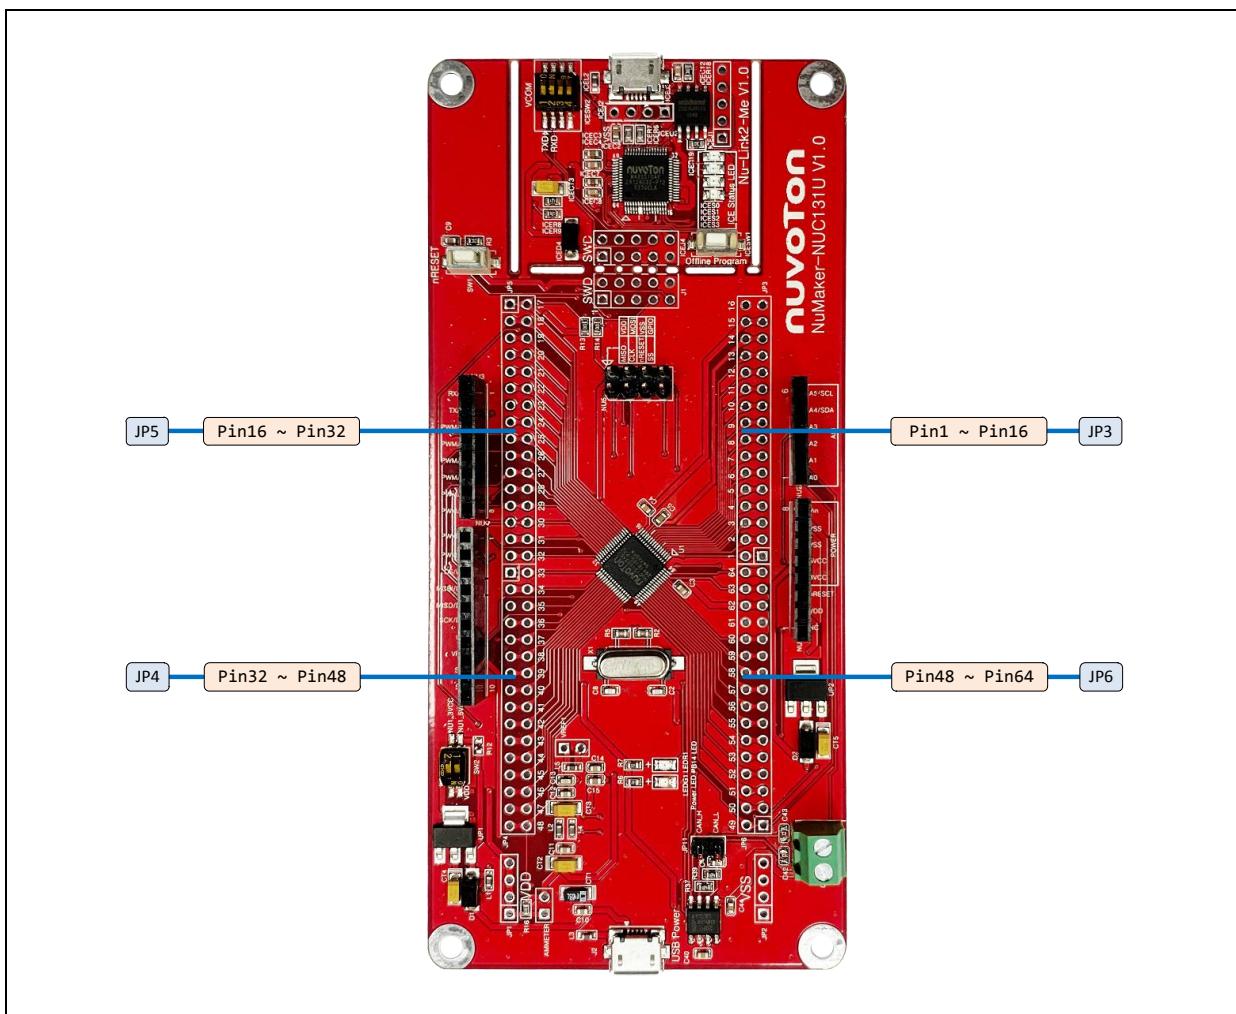


Figure 3-3 NUC131SD2AEU Extension Connectors

Header		NUC131SD2AEU	
		Pin No.	Function
JP3	JP3.1	JP3.2	1 PB.14/INT0
	JP3.3	JP3.4	2 PB.13
	JP3.5	JP3.6	3 PB.12/CLK0/BPWM1_CH3
	JP3.7	JP3.8	4 PF.5/I2C0_SCL/PWM1_CH5
	JP3.9	JP3.10	5 PF.4/I2C0_SDA/PWM1_CH4
	JP3.11	JP3.12	6 PA.11/I2C1_SCL/PWM1_CH3
	JP3.13	JP3.14	7 PA.10/I2C1_SDA/PWM1_CH2
	JP3.15	JP3.16	8 PA.9/I2C0_SCL/UART1_nCTS
	JP3.17	JP3.18	9 PA.8/I2C0_SDA/UART1_nRTS
	JP3.19	JP3.20	10 PB.4/UART1_RXD
	JP3.21	JP3.22	11 PB.5/UART1_TXD
	JP3.23	JP3.24	12 PB.6/UART1_nRTS
	JP3.25	JP3.26	13 PB.7/UART1_nCTS
	JP3.27	JP3.28	14 LDO_CAP
	JP3.29	JP3.30	15 VDD
	JP3.31	JP3.32	16 VSS
JP5	JP5.1	JP5.2	17 PB.0/UART0_RXD
	JP5.3	JP5.4	18 PB.1/UART0_TXD
	JP5.5	JP5.6	19 PB.2/UART0_nRTS/TM2_EXT/PWM1_BRAKE1/TM2
	JP5.7	JP5.8	20 PB.3/UART0_nCTS/TM3_EXT/PWM1_BRAKE0/TM3
	JP5.9	JP5.10	21 PD.6/CAN0_RXD/BPWM1_CH1
	JP5.11	JP5.12	22 PD.7/CAN0_TXD/BPWM1_CH0
	JP5.13	JP5.14	23 PD.14/UART2_RXD/BPWM0_CH5
	JP5.15	JP5.16	24 PD.15/UART2_TXD/BPWM0_CH4
	JP5.17	JP5.18	25 PC.3/SPI0_MOSI0/BPWM0_CH3
	JP5.19	JP5.20	26 PC.2/SPI0_MISO0/BPWM0_CH2
	JP5.21	JP5.22	27 PC.1/SPI0_CLK/BPWM0_CH1
	JP5.23	JP5.24	28 PC.0/SPI0_SS0/BPWM0_CH0
	JP5.25	JP5.26	29 PE.5/PWM0_CH5/TM1/TM1_EXT
	JP5.27	JP5.28	30 PB.11/TM3/PWM0_CH4
JP4	JP5.29	JP5.30	31 PB.10/TM2
	JP5.31	JP5.32	32 PB.9/TM1
	JP4.1	JP4.2	33 PC.11/PWM1_BRAKE1
JP4	JP4.3	JP4.4	34 PC.10/PWM1_BRAKE0
	JP4.5	JP4.6	35 PC.9/PWM0_BRAKE1

	JP4.7	JP4.8	36	PC.8/PWM0_BRAKE0
	JP4.9	JP4.10	37	PA.15/PWM0_CH3
	JP4.11	JP4.12	38	PA.14/PWM0_CH2
	JP4.13	JP4.14	39	PA.13/PWM0_CH1/UART5_TXD
	JP4.15	JP4.16	40	PA.12/PWM0_CH0/UART5_RXD
	JP4.17	JP4.18	41	PF.7/ICE_DAT
	JP4.19	JP4.20	42	PF.6/ICE_CLK
	JP4.21	JP4.22	43	AVSS
	JP4.23	JP4.24	44	PA.0/ADC_CH0/I2C1_SCL/UART5_TXD/PWM0_CH4
	JP4.25	JP4.26	45	PA.1/ADC_CH1/I2C1_SDA/UART5_RXD/PWM0_CH5
	JP4.27	JP4.28	46	PA.2/ADC_CH2/UART3_TXD/PWM1_CH0
	JP4.29	JP4.30	47	PA.3/ADC_CH3/UART3_RXD/PWM1_CH1
	JP4.15	JP4.32	48	PA.4/ADC_CH4
JP6	JP6.1	JP6.2	49	PA.5/ADC_CH5/UART3_RXD
	JP6.3	JP6.4	50	PA.6/ADC_CH6/UART3_TXD
	JP6.5	JP6.6	51	PA.7/ADC_CH7/VREF
	JP6.7	JP6.8	52	AVDD
	JP6.9	JP6.10	53	PC.7/UART4_RXD/I2C0_SCL/PWM0_BRAKE1
	JP6.11	JP6.12	54	PC.6/UART4_TXD/I2C0_SDA/PWM0_BRAKE0
	JP6.13	JP6.14	55	PC.15
	JP6.15	JP6.16	56	PC.14
	JP6.17	JP6.18	57	PB.15/INT1/TM0_TM0_EXT/BPWM1_CH5
	JP6.19	JP6.20	58	PF.0/XT1_OUT
	JP6.21	JP6.22	59	PF.1/XT1_IN
	JP6.23	JP6.24	60	nRESET
	JP6.25	JP6.26	61	VSS
	JP6.27	JP6.28	62	VDD
	JP6.29	JP6.30	63	PF.8/CLK0/BPWM1_CH4
	JP6.15	JP6.32	64	PB.8/TM0_STADC/CLK0/BPWM1_CH2

Table 3-2 NUC131SD2AEU Full-pin Extension Connectors and GPIO Function List

3.3.2 Arduino UNO Compatible Extension Connectors

Figure 3-4 shows the Arduino UNO compatible extension connectors.

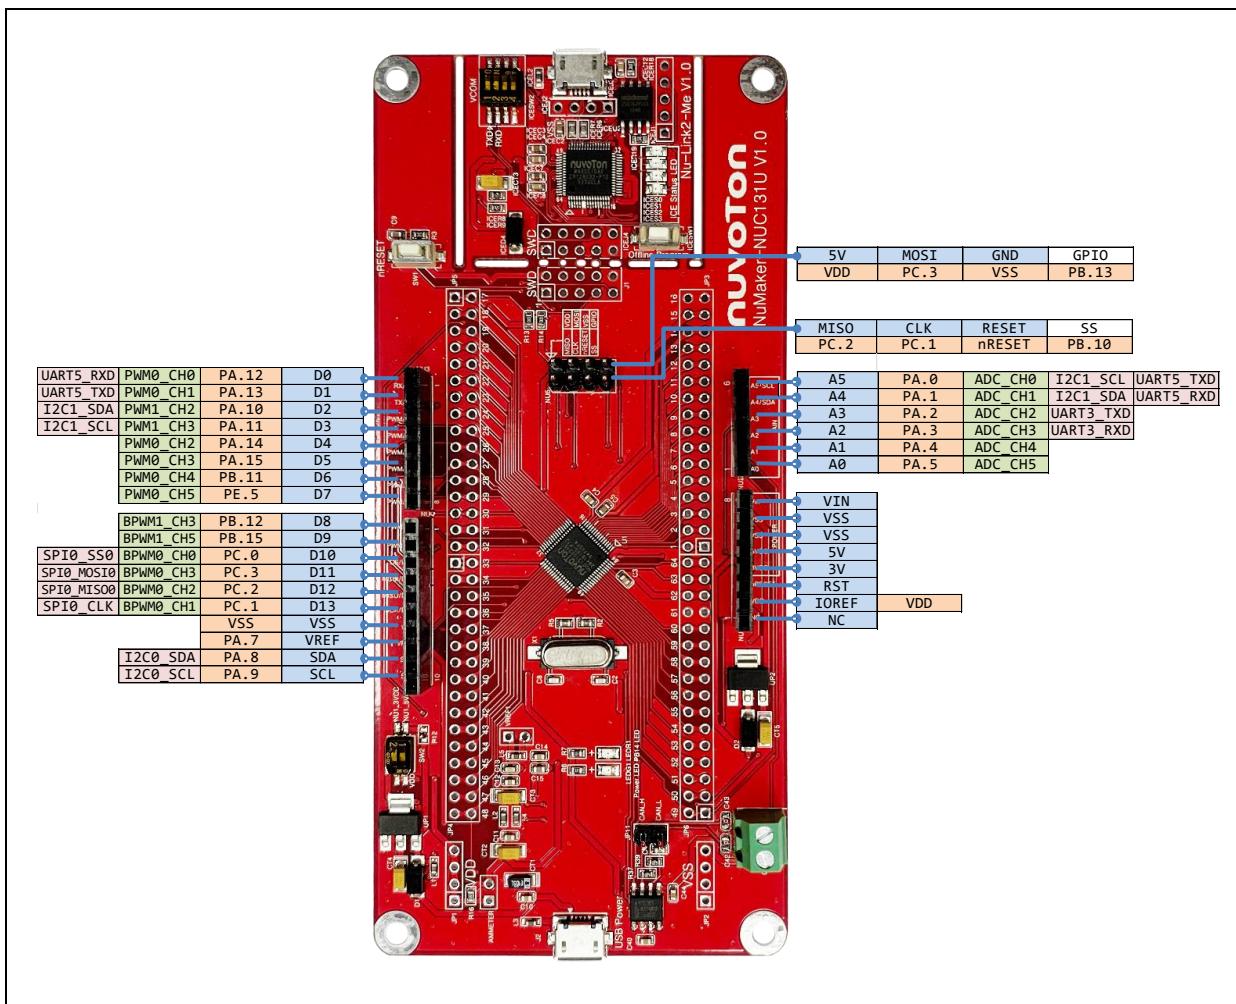


Figure 3-4 Arduino UNO Compatible Extension Connectors

Header		NuMaker-NUC131U		Header		NuMaker-NUC131U	
		Compatible to Arduino UNO	GPIO Pin of NUC131SD2AEU			Compatible to Arduino UNO	GPIO Pin of NUC131SD2AEU
N U 3	NU3.1	D0	PA.12	N U 2	NU2.6	A5	PA.0
	NU3.2	D1	PA.13		NU2.5	A4	PA.1
	NU3.3	D2	PA.10		NU2.4	A3	PA.2
	NU3.4	D3	PA.11		NU2.3	A2	PA.3
	NU3.5	D4	PA.14		NU2.2	A1	PA.4
	NU3.6	D5	PA.15		NU2.1	A0	PA.5
	NU3.7	D6	PB.11		NU1.8	VIN	-
	NU3.8	D7	PE.5		NU1.7	VSS	
	NU4.1	D8	PB.12		NU1.6	VSS	
N U 4	NU4.2	D9	PB.15		NU1.5	5V	
	NU4.3	D10	PC.0		NU1.4	3V	
	NU4.4	D11	PC.3		NU1.3	RST	nRESET
	NU4.5	D12	PC.2		NU1.2	IOREF	V _{DD}
	NU4.6	D13	PC.1		NU1.1	NC	-
	NU4.7	VSS	V _{SS}				
	NU4.8	VREF	PA.7				
	NU4.9	SDA	PA.8				
	NU4.10	SCL	PA.9				

Table 3-3 Arduino UNO Extension Connectors and NUC131SD2AEU Mapping GPIO List

3.4 Power Supply Configuration

The NuMaker-NUC131U is able to adopt multiple power supply. External power source include NU1 Vin (7 V to 12 V), VDD (depends on target chip operating voltage), and PC through USB connector. By using switches and voltage regulator, multiple power domains can be created on the NuMaker-NUC131U.

3.4.1 VIN Power Source

Table 3-4 presents the Vin power source.

Connector	Net Name in Schematic	Description
NU1 pin8	NU1_VIN	Board external power source, with voltage range from 7 V to 12 V. The voltage regulator UP2 converts the NU1 pin8 input voltage to 5 V and supplies it to NU1_5VCC.

Table 3-4 Vin Power Source

3.4.2 5 V Power Sources

Table 3-5 presents the 5 V power sources.

Connector	Net Name in Schematic	Description
ICEJ3	USB_HS_VBUS	ICE USB connector supplies 5 V power from PC to NUC131U platform and Nu-Link2-Me.
J2	USB_VBUS	USB connector on NuMaker-NUC131U supplies 5 V power from PC to NUC131U platform and Nu-Link2-Me.
NU1 pin5	NU1_5VCC	ICEJ3, J2 or NU1 pin8 supplies 5 V power to NU1 pin5. NU1 pin5 supplies 5 V power to target chip or Arduino adapter board.

Table 3-5 5 V Power Sources

3.4.3 3.3 V Power Sources

Table 3-6 presents the 3.3 V power sources.

Voltage Regulator	5 V Source	Description
ICEUP1	USB_HS_VBUS	ICEUP1 converts USB_HS_VBUS to 3.3 V and supplies 3.3 V to NUC131U platform or ICE chip.
UP1	USB_VBUS	UP1 converts USB_VBUS to 3.3 V and supplies 3.3 V to NUC131U platform. Note: SW2.2 (NU1 3VCC) should be switched to ON.
UP1	NU1_5VCC	UP1 converts NU1_5VCC to 3.3 V and supplies 3.3 V to NUC131U platform. Note: SW2.2 (NU1 3VCC) should be switched to ON.

Table 3-6 3.3 V Power Sources

3.4.4 1.8 V Power Sources

Table 3-7 presents the 1.8 V power source.

Voltage Regular	5V Source	Description
ICEUP2	USB_HS_VBUS	ICEUP2 converts USB_HS_VBUS to 1.8 V and supplies 1.8 V to NUC131U platform or ICE chip.

Table 3-7 1.8 V Power Sources

3.4.5 Power Connectors

Table 3-8 presents the power connectors.

Connector	Description
JP1	V_{DD} connector on the NuMaker-NUC131U.
JP2	V_{SS} connector on the NuMaker-NUC131U.

Table 3-8 Power Connectors

3.4.6 USB Connectors

Table 3-9 presents the USB connector.

Connector	Description
ICEJ3	ICE USB connector on Nu-Link2-Me for power supply, debugging and programming from PC.
J2	USB FS connector on NuMaker-NUC131U for power supply.

Table 3-9 USB Connectors

3.4.7 Power Switches

Table 3-10 presents the power switches.

Switch	Description
ICEJPR1	Configures the target chip operating voltage at 1.8 V / 3.3 V / 5 V.
ICEJPR2	Configures the ICE chip operating voltage at 1.8 V / 3.3 V.
SW2	Configures the target chip operating voltage at 3.3 V / 5 V.

Table 3-10 Power Switches

3.4.8 Power Supply Models

3.4.8.1 External Power Supply through Nu-Link2-Me to Target Chip

The external power supply source on Nu-Link2-Me is shown in Figure 3-5.

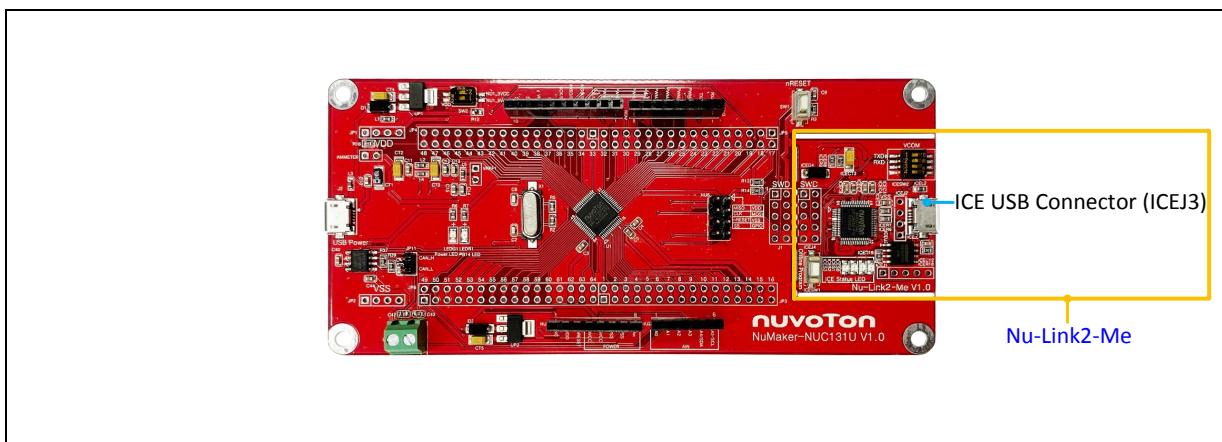


Figure 3-5 External Power Supply Sources on Nu-Link2-Me

To use ICEJ3 on Nu-Link2-Me as external power supply source, please follow the below steps:

1. Solder the resistor on ICEJPR1 (MCUVCC) depends on the target chip operating voltage.
2. Solder the resistor on ICEJPR2 (ICEVCC) depends on the ICE chip operating voltage.
3. Switch the SW2 to OFF.
4. Connect the external power supply to ICEJ3.

Table 3-11 presents all power models when supplies external power through Nu-Link2-Me. The Nu-Link2-Me external power sources are highlighted in yellow.

Model	Target Chip Voltage	ICEJ3	ICEJPR1 (MCUVCC) Selection ^[1]	ICEJPR2 (ICEVCC) Selection ^[2]	ICE Chip Voltage	SW2 Selection	J2	Vin	JP1
1	1.8 V	Connect to PC	1.8 V	1.8 V	1.8 V	Off	X	X	1.8 V output
2	3.3 V	Connect to PC	3.3 V (default)	3.3 V (default)	3.3 V	Off	X	X	3.3 V output
3	5 V	Connect to PC	5 V	3.3 V (default)	3.3 V	Off	X	X	5 V output
Note:									
1. 0 Ω should be soldered between ICEJPR1's MCVCC and 1.8 V / 3.3 V / 5 V. 2. 0 Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V. 3. X: Unused.									

Table 3-11 Supply External Power through Nu-Link2-Me

3.4.8.2 External Power Supply through NUC131U platform to Target Chip

The external power supply sources on NUC131U platform are shown in Figure 3-6.

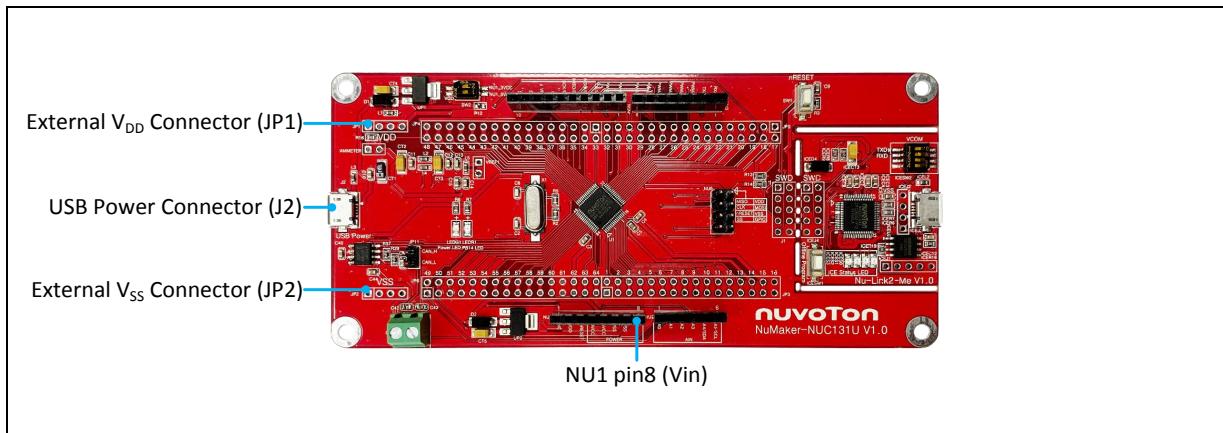


Figure 3-6 External Power Supply Sources on NUC131U platform

To use Vin or J2 as external power supply source, please follow the below steps:

1. Switch the SW2 depends on the target chip operating voltage.
2. Remove the resistor on ICEJPR1 (MCUVCC).
3. Solder the resistor on ICEJPR2 (ICEVCC) depends on the ICE chip operating voltage.
4. Connect the external power supply to Vin or J2.

To use JP1 as external power supply source, please follow the below steps:

1. Switch the SW2 to OFF.
2. Remove the resistor on ICEJPR1 (MCUVCC).
3. Solder the resistor on ICEJPR2 (ICEVCC) depends on the ICE chip operating voltage.
4. Connect ICEJ3 to PC.
5. Connect the external power supply to JP1.

To use Vin or J2 as external power supply source with Nu-Link2-Me detached from NuMaker-NUC131U, please follow the below steps:

1. Switch the SW2 depends on the target chip operating voltage.
2. Detach the Nu-Link2-Me from NuMaker-NUC131U.
3. Connect the external power supply to Vin or J2.

To use JP1 as external power supply source with Nu-Link2-Me detached from NuMaker-NUC131U, please follow the below steps:

1. Switch the SW2 to OFF.
2. Detach the Nu-Link2-Me from NuMaker-NUC131U.
3. Connect the external power supply to JP1.

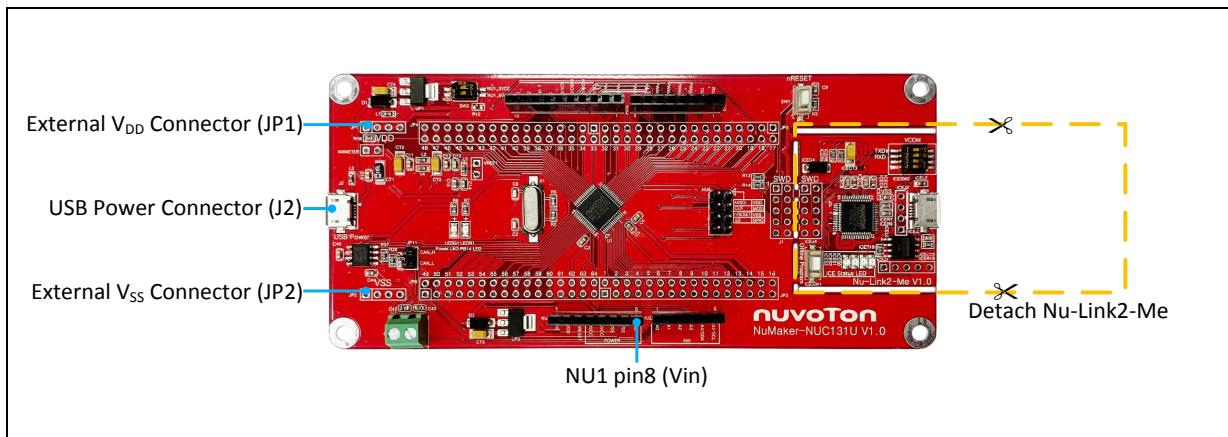


Figure 3-7 Detach the Nu-Link2-Me from NuMaker-NUC131U

Table 3-12 presents all power models when supplies external power through NUC131U platform. The NUC131U platform external power sources are highlighted in yellow.

Model	Target Chip Voltage	Vin ^[1]	J2 ^[1]	ICEJ3	SW2 Selection	JP1 ^[2]	ICEJPR1 (MCUVCC) Selection ^[3]	ICEJPR2 (ICEVCC) Selection ^[4]	ICE Chip Voltage ^[5]
4	3.3 V	7 V ~ 12 V Input	X	X	NU1 3VCC	3.3 V output	Remove resistor	3.3 V	3.3 V
5	3.3 V	X	Connect to PC	X	NU1 3VCC	3.3 V output	Remove resistor	3.3 V	3.3 V
6	5 V	7 V ~ 12 V Input	X	X	NU1 5VCC	5 V output	Remove resistor	3.3 V	3.3 V
7	5 V	X	Connect to PC	X	NU1 5VCC	5 V output	Remove resistor	3.3 V	3.3 V
8	1.8 V ~ 3.6 V	X	X	Connect to PC	OFF	DC Input 1.8 V ~ 3.6 V	Remove resistor	1.8 V / 3.3 V	1.8 V / 3.3 V
9	1.8 V ~ 3.6 V	X	X	Nu-Link2-Me removed	OFF	DC Input 1.8 V ~ 3.6 V	X	X	X

Note:

1. The Vin input voltage will be converted by voltage regulator UP2 to 5 V. Supply external power to Vin or J2 can provide 5 V to NU1 pin5 (5V) and 3.3 V to NU1 pin4 (3VCC).
2. JP1 external power input only provides voltage to target chip.
3. 0 Ω should be removed from ICEJPR1's MCUVCC and 1.8 V / 3.3 V / 5 V.
4. 0 Ω should be soldered between ICEJPR2's ICEVCC and 1.8 V / 3.3 V.
5. The ICE chip voltage should be close to the target chip voltage.
6. X: Unused

Table 3-12 Supply External Power for NUC131U platform

3.5 CAN Bus Interface

The NuMaker-NUC131U is implemented a CAN bus interface with an AEC-Q100 qualified high-speed CAN transceiver TJA1057GT/3. Table 3-13 presents the CAN bus interface and Table 3-14 presents the CAN transceiver pin connection.

Component	Description
U10	CAN transceiver TJA1057GT/3. For more information, please refer to TJA1057 product data sheet.
CAN1	CAN bus line connector. Connect to U10 pin6 and pin7.
JP11	CAN bus line connector. Connect to U10 pin6 and pin7.

Table 3-13 CAN Bus Interface

U10		
Pin	Function	Description
1	TXD	Connects to target chip PD.7 (CAN0_TXD).
2	GND	Ground
3	V _{CC}	Connects to NU1_5VCC for transceiver power supply.
4	RXD	Connects to target chip PD.6 (CAN0_RXD).
5	V _{IO}	Connects to target chip supply voltage VDD for transceiver I/O voltage level adjustment.
6	CANL	Connects to CAN1 pin1 and JP11 pin1.
7	CANH	Connects to CAN1 pin2 and JP11 pin2.
8	S	Connects to target chip PC.15 for operating mode control.

Table 3-14 U10 Pin Connection

3.6 External Reference Voltage Connector

Table 3-16 presents the external reference voltage connector.

Connector	Description
VREF1	Connector for user to connect to the external reference voltage pin of the target chip. User needs to remove the L5 ferrite bead.

Table 3-15 External Reference Voltage Connector

3.7 Ammeter Connector

Table 3-16 presents the ammeter connector.

Connector	Description
AMMETER	Connector for user to measure the target chip power consumption easily. User needs to remove the R16 resistor.

Table 3-16 Ammeter Connector

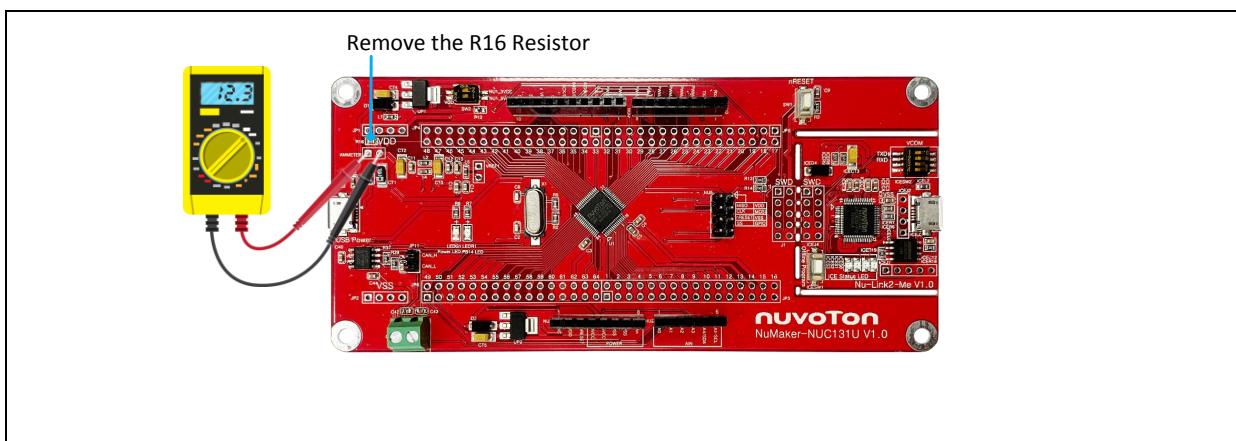


Figure 3-8 Wiring between Ammeter Connector and Ammeter

3.8 Push Buttons

Table 3-17 presents the push buttons.

Component	Description
ICESW1	Offline program button to start offline ICP programming the target chip
SW1	Reset button to reset the target chip

Table 3-17 Push-Buttons

3.9 LEDs

Table 3-18 presents the LEDs.

Component	Description
Power LED	The power LED indicates that the NuMaker-NUC131U is powered.
PB14 LED	The LED is connected to the target chip PB.14.
ICES0, ICES1, ICES2 and ICES3	Nu-Link2-Me status LED.

Table 3-18 LEDs

3.10 Nu-Link2-Me

The Nu-Link2-Me is an attached on-board debugger and programmer. The Nu-Link2-Me supports on-chip debugging, online and offline ICP programming through SWD interface. The Nu-Link2-Me also supports virtual COM port (VCOM) for printing debug messages on PC. Besides, the programming status could be shown on the built-in LEDs. Lastly, the Nu-Link2-Me could be detached from the development board and becoming a stand-alone mass production programmer. For more information about Nu-Link2-Me, please refer to Nu-Link2-Pro Debugger and Programmer User Manual.

3.10.1 VCOM Switches

Table 3-19 presents how to set the VCOM function by ICESW2.

ICESW2		
Pin	Function	Description
1	TXD	On: Connect target chip PB.1 (UART0_TXD) to Nu-Link2-Me. Off: Disconnect target chip PB.1 (UART0_TXD) to Nu-Link2-Me.
2	RXD	On: Connect target chip PB.0 (UART0_RXD) to Nu-Link2-Me. Off: Disconnect target chip PB.0 (UART0_RXD) to Nu-Link2-Me.
Note: Pin 3 and 4 is unused.		

Table 3-19 Nu-Link2-Me VCOM Switches

3.10.2 Status LEDs

Table 3-18 presents the status LEDs patterns for different operation on Nu-Link2-Me.

Operation Status	Status LED			
	ICES0	ICES1	ICES2	ICES3
Power on	Flash x 3	Flash x 3	Flash x 3	Flash x 3
Connected to IDE/NuTool	Flash x 3	Flash x 3	Flash x 3	On
ICE online (Not connected to a target chip)	On	-	Flash x 3	Flash x 3
ICE online (Connected to a target chip)	On	-	-	On
ICE online (Failed to connect to a target chip)	On	Any	Flash	On
During Offline Programming	-	On	-	Flash
Offline Programming Completed	On	-	-	-
Offline Programming Completed (Auto mode)	On	On	-	-
Offline Programming Failed	On	Flash	-	-

Table 3-20 Operation Status LED Patterns

4 QUICK START

4.1 Toolchains Supporting

Install the preferred toolchain. Please make sure at least one of the toolchains has been installed.

- [KEIL MDK Nuvoton edition M0/M23](#)
- [IAR EWARM](#)
- [NuEclipse GCC \(for Windows\)](#)
- [NuEclipse GCC \(for Linux\)](#)

4.2 Nuvoton Nu-Link Driver Installation

Download and install the latest Nuvoton Nu-Link Driver.

- Download and install [Nu-Link Keil Driver](#) when using Keil MDK.
- Download and install [Nu-Link IAR Driver](#) when using IAR EWARM.
- Skip this step when using NuEclipse.

Please install the Nu-Link USB Driver as well at the end of the installation. The installation is presented in Figure 4-1 and Figure 4-2.

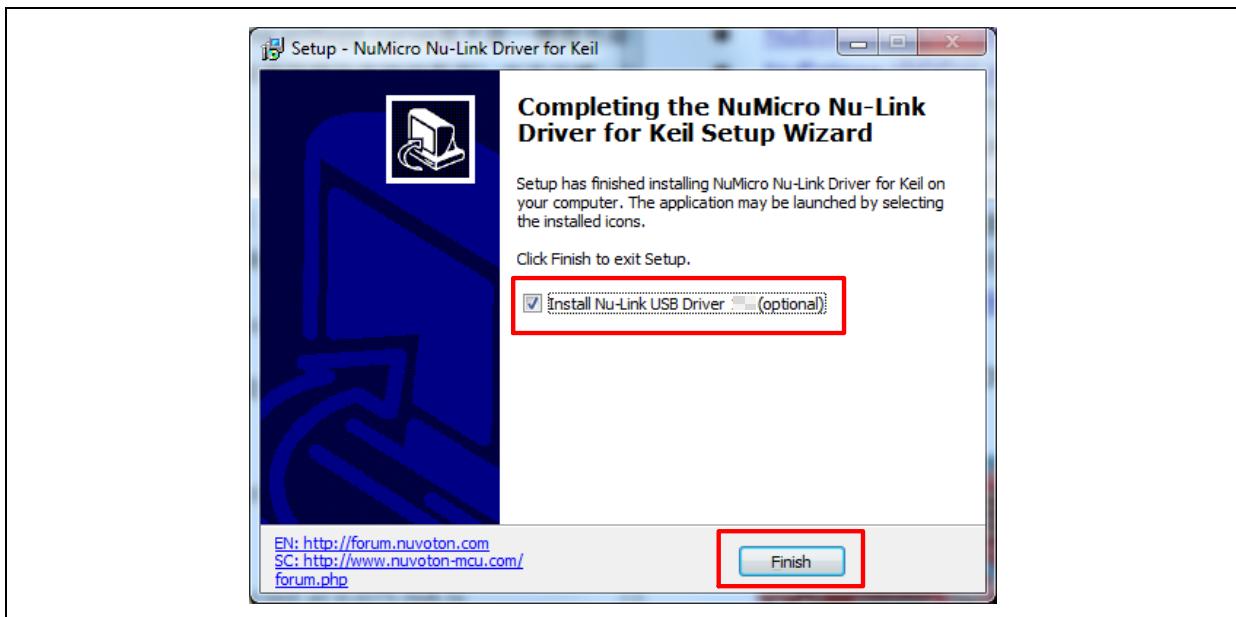


Figure 4-1 Nu-Link USB Driver Installation Setup



Figure 4-2 Nu-Link USB Driver Installation

4.3 BSP Firmware Download

Download and unzip the [Board Support Package \(BSP\)](#).

4.4 Hardware Setup

1. Open the virtual COM (VCOM) function by changing Nu-Link2-Me VCOM Switch No. 1 and 2 to ON.

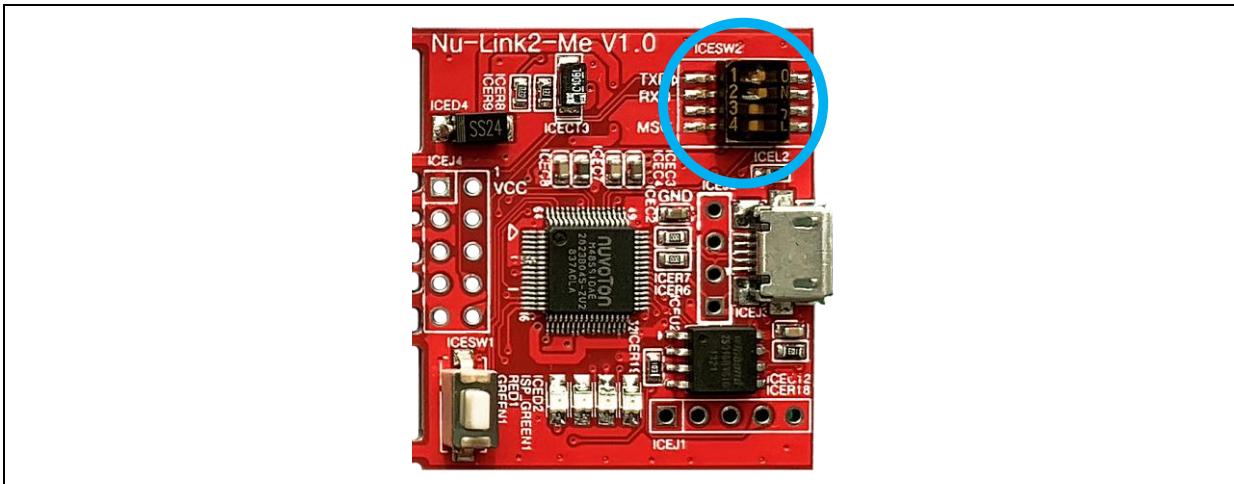


Figure 4-3 Open VCOM Function

2. Connect the ICE USB connector shown in Figure 4-4 to the PC USB port through USB cable.

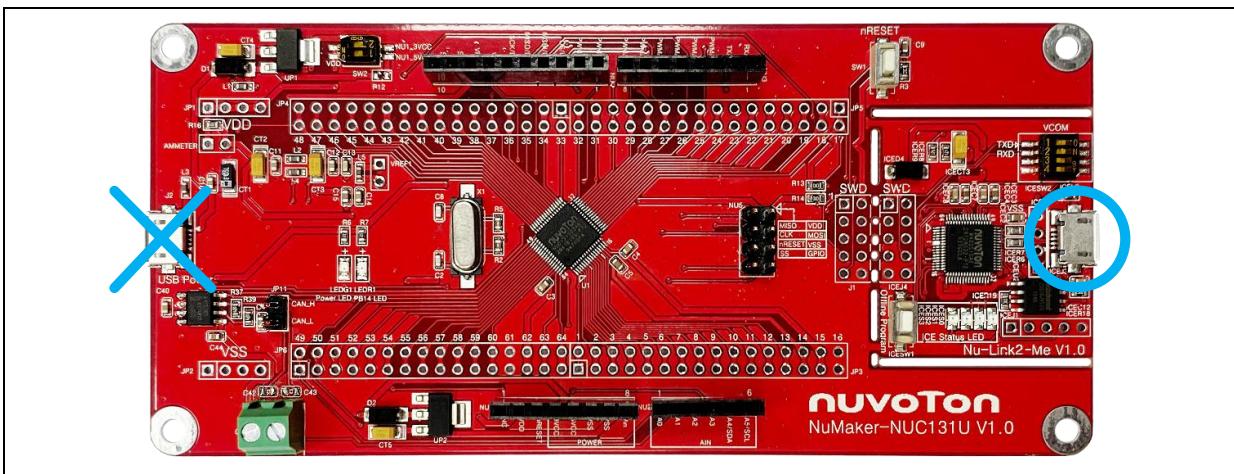


Figure 4-4 ICE USB Connector

3. Find the “Nuvoton Virtual COM Port” on the Device Manger as Figure 4-5.

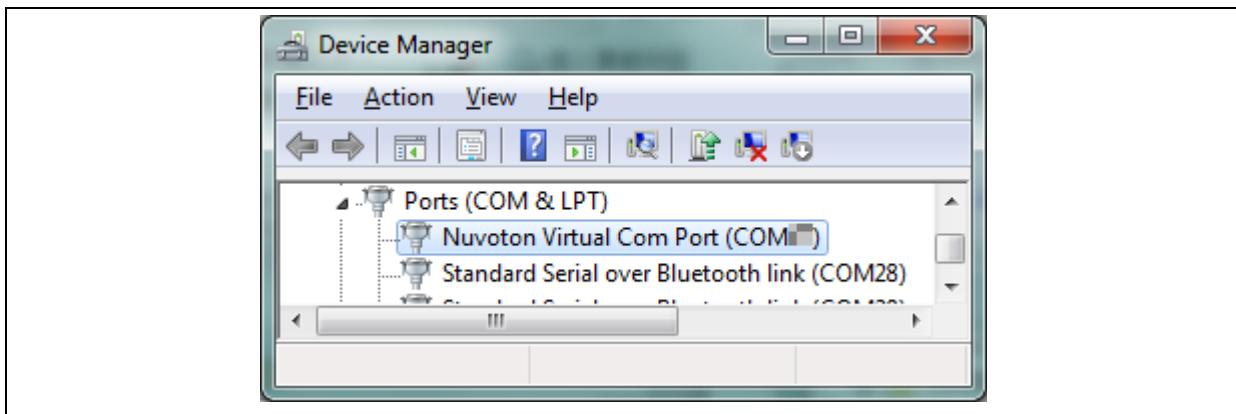


Figure 4-5 Device Manger

4. Open a serial port terminal, PuTTY for example, to print out debug message. Set the speed to 115200. Figure 4-6 presents the PuTTY session setting.

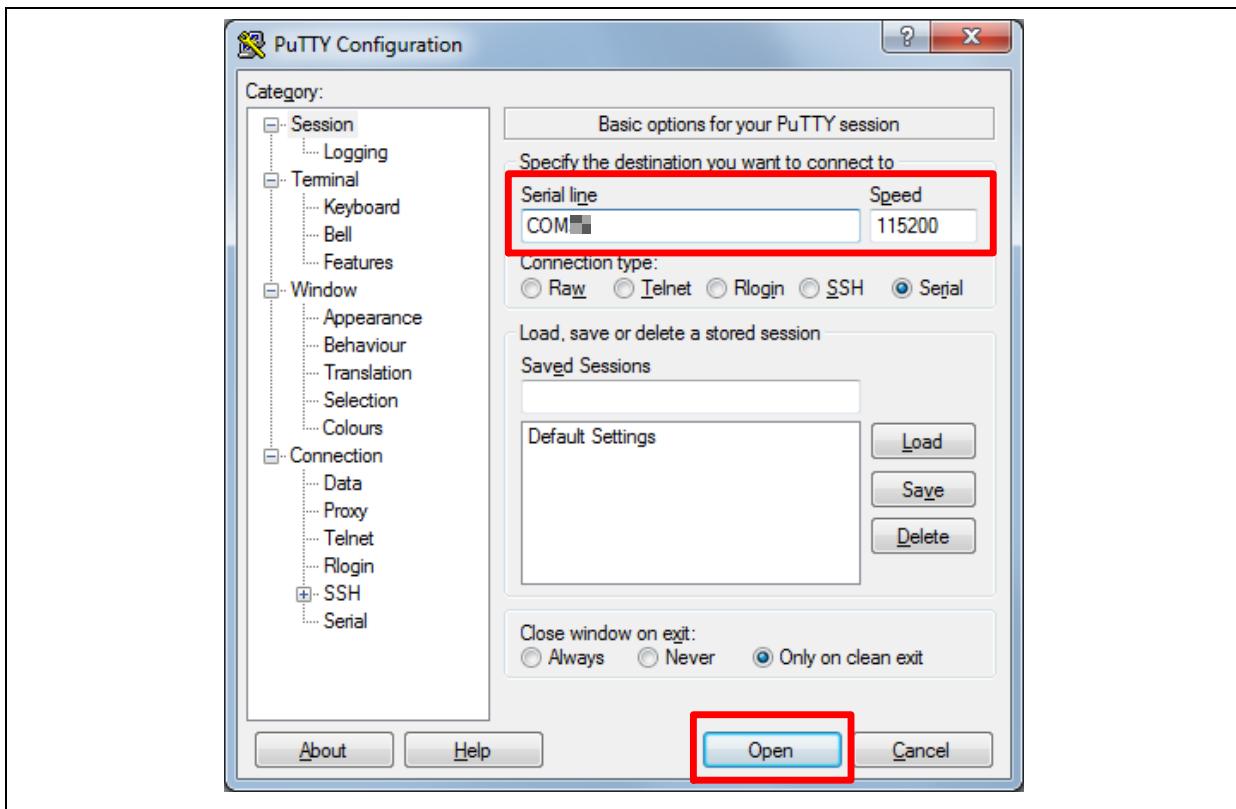


Figure 4-6 PuTTY Session Setting

4.5 Find the Example Project

Use the “Template” project as an example. The project can be found under the BSP folder as shown in Figure 4-7.



Figure 4-7 Template Project Folder Path

4.6 Execute the Project under Toolchains

Open and execute the project under the toolchain. The section 4.6.1, 4.6.2, and 4.6.3 describe the steps of executing project in Keil MDK, IAR EWARM and NuEclipse, respectively.

4.6.1 Keil MDK

This section provides steps to beginners on how to run a project by using Keil MDK.

1. Double click the “Template.uvproj” to open the project.

Note: If Figure 4-8 warning message jumps out, please migrate to version 5 formats as shown in Figure 4-9. The “.uvproj” filename extension will change to “.uvprojx”.

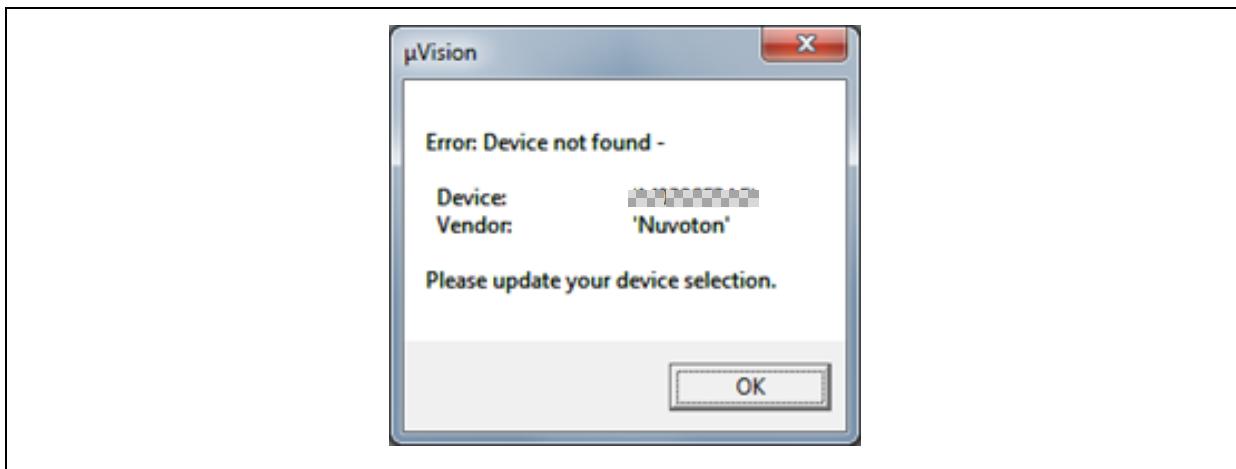


Figure 4-8 Warning Message of “Device not found”

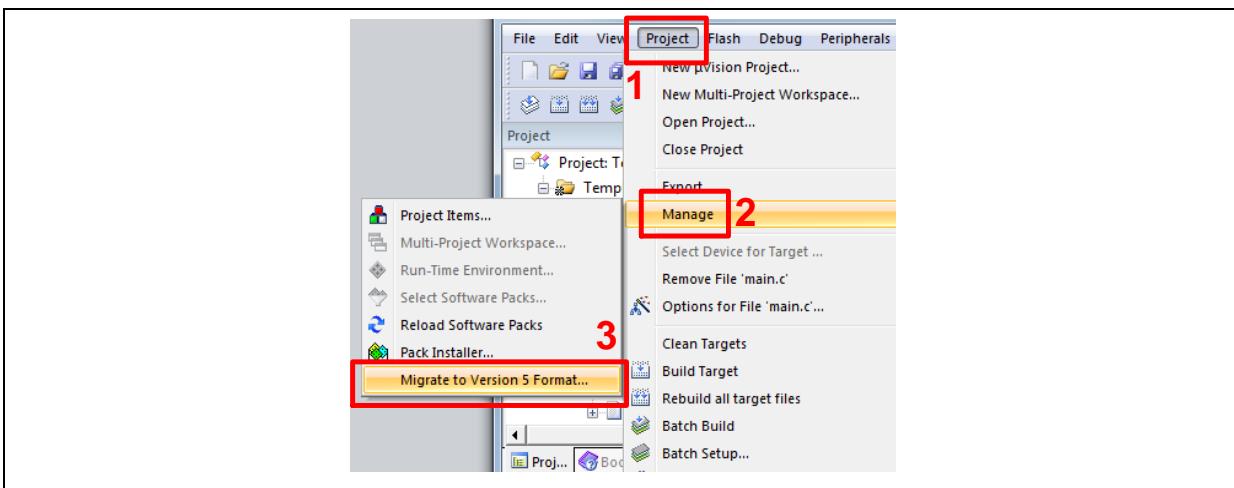


Figure 4-9 Project File Migrate to Version 5 Format

2. Make sure the debugger is “Nuvoton Nu-Link Debugger” as shown in Figure 4-10 and Figure 4-11.

Note: If the dropdown menu in Figure 4-10 does not contain “Nuvoton Nu-Link Debugger” item, please rework section 4.2.

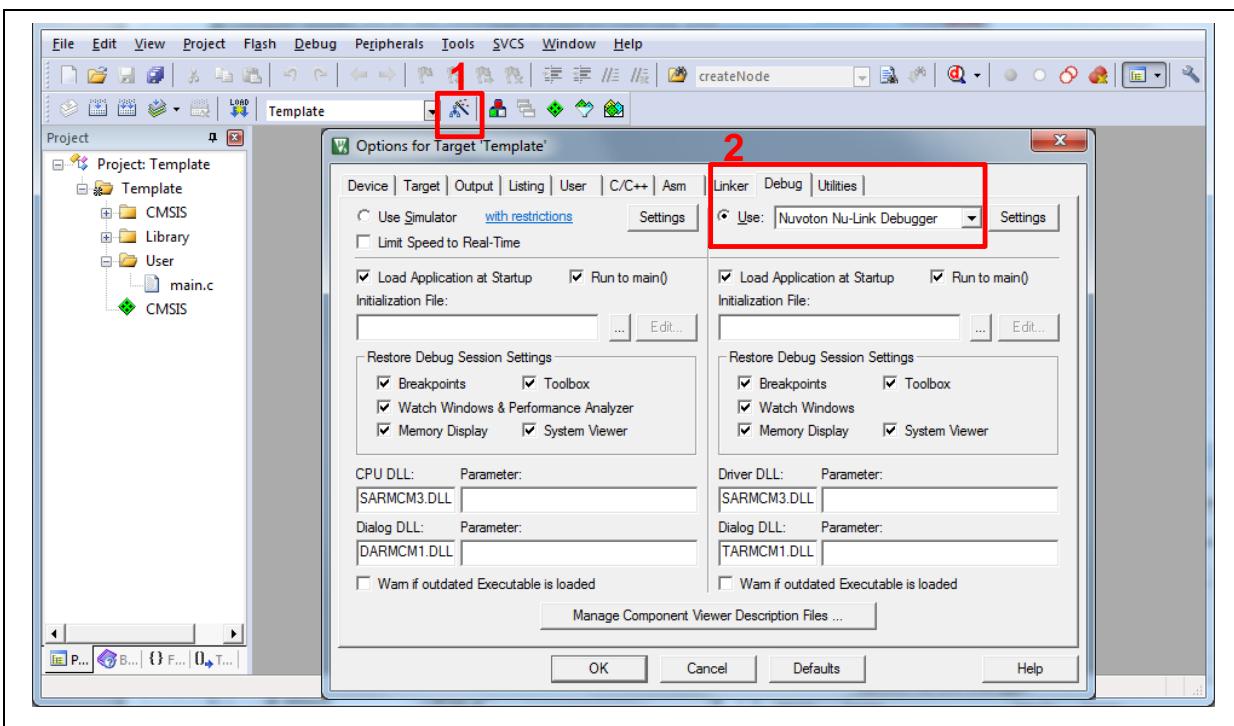


Figure 4-10 Debugger Setting in Options Window

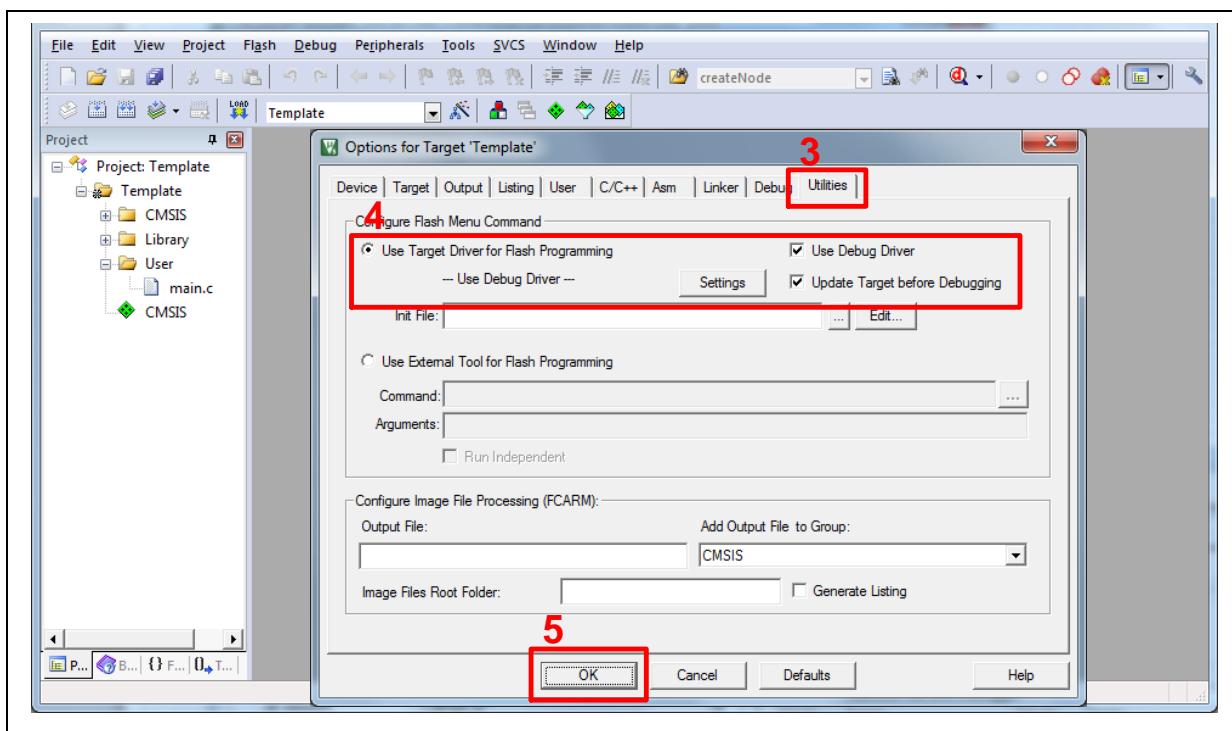


Figure 4-11 Programming Setting in Options Window

3. Rebuild all target files. After successfully compile the project, download code to the flash memory. Click “Start/Stop Debug Section” button can enter debug mode.

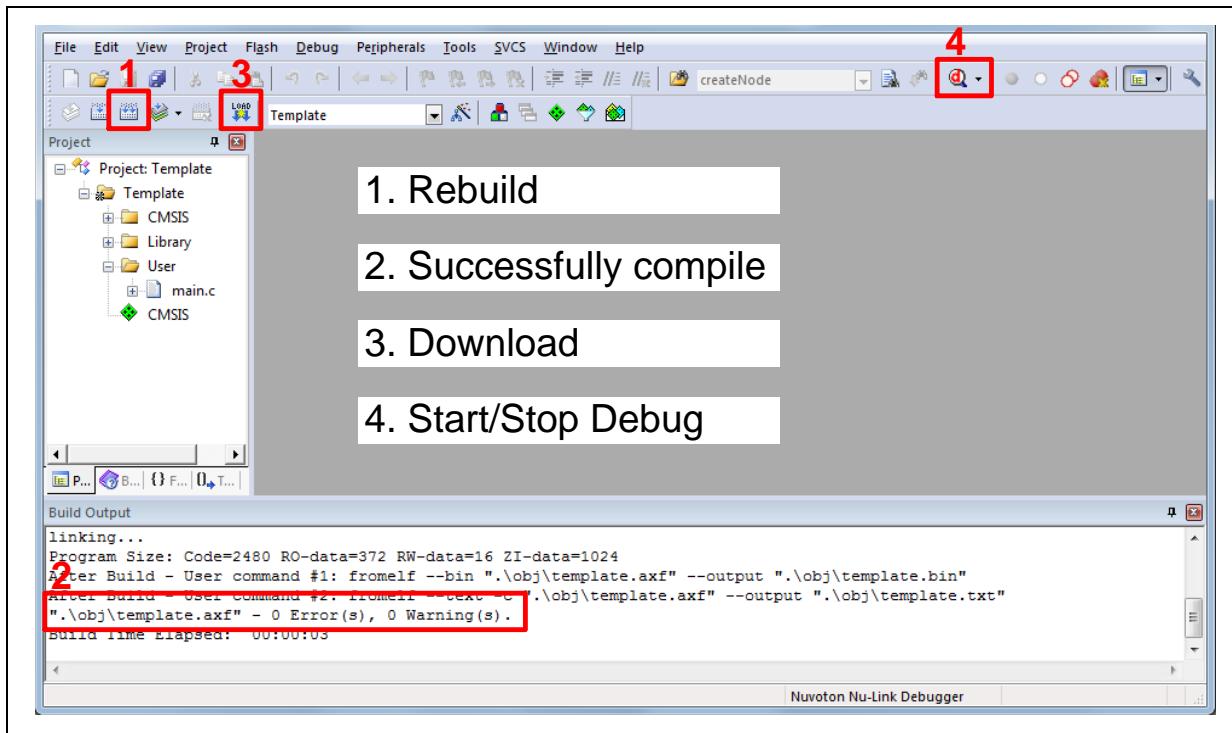


Figure 4-12 Compile and Download the Project

4. Figure 4-13 shows the debug mode under Keil MDK. Click “Run” and the debug message will be printed out as shown in Figure 4-14. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

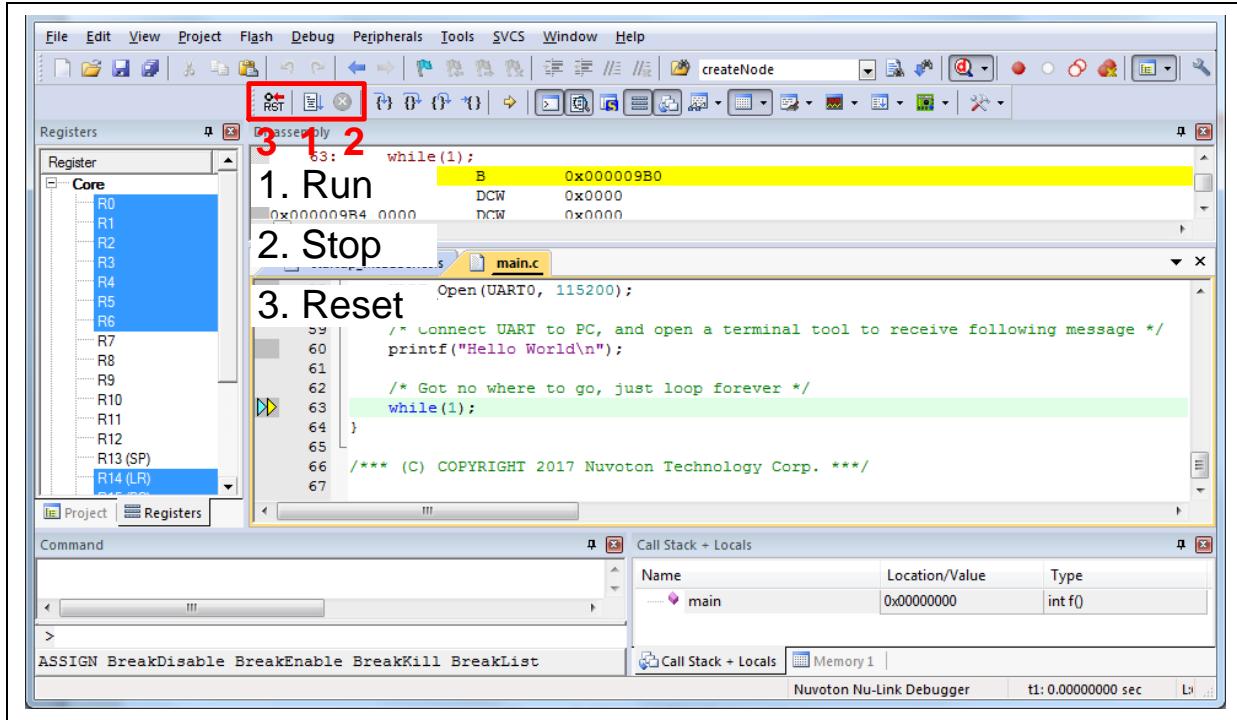


Figure 4-13 Keil MDK Debug Mode



Figure 4-14 Debug Message on Serial Port Terminal Windows

4.6.2 IAR EWARM

This section provides steps to beginners on how to run a project by using IAR EWARM.

1. Double click the “Template.eww” to open the project.
2. Make sure the toolbar contain “Nu-Link” item as shown in Figure 4-15.

Note: If the toolbar does not contain “Nu-Link” item, please rework section 4.2.

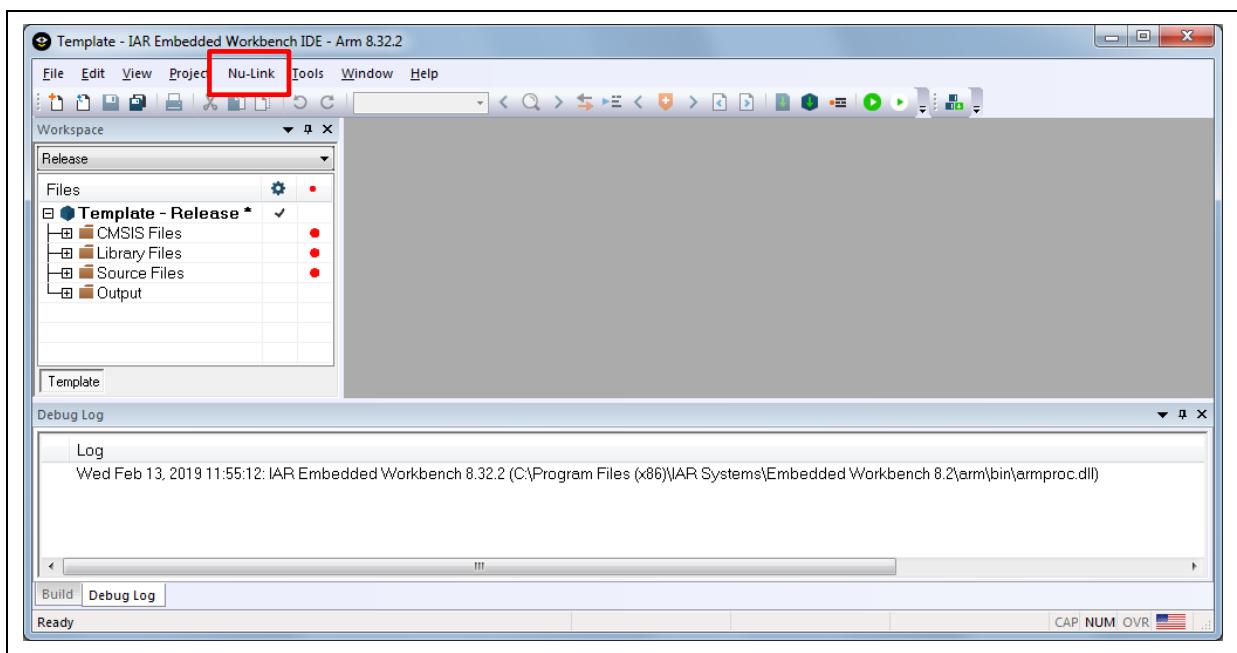


Figure 4-15 IAR EWARM Window

3. Make target file as presented in Figure 4-16. After successfully compile the project, download code to the flash memory and enter debug mode.

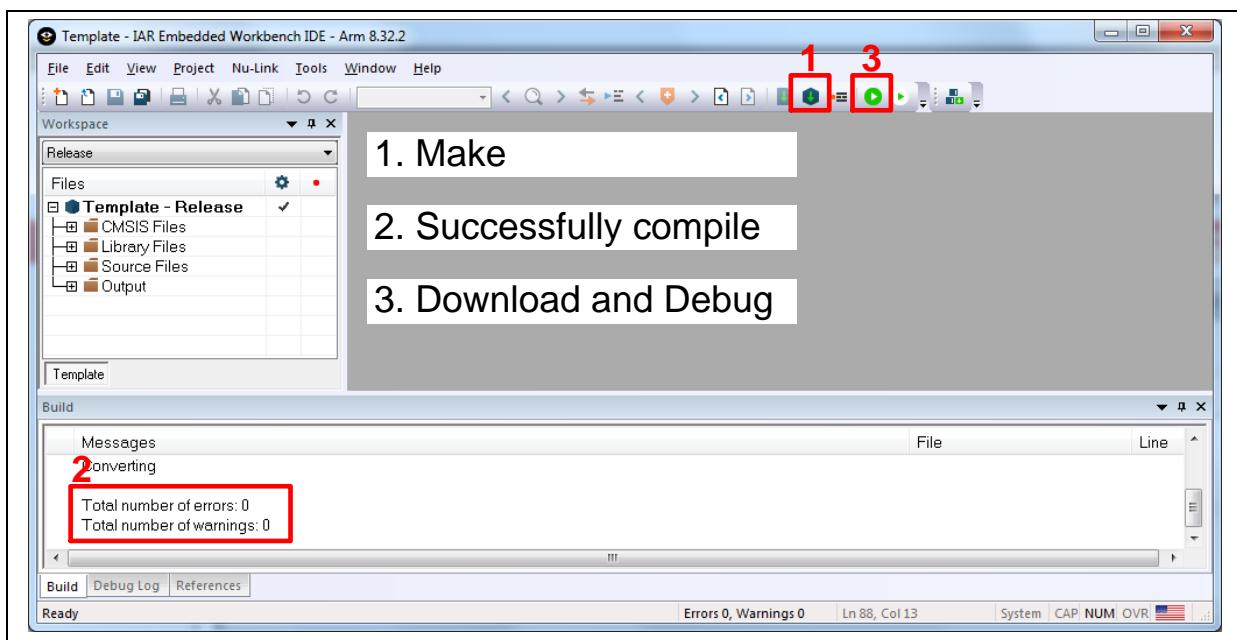


Figure 4-16 Compile and Download the Project

4. Figure 4-17 shows the debug mode under IAR EWARN. Click “Go” and the debug message will be printed out as shown in Figure 4-18. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc.

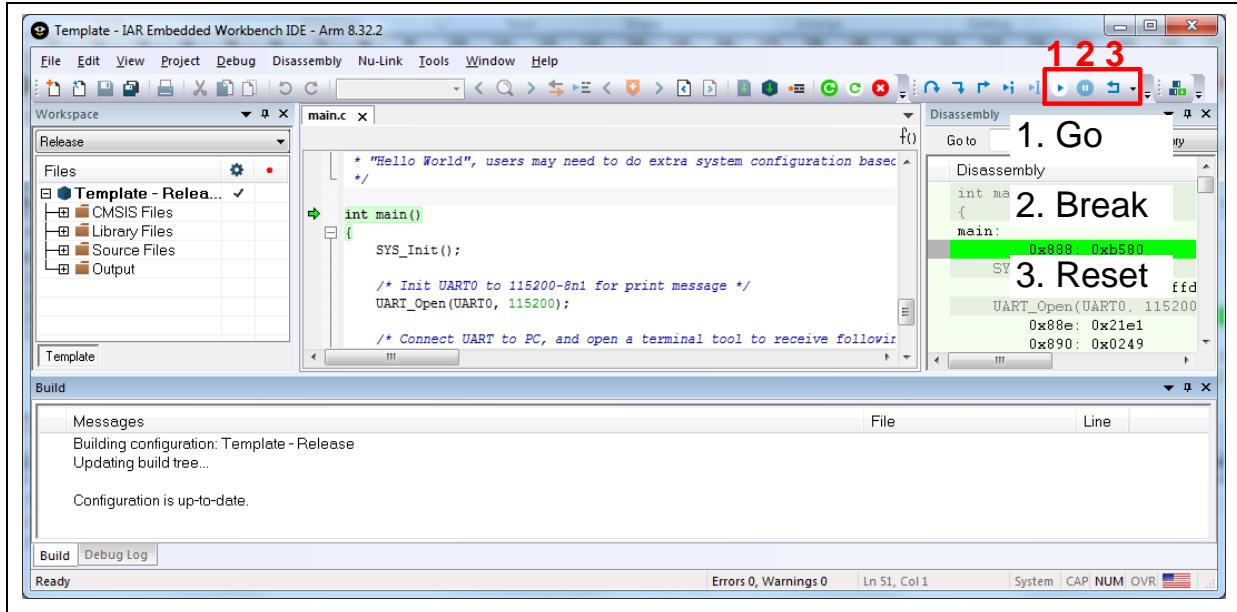


Figure 4-17 IAR EWARM Debug Mode



Figure 4-18 Debug Message on Serial Port Terminal Windows

4.6.3 NuEclipse

This section provides steps to beginners on how to run a project by using NuEclipse. Please make sure the filenames and project folder path contain neither invalid character nor space.

1. Double-click NuEclipse.exe to open the toolchain.
2. Import the “Template” project by following the steps presented in Figure 4-19 and Figure 4-20.

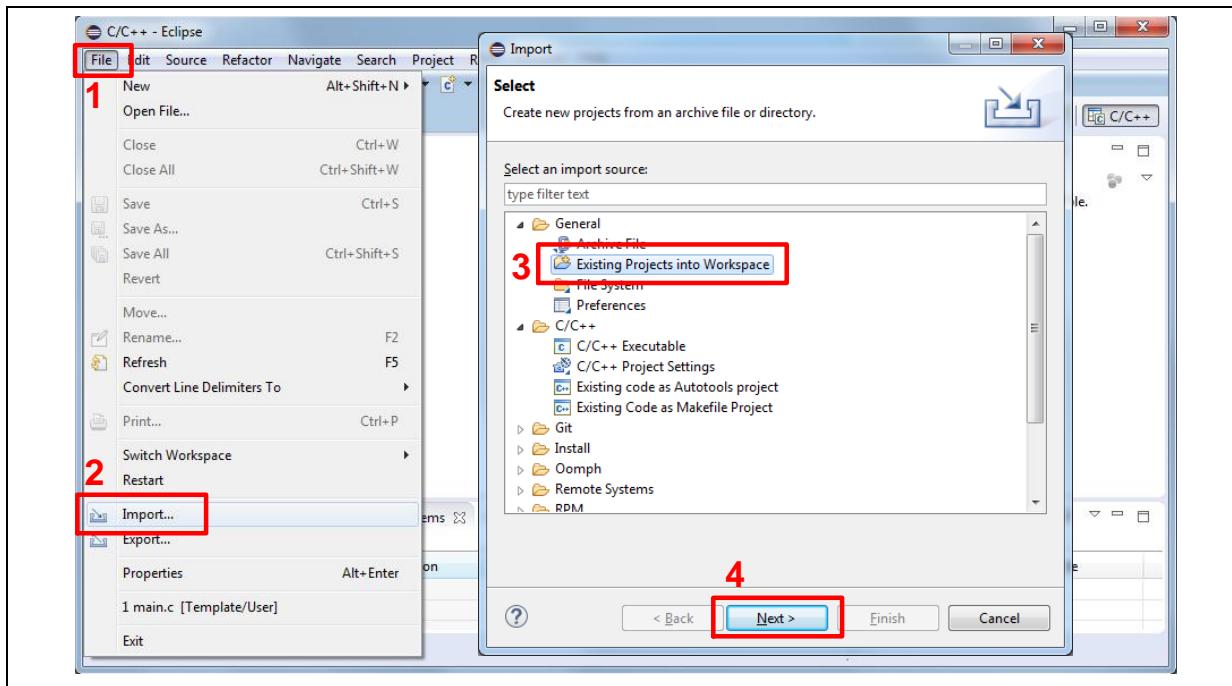


Figure 4-19 Import the Project in NuEclipse

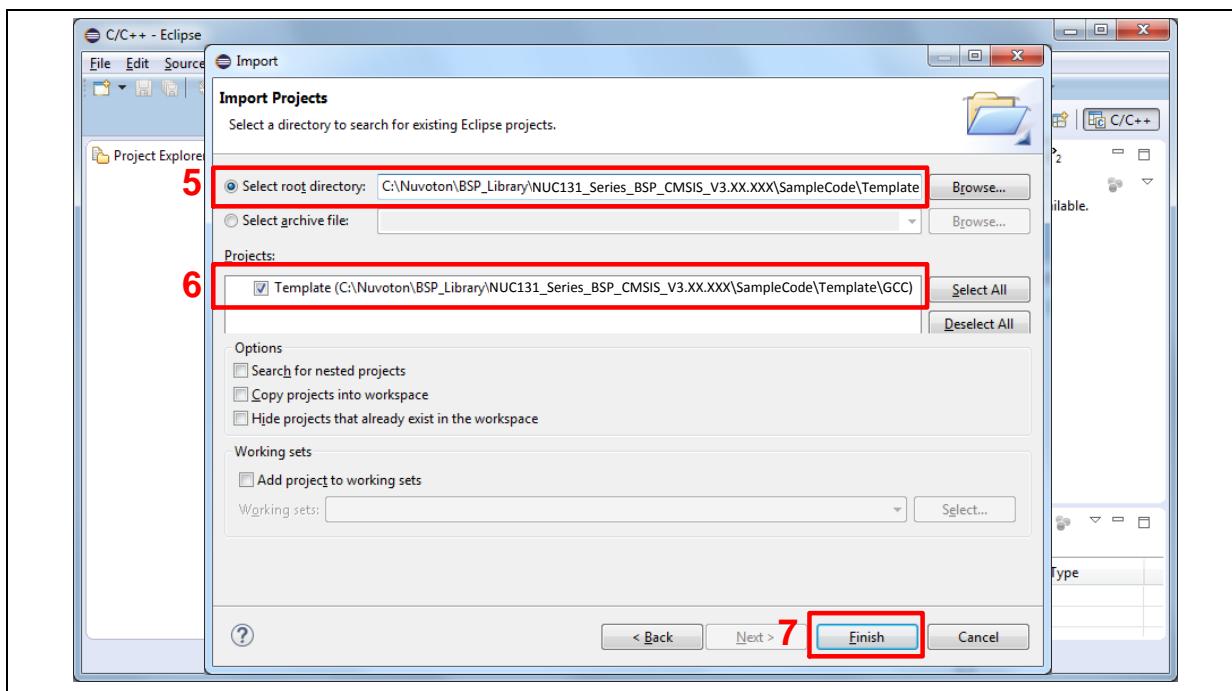


Figure 4-20 Import Projects Windows

3. Click the “Template” project and find the project properties as shown in Figure 4-21. Make sure the settings are the same as settings in Figure 4-22.

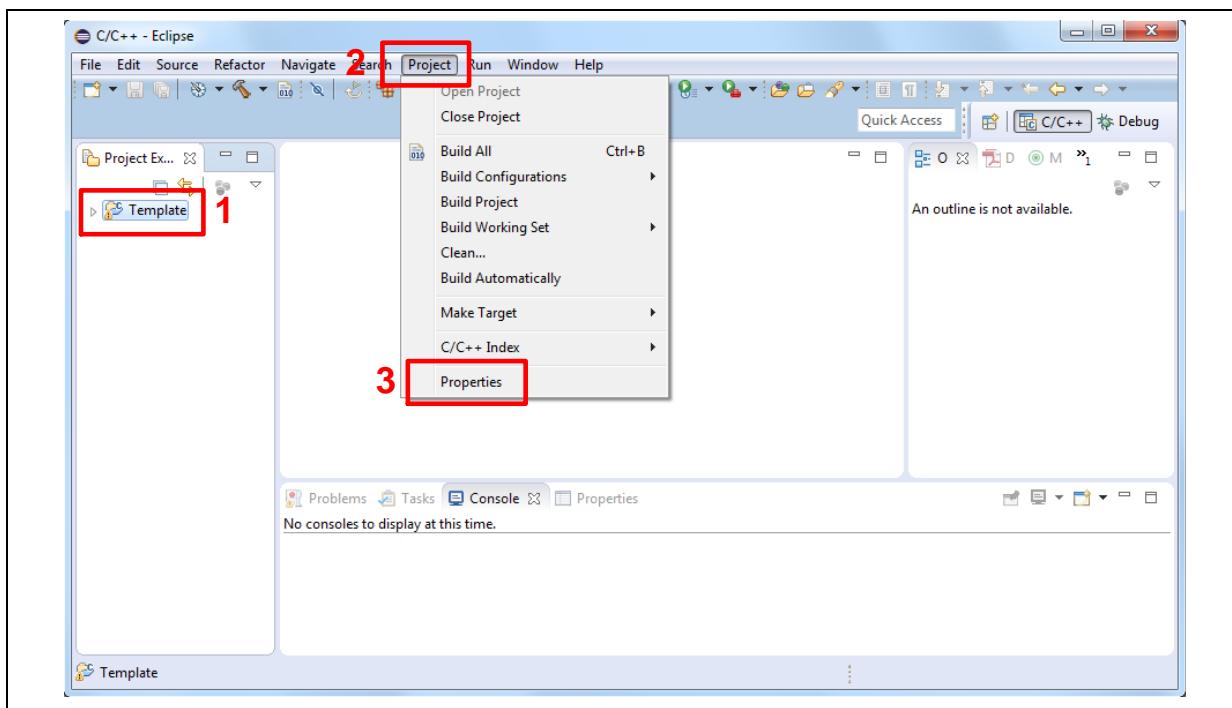


Figure 4-21 Open Project Properties Window

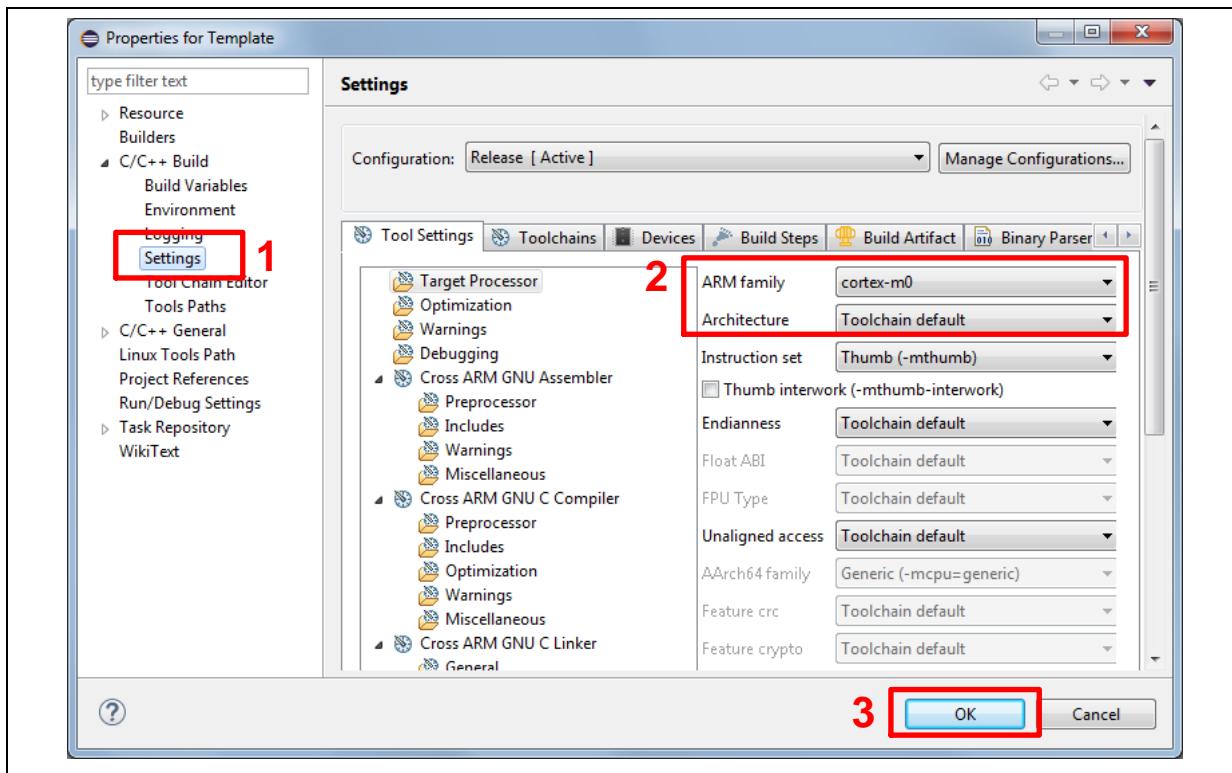


Figure 4-22 Project Properties Settings

4. Click the “Template” project and build the project.

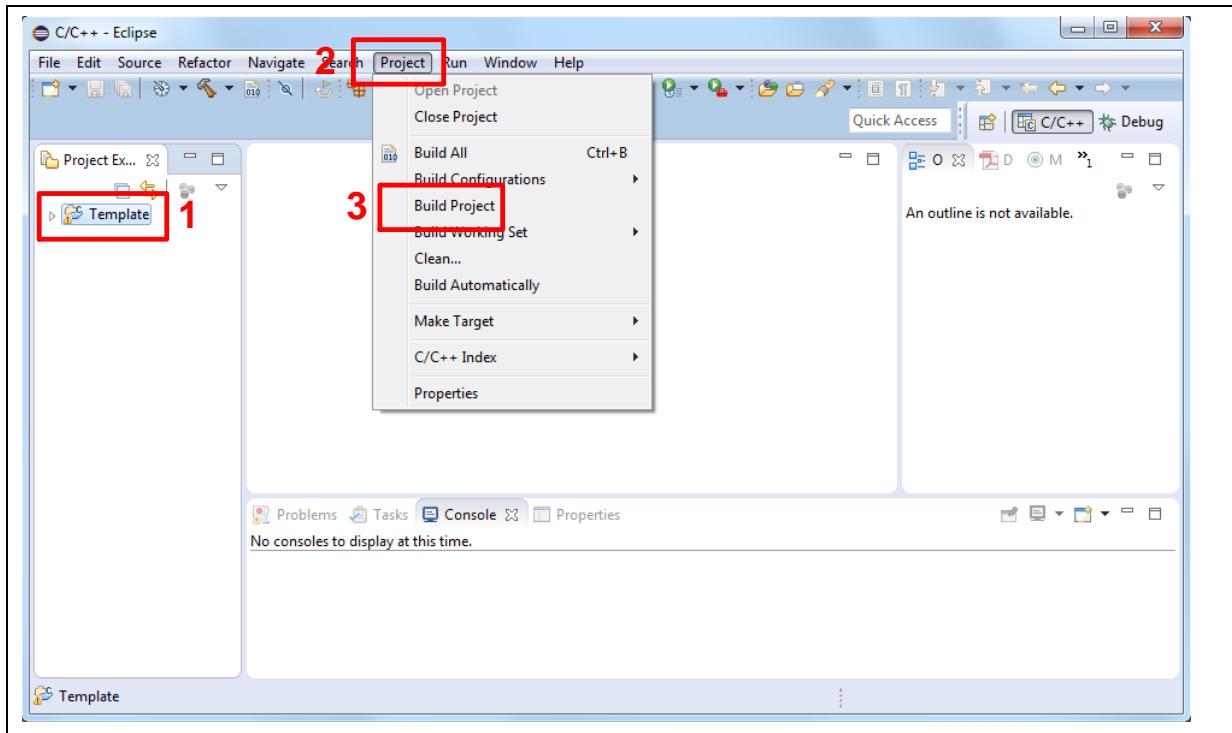


Figure 4-23 Build Project

5. After the project is built, click the “Template” project and set the “Debug Configuration” as shown in Figure 4-24. Follow the settings presented in Figure 4-25, Figure 4-26 and Figure 4-27 to enter debug mode.


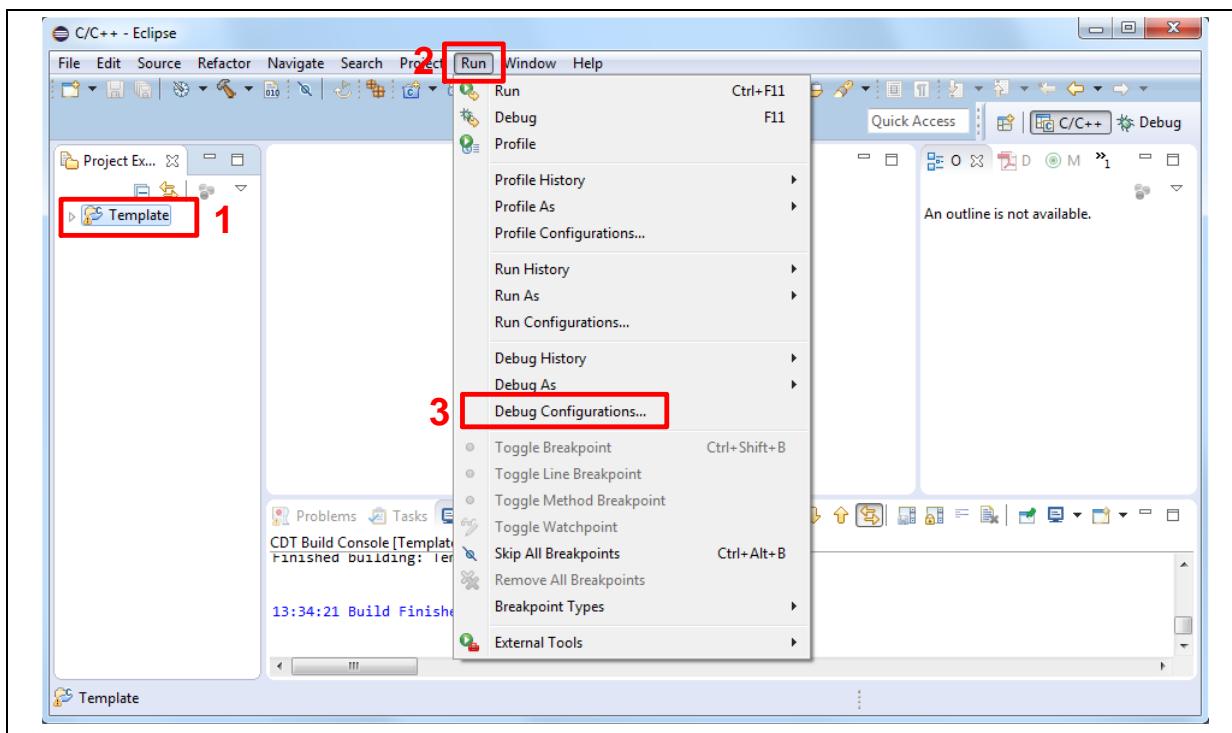


Figure 4-24 Open Debug Configuration

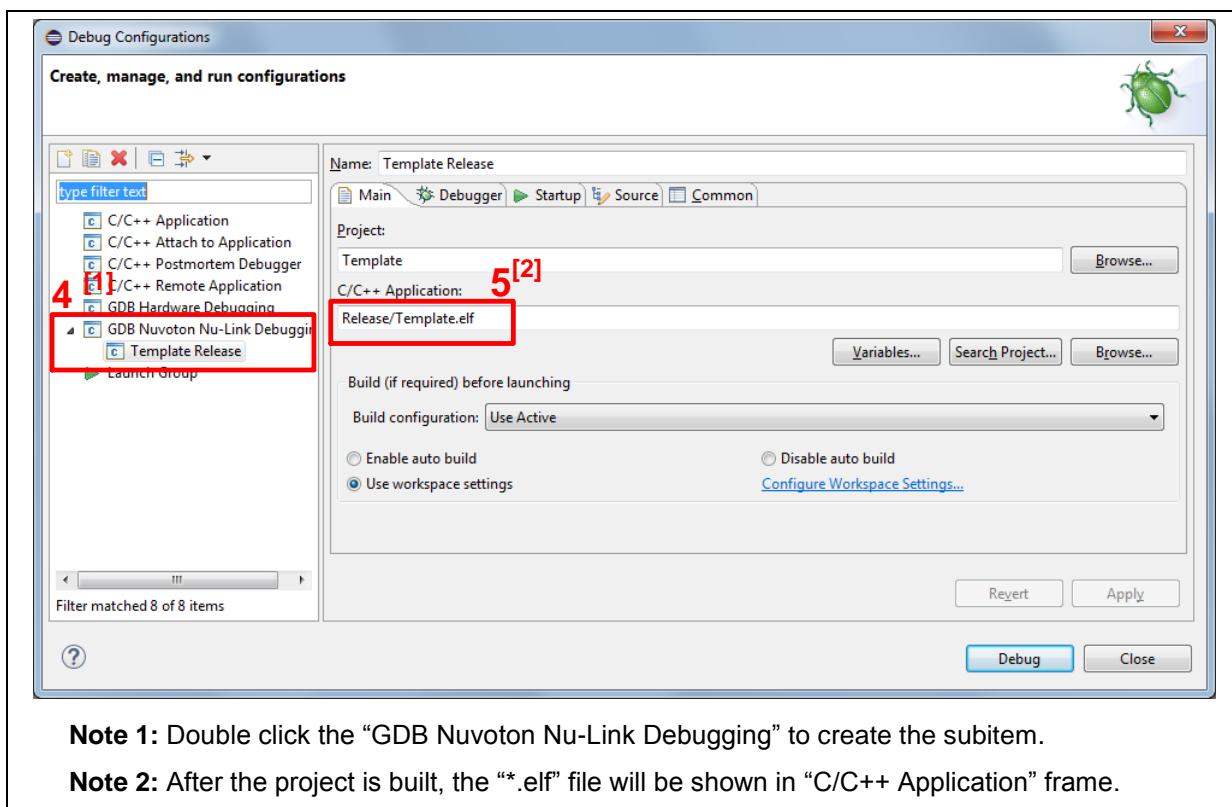

Note 1: Double click the “GDB Nuvoton Nu-Link Debugging” to create the subitem.

Note 2: After the project is built, the “*.elf” file will be shown in “C/C++ Application” frame.

Figure 4-25 Main Tab Configuration

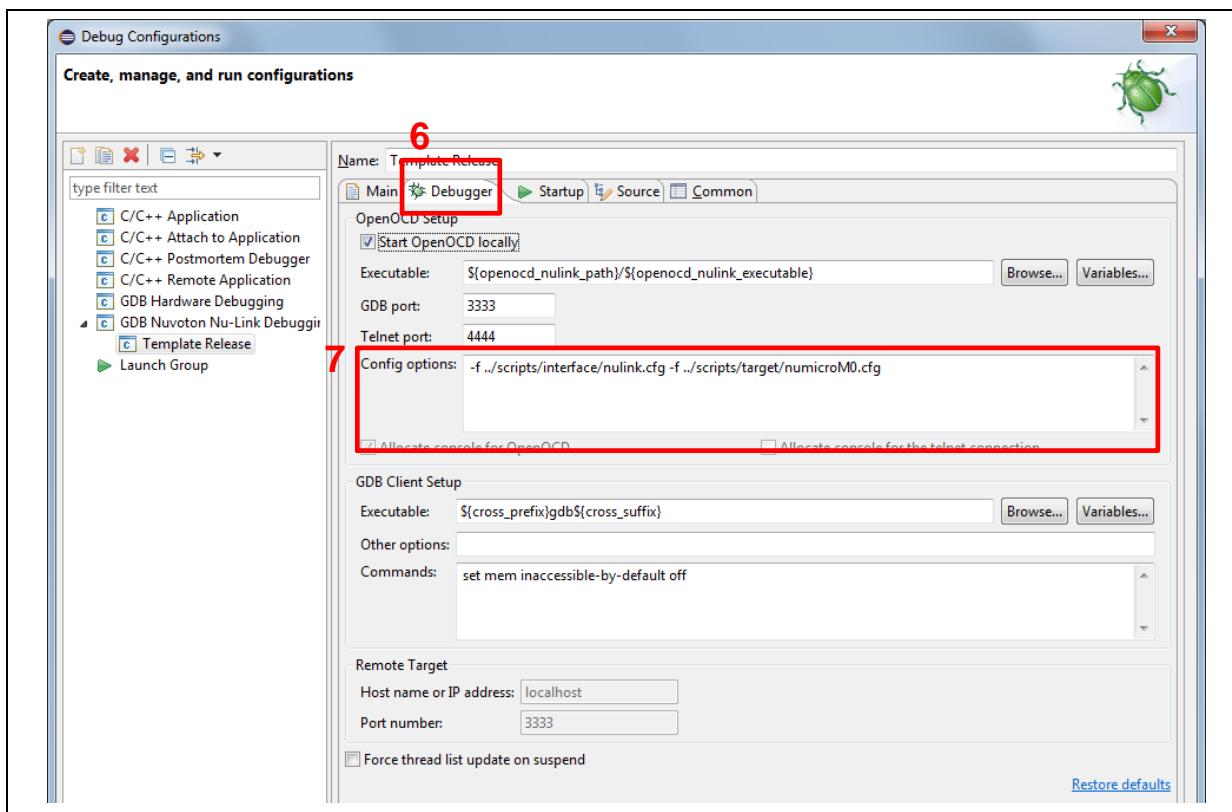


Figure 4-26 Debugger Tab Configuration

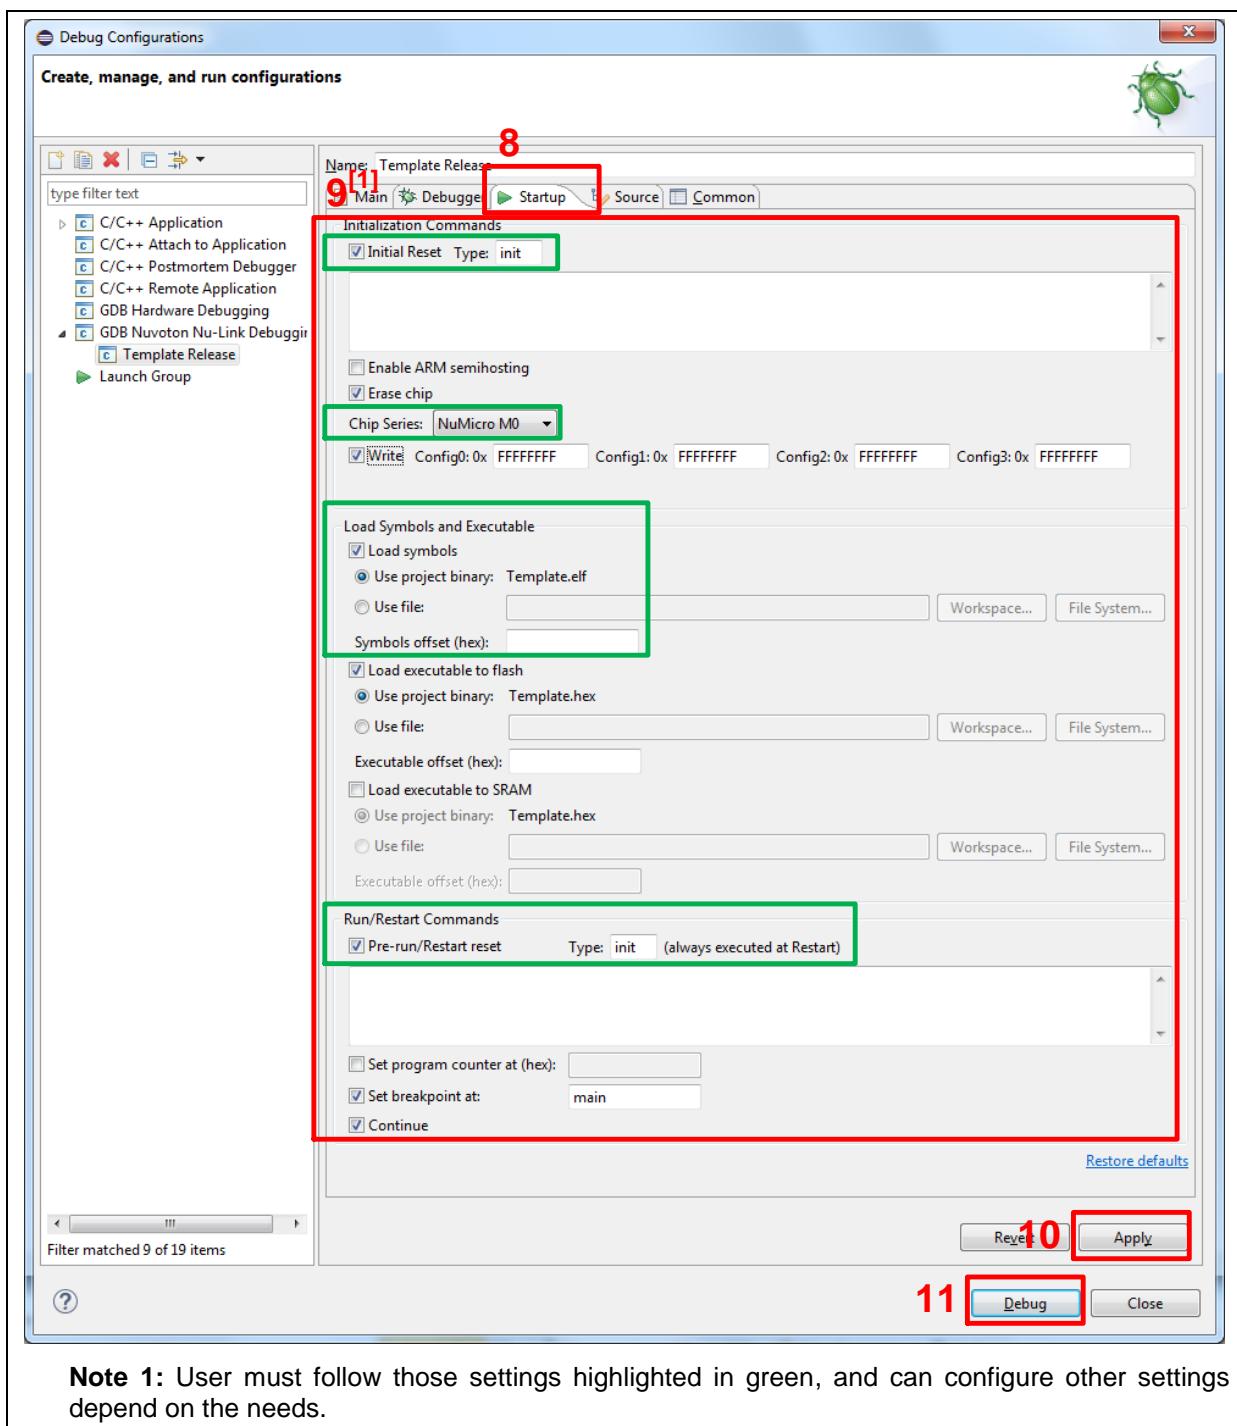


Figure 4-27 Startup Tab Configuration

6. Figure 4-28 shows the debug mode under NuEclipse. Click “Resume” and the debug message will be printed out as shown in Figure 4-29. User can debug the project under debug mode by checking source code, assembly language, peripherals’ registers, and setting breakpoint, step run, value monitor, etc. For more information about how to use NuEclipse, please refer to the NuEclipse User Manual.

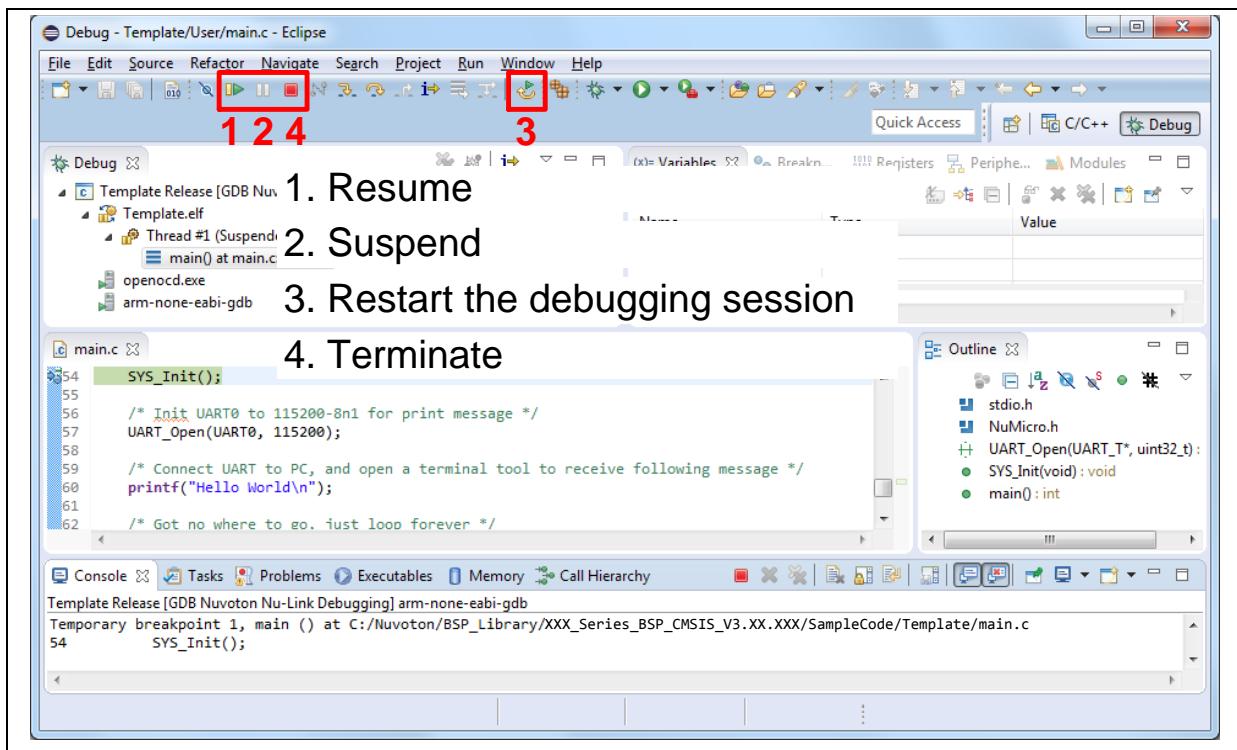


Figure 4-28 NuEclipse Debug Mode



Figure 4-29 Debug Message on Serial Port Terminal Windows

5 NUMAKER-NUC131U SCHEMATICS

5.1 Nu-Link2-Me

Figure 5-1 shows the Nu-Link2-Me circuit.

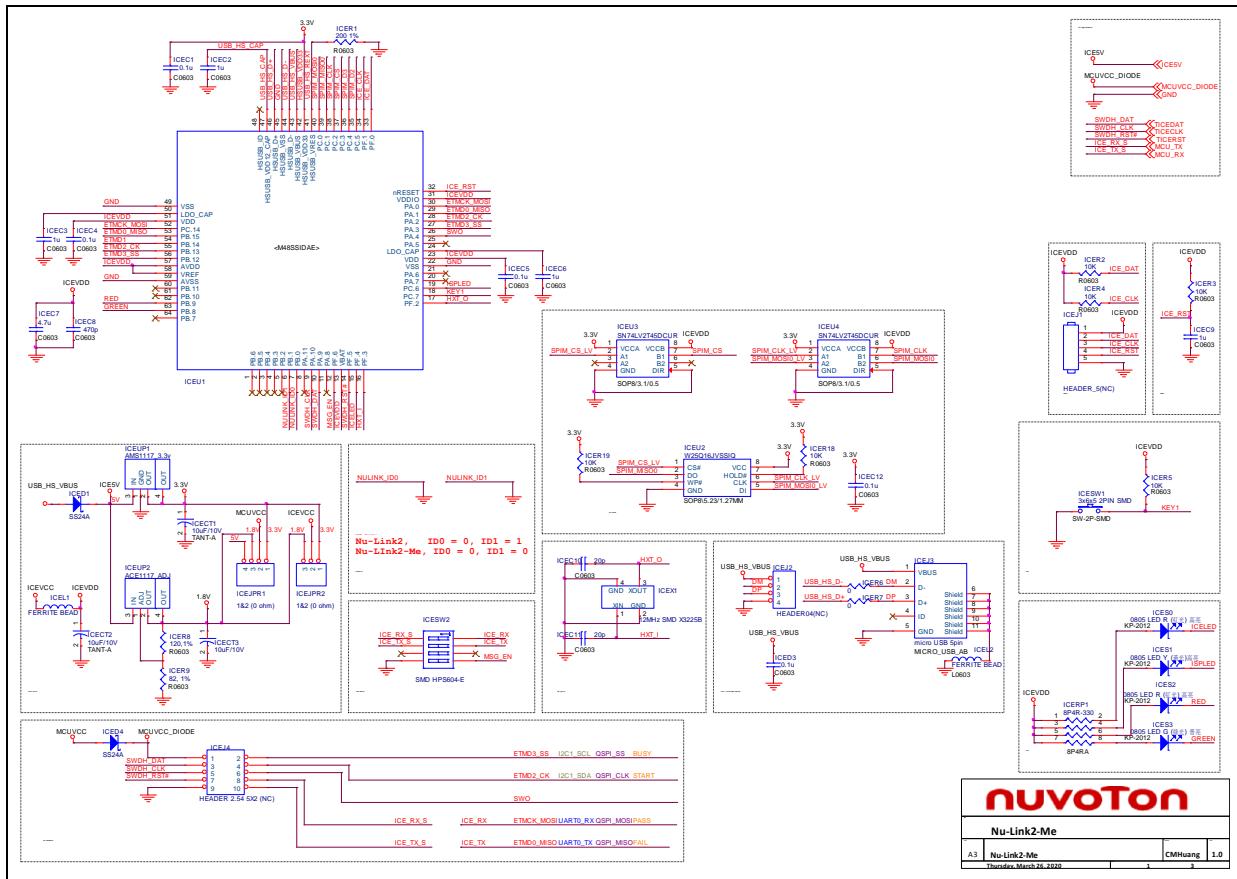


Figure 5-1 Nu-Link2-Me Circuit

5.2 NUC131U platform

Figure 5-2 shows the NUC131U platform circuit.

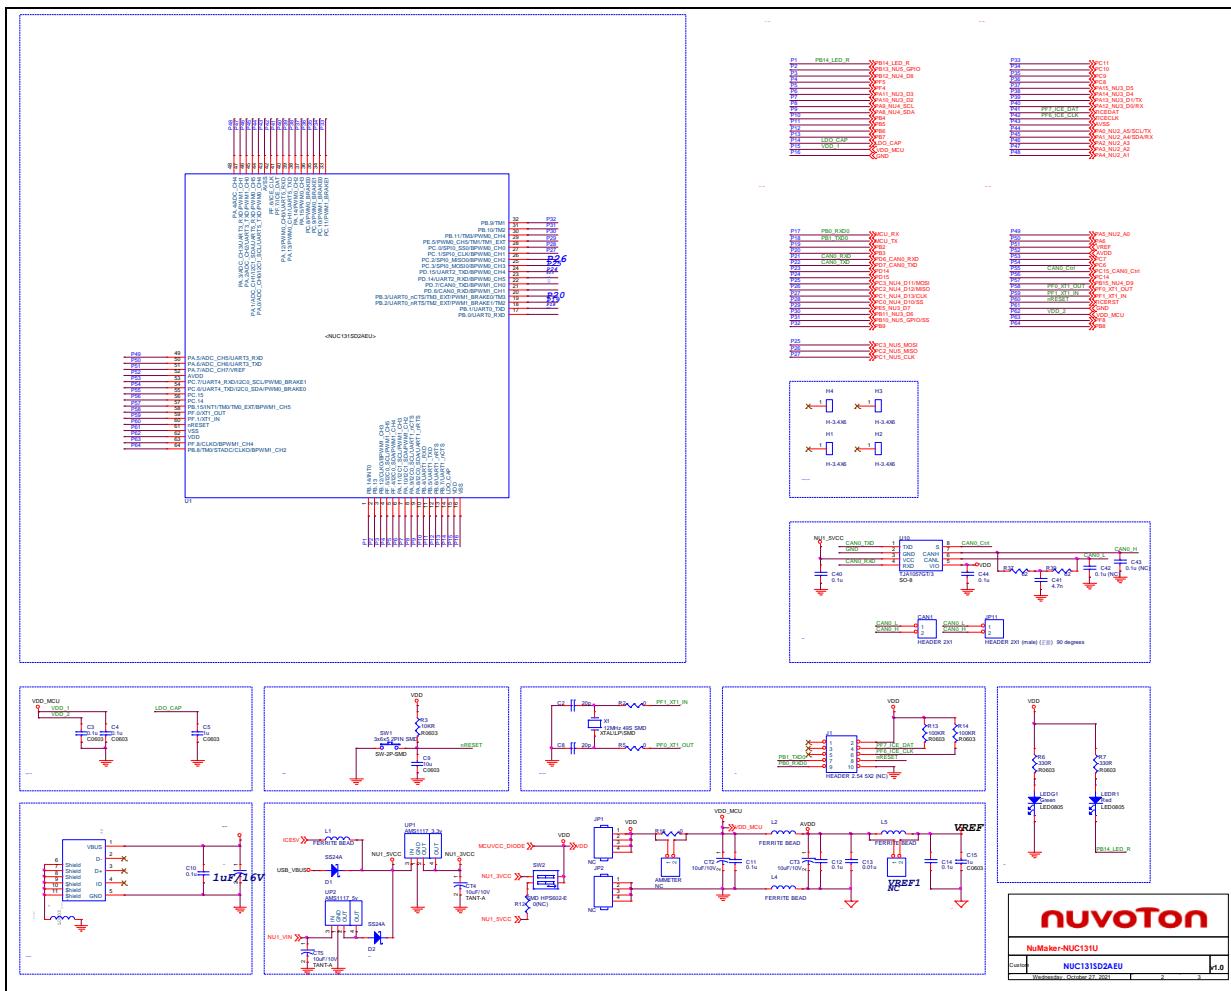


Figure 5-2 NUC131U platform Circuit

5.3 Extension Connector

Figure 5-3 shows extension connectors of NuMaker-NUC131U.

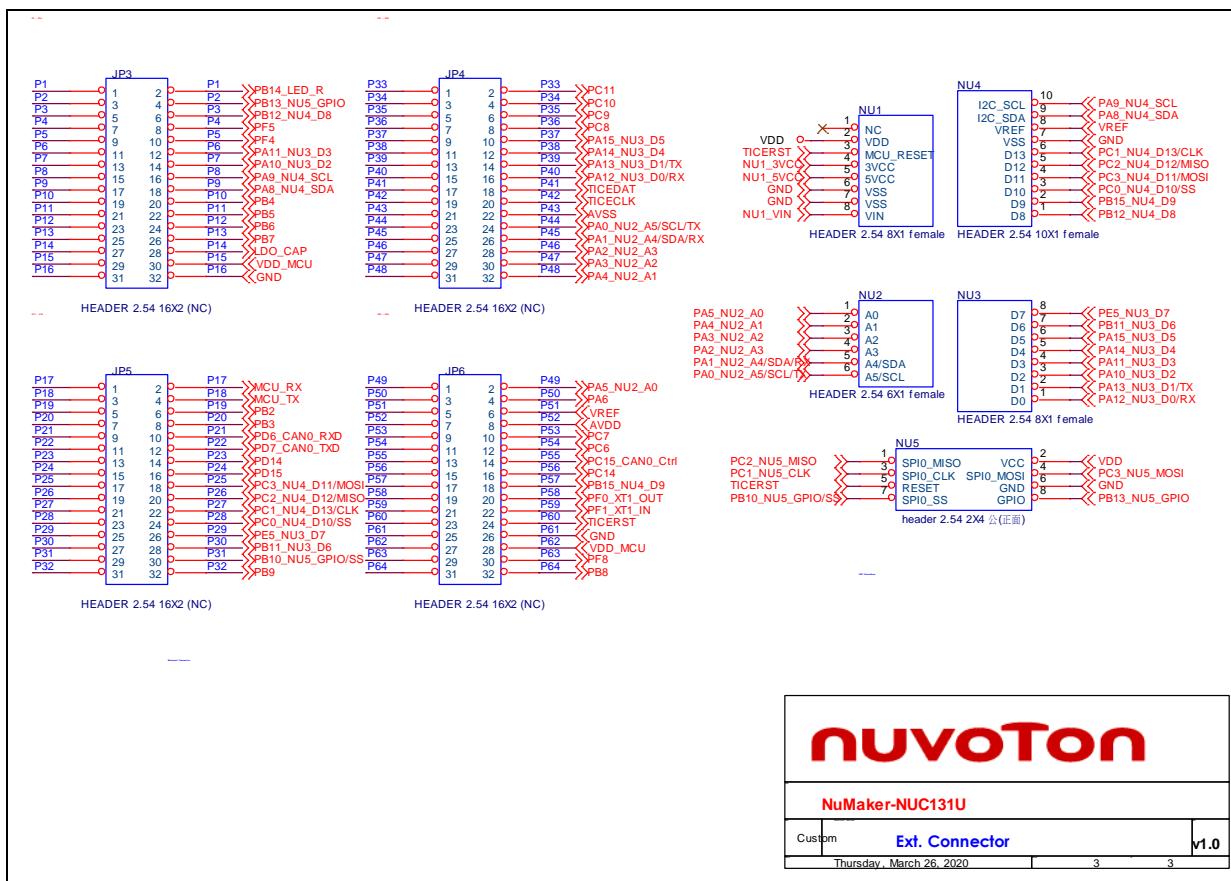


Figure 5-3 Extension Connectors Circuit

5.4 PCB Placement

Figure 5-4 and Figure 5-5 show the front and rear placement of NuMaker-NUC131U.

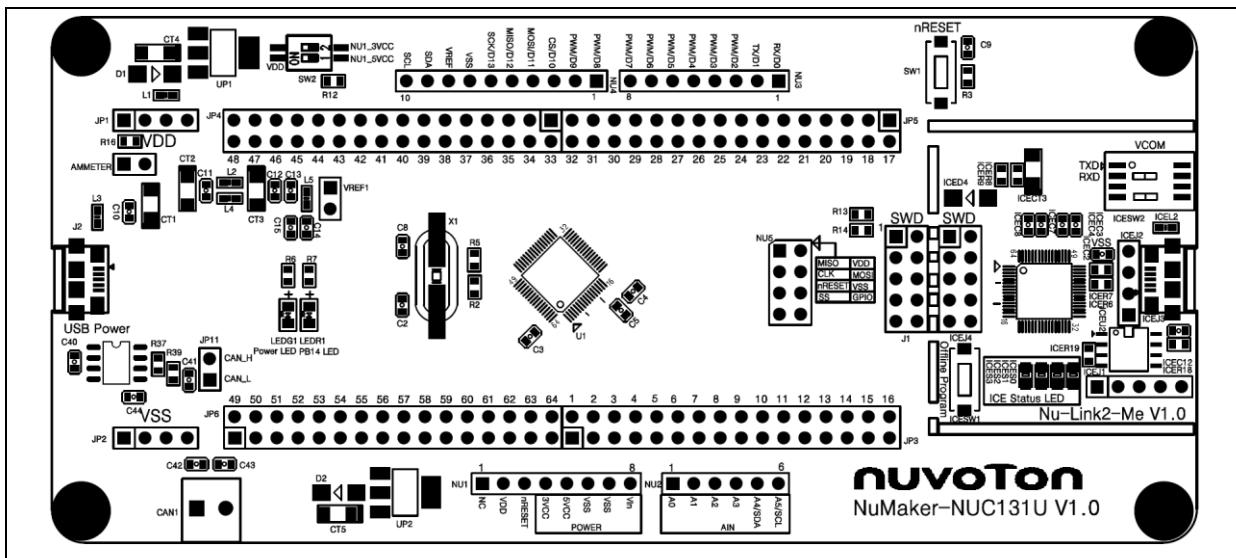


Figure 5-4 Front Placement

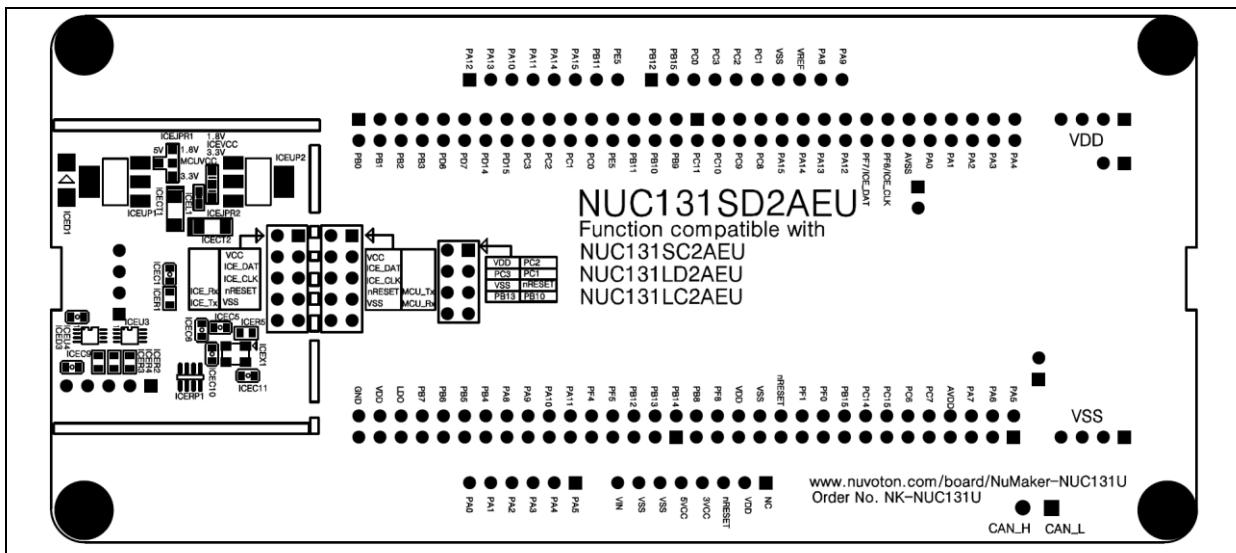


Figure 5-5 Rear Placement

6 REVISION HISTORY

Date	Revision	Description
2020.05.07	1.00	1. Initial version
2020.10.27	1.01	1. Fixed the X1 HXT crystal value to 12 MHz in section 5.2.

Important Notice

Nuvoton Products are neither intended nor warranted for usage in systems or equipment, any malfunction or failure of which may cause loss of human life, bodily injury or severe property damage. Such applications are deemed, "Insecure Usage".

Insecure usage includes, but is not limited to: equipment for surgical implementation, atomic energy control instruments, airplane or spaceship instruments, the control or operation of dynamic, brake or safety systems designed for vehicular use, traffic signal instruments, all types of safety devices, and other applications intended to support or sustain life.

All Insecure Usage shall be made at customer's risk, and in the event that third parties lay claims to Nuvoton as a result of customer's Insecure Usage, customer shall indemnify the damages and liabilities thus incurred by Nuvoton.

Please note that all data and specifications are subject to change without notice.
All the trademarks of products and companies mentioned in this datasheet belong to their respective owners.